

# GP1200



**104905**



**104902**

**ENGLISH**  
**Translation**  
**of the original instruction manual**

**Table of contents**

<b>1. Safety</b> .....	<b>18</b>
1.1 Safety instructions .....	18
1.2 Key to symbols .....	20
1.3 Hazard sources .....	20
1.4 Proper use .....	22
<b>2. General information</b> .....	<b>23</b>
2.1 Liability and Warrantees .....	23
2.2 Copyright protection .....	23
2.3 Declaration of conformity .....	23
<b>3. Transport, packaging and storage</b> .....	<b>24</b>
3.1 Delivery check .....	24
3.2 Packaging.....	24
3.3 Storage.....	24
<b>4. Technical data</b> .....	<b>25</b>
4.1 Overview of parts .....	25
4.2 Technical specification .....	27
<b>5. Installation and operation</b> .....	<b>28</b>
5.1 Installation .....	28
5.2 Operation.....	29
<b>6. Cleaning</b> .....	<b>31</b>
<b>7. Waste disposal</b> .....	<b>32</b>

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120



**Read this instruction manual before using and keep them available at all times!**

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

## 1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

### 1.1 Safety instructions

- This device may only be operated in technically proper and safe condition.
- The device can be used by children **8 years and up**, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers.
- **Children** should not play with the device.
- Cleaning and **maintenance cannot be performed by children** younger than 8 years old and must be done under supervision.
- **Children under the age of 8 years old** must be kept away from the device and its power cord.

- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device.  
**Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.
- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- The device is not adapted for use with an external timer or remote control.
- **Never** leave the device unattended when in use.
- Only use the device indoors.

## 1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



**WARNING!**

*This symbol highlights hazards which could lead to injury.*



**WARNING!**

*This symbol highlights dangerous situations which could lead to injury or death.*



**HOT SURFACE!**

*This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!*



**CAUTION!**

*This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.*



**NOTE!**

*This symbol highlights recommendations and information aimed for effective and trouble-free device operation.*

## 1.3 Hazard sources



**DANGER!**

**Electric shock hazard!**

To avoid the hazard results please follow the safety instructions below.

- Do not use the machine in case of incorrect operation, damages or dropping on the floor.

- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable. Always use the device handles.
- In any case do not open the device housing. In case of electrical or mechanical modifications the electric shock hazard will occur.
- Never immerse the plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- Never operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
  - when the device is not used,
  - in case of anomalies during operation,
  - before cleaning.



### **DANGER!**

#### **Suffocation hazard!**

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements.



### **HOT SURFACE!**

#### **Burn hazard!**

To avoid the hazard results please follow the safety instructions below.

- The housing of the device and the grill surface become very hot during the operation. Do not touch them with bare hands. Use appropriate kitchen utensils for placing and removing food.
- The grill surface remains hot for some time after turning off, so before cleaning or moving the device wait until it cools down.



### **WARNING!**

#### **Fire or explosion hazard!**

To avoid the hazard results please follow the safety instructions below.

- To avoid the fire hazard and the damages of the device **never** place the kitchen utensils, towels, paper, etc. on the grill surface.

- **Never** use the device near flammable materials, such as alcohol, spirits, or petrol. High temperature may cause their evaporation and due to contact with the ignition sources the deflagration may occur, and in result the injuries and damages.
- In case of fire before the fire extinguishing activities remove the plug from the socket or disconnect the device from the power supply (pull the plug!).  
**Caution:** Do not spray the device with water when it is still connected to the power supply: **Electric shock hazard!**

## 1.4 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

**The device is not designed for continuous operation in the industrial applications.**

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in similar business areas;
- in agricultural farms;
- by guests of hotels, motels and other typical places of accomodation;
- in Bed and Breakfast facilities.

**Ceramic grill plate** is designed only for **grilling meat, fish, and vegetables** directly on the grill surface.



### **CAUTION!**

**Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.**

**Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.**

**The operator is liable for all damages resulting from inappropriate use.**

## 2. General information

### 2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



#### **CAUTION!**

**Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!**

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

### 2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



#### **NOTE!**

**The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.**

### 2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

## 3. Transport, packaging and storage

### 3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

### 3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



#### **NOTE!**

**If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.**

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

### 3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.


Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.  
If required refresh or renew.

## 4. Technical data


### 4.1 Overview of parts

104905

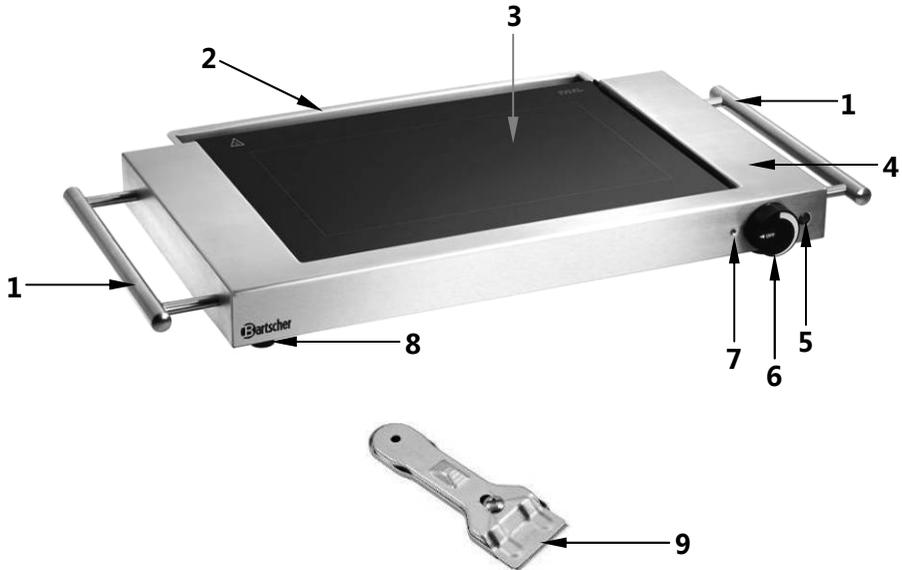

- 1 Handles
- 2 Drip tray
- 3 Ceramic plate, smooth
- 4 Housing
- 5 Heating indicator (red)
- 6 Temperature controller knob
- 7 Setting indicator (“OFF” position)
- 8 Feet
- 9 Ceramic scraper

104902

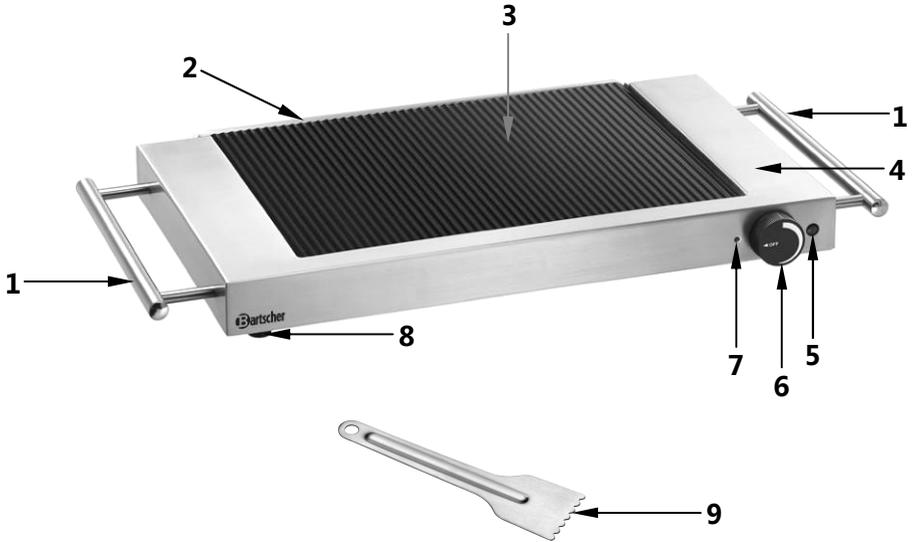

- 1 Handles
- 2 Drip tray
- 3 Ceramic plate, grooved
- 4 Housing
- 5 Heating indicator (red)
- 6 Temperature controller knob
- 7 Setting indicator (“OFF” position)
- 8 Feet
- 9 Ceramic scraper

## Auxiliary equipment (not included in the delivery!)



### Backsplash GP1200

- stainless steel
- dimensions: W 385 x D 330 x H 73 mm
- with shelf, W 300 x D 118 mm
- weight: 0.7 kg

**Code-no.: 104010**

## 4.2 Technical specification

Name	Ceramic grill plate GP1200	
Code-no.:	<b>104905</b>	<b>104902</b>
Material:	housing, handles: stainless steel	
Ceramic plate version:	smooth	grooved
	Schott Ceran glass	
Power supply:	1.2 kW / 220-240 V ~50 Hz	
Temperature control:	stepless with use of temperature controller knob	
Temperature range:	50 °C to max. 250 °C	
Dimensions:	W 630 x D 360 x H 68 mm	
Ceramic plate dimensions:	W 385 x D 285 mm	
Useful grill surface:	W 310 x D 190 mm	
Weight:	4.1 kg	4.4 kg
Equipment:	1 ceramic scraper for smooth surfaces	1 ceramic scraper for grooved surfaces

We reserve the right to make technical changes!

### Electronic overheating protection

Ceramic grill plates are equipped with electronic **overheating protection** which automatically turns the device off in case of excessive heating.

In such situation disconnect the device from the socket (pull the plug!) and wait for cooling down. Then it may be used again.

## 5. Installation and operation

### 5.1 Installation

#### Positioning

- Unpack the device and remove all packing material.



#### **CAUTION!**

- **Never** remove the rating plate and any warning signs from the device.
- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- The operating surface must be easily accessible and large enough. In order to assure comfortable operation and proper air circulation leave at least 10 cm of space on the sides and back and 50 cm on the front and top.
- **Never** place the device in humid or wet environment.
- **Never** place the device on the flammable surfaces.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

#### Connection



#### **DANGER! Electric shock hazard!**

**The device can cause injuries due to improper installation!**

**Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!**

**Connect the device only to properly installed single socket with protective terminal.**

**Do not disconnect the supply cable by pulling it, always pull the plug.**

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.


## 5.2 Operation

### Before operation

- Before the device operation clean it according to the instructions in section 6 “**Cleaning**”.
- Fix the drip tray at the back wall of the device.
- Connect the device to the single grounded socket.
- Heat the device for approx. 5 minutes without food at the highest temperature setting. Follow the instructions in section “**Temperature adjustment**”. During the first heating smoke may occur, which is not dangerous and will not occur during further operation.
- Turn the device off by turning the temperature controller knob to “**OFF**” position. Leave the device for cooling down.

### Temperature adjustment

- Temperature is adjusted in stepless mode with use of temperature controller knob.
- Set temperature by rotating the temperature controller knob clockwise to required position. The adjustment possibilities are shown below.

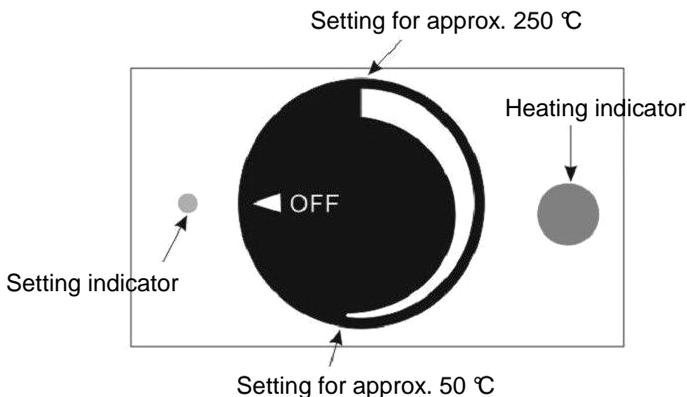

- Ceramic grill plate should be heated for approx. 3 minutes before each use.
- During heating up the red heating indicator at the adjustment knob comes on. After reaching the preset temperature the indicator goes off and comes on during the successive heating phase.
- Place food for grilling directly on the grill surface.


## Food preparation guidelines

- **Ceramic grill plate** is designed for food preparation on the grill surface with small fat addition. It is a healthy method of preparation of meat, fish, and vegetables. Moreover it saves time and energy, and allows for avoiding washing of cooking kitchenware.
- The useful grill surface is indicated by white line. In that area heat is distributed uniformly.
- Before placing food apply some oil on the grill surface. Use oil of high smoke point, e.g. rapeseed or sunflower oil.
- Meat, back fat, etc. require less oil as they contain their own fat; in case of grilling fish and vegetables apply more oil on the grill surface. Addition of oil prevents food sticking to the grill plate and its burning.
- After grilling remove food residuals and oil excess from the grill surface with use of Ceran scraper to the drip tray.
- Drip tray should be periodically inspected and emptied. Wash it and reinstall at the device when required.



### CAUTION!

**Never use the device without properly fixed drip tray.**

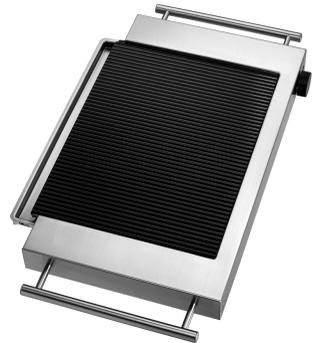

- In order to prevent smell and taste propagation between various kinds of food remove its residuals from the grill surface between the successive grilling stages.
- Prepare food in the following order: vegetables after meat or fish.
- In order to stew food or maintain its juices and aroma use the aluminium foil.
- Avoid use of sugar and liquids containing it. When sugar is required wrap food with the aluminium foil.



### NOTE!

**When sugar, syrup, milk, etc. get on the grill plate, remove them carefully with Ceramic scraper before the grill surface cools down: cold food residuals (in particular sugar or syrup) are hard to remove.**

- Use your favourite grill utensils for placing and removing food (tongs, forks, etc.), but they must not be **made of plastic**. **Never place plastic containers on the grill surface**.
- **Never** cut directly on the grill surface, it may be scratched.
- After reducing heating (set low temperature) Ceramic grill plate may be used for keeping food warm.
- After use turn the device off with use of temperature controller knob (turn to “**OFF**” position) and disconnect it from the power supply (remove the plug from the socket!).

## 6. Cleaning



### CAUTION!

**Disconnect the unit from the power supply (unplug!) before cleaning.**

**The unit is not designed to be rinsed with running water.**

**Do not use a pressure washer to clean the device!**

**Be careful and do not let the water into the unit.**

### Cleaning of the device

- Turn the device off with use of temperature controller knob (turn to “**OFF**” position) and disconnect it from the power supply (remove the plug from the socket).
- Let the device cool down for a few minutes.
- Remove food residuals from the grill surface with use of Ceramic scraper or paper towel.
- Wet residuals hard to remove with sponge and heat the device at the highest level for a few minutes. Turn the device off and use Ceramic scraper to remove residuals.
- **Ceramic grill plate** should be cleaned with soft cloth soaked with warm water and gentle washing agent.
- Periodically clean **housing** and **handles** of the device with soft moist cloth.
- After cleaning dry the surfaces with soft and dry cloth.
- Remove **drip tray** from the device, empty it and wash with use of gentle washing agent and soft cloth or sponge. Rinse drip tray in clean water and thoroughly dry before reinstalling in the device.
- Always use the soft cloth only, **never** use any abrasive washcloth which may scratch the device.

## Storage

- In case of longer inactivity period clean the device according to the description above and store in dry and clean place, protected from frost, sunlight, and out of reach of children. Do not place any heavy objects on the device.

## 7. Waste disposal

### Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



#### **WARNING!**

**To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.**



#### **CAUTION!**



**For the disposal of the device please consider and act according to the national and local rules and regulations.**