



860.002

Bedienungsanleitung

Standascher, silber

Seite 3 bis 5

D/A/CH

Instruction manual

Free-standing ashtray, silver

from page 7 to 9

GB/UK

Mode d'emploi


Cendrier sur pied, argenté

de page 11 à page 13


F/B/CH

PRODUCT DESCRIPTION:


| | |
|---------------------|---|
| Name: | ● Free-standing ashtray, silver |
| Item number: | ● 860.002 |
| Design: | ● Stainless steel casing |
| Dimensions: | ● W 240 x D 240 x H 870 mm |
| Weight: | ● 8,5 kg |
| Accessories: | ● 2 metal dowels, 2 screws, 2 washers, 2 nuts, 2 spring washers |

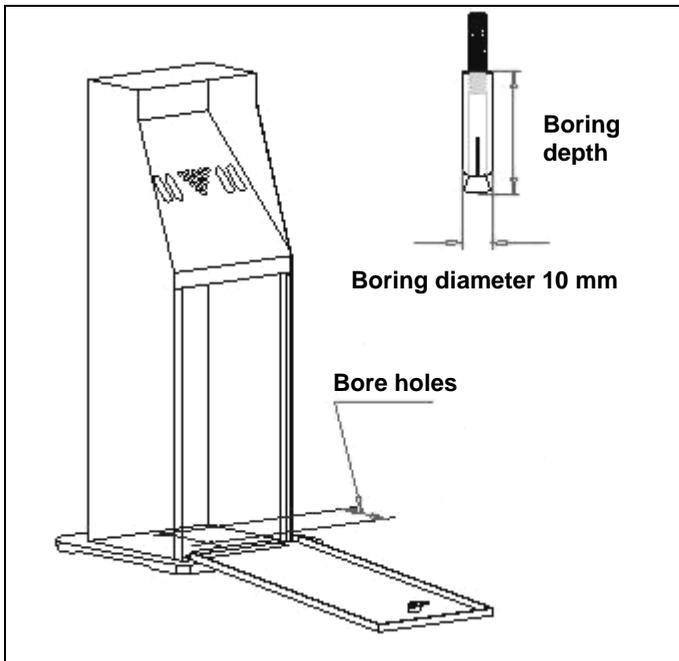ASSEMBLY INSTRUCTIONS


1. Select the position for the free-standing ashtray.
2. Open the ashtray and remove the ash container.

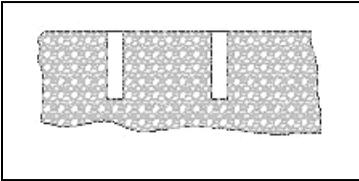

3. Mark the holes in the base plate on the selected position. Then drill 2 holes with a 10 mm stone drill.

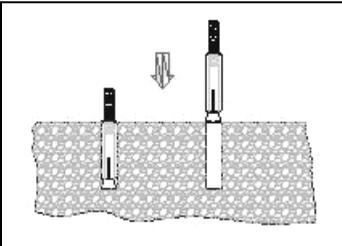

4. Stick the metal dowels with the attachment screws into the drilled holes in the ground as illustrated.

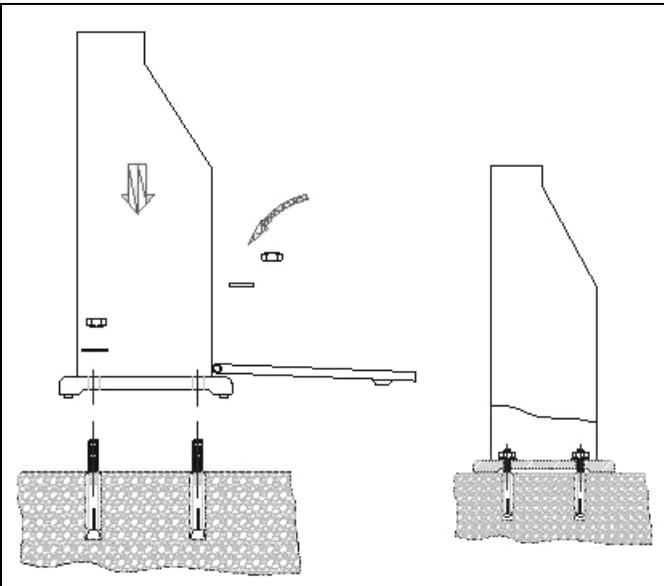

5. Put on the washers and place the free-standing ashtray precisely on the attachments screws of the metal dowels. Then attach the floor ashtray with the nuts and the spring washers.

EMPTYING AND CLEANING

- Remove contents from the ash compartment regularly.
- To empty the ash compartment, open the free-standing ashtray and pull out the ash compartment.
- Having emptied the contents, place the ash compartment back into the free-standing ashtray and lock back into position.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120