

**700A1**



**316347**

**700A1A**



**317347**

## PRODUCT DESCRIPTION

<b>Name</b>	<b>Rubbish bin cupboard</b>	
Model:	<b>700A1</b>	<b>700A1A</b>
Code-no.:	<b>316347</b>	<b>317347</b>
Material:	CNS 18/10	
Model:	<ul style="list-style-type: none"> <li>▪ door type: folding door</li> <li>▪ height-adjustable feet (4x)</li> <li>▪ height-adjustable: 850 - 900 mm</li> </ul>	
	▪ without splashback	▪ with splashback: 40 mm
Inner container:	<ul style="list-style-type: none"> <li>▪ stainless steel</li> <li>▪ dimensions: W 250 x D 295 x H 400 mm</li> <li>▪ capacity: 28 litres</li> <li>▪ with handles on the side</li> <li>▪ can be removed</li> </ul>	
Dimensions:	W 400 x D 700 x H 850 mm	
Weight:	28 kg	28.1 kg

We reserve the right to implement the technical modifications!


### List of parts



- 1 Top
- 2 Housing
- 3 Rubbish bin side handle (2)
- 4 Feet (4)
- 5 Cupboard folding door
- 6 Rubbish bin

## User instructions

- Unpack the rubbish bin cupboard and remove and dispose of all package materials according to the environmental protection regulations.
- Carefully remove the protective film, take care not to scratch the external surfaces when using scissors or other tools.
- Place the rubbish bin cupboard in the desired place and level it using the height adjustable feet by turning in or out.
- When placing, make sure there is enough space from service side to open the cupboard folding door.
- Place the rubbish bin into the cupboard: hang it on the hanging element provided on the cupboard folding door.

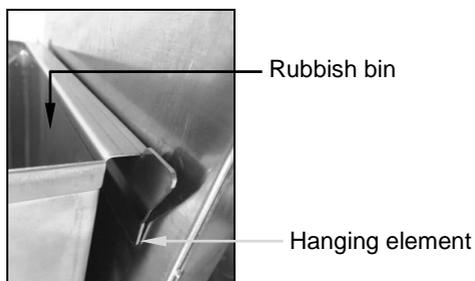

- Clean the rubbish bin cupboard regularly.
- Open the cupboard folding door and remove the rubbish bin from the cupboard using the side handles. Clean it thoroughly inside and outside with a soft cloth and mild cleaning agent. Rinse with clean water and finally dry it thoroughly.
- Regularly wipe the rubbish bin cupboard housing and cupboard folding door with a soft, damp, lint-free cloth. In case of strong contamination, use a mild cleaning agent.
- To polish the cleaned surfaces, use a soft, dry cloth.
- **Never** use rough or scrubbing cleaning agents, steel wool or sponges that may scratch the surface of the rubbish bin cupboard.

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 5258 971-0  
fax: +49 5258 971-120  
**Service-Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)