

**Snackjet**



**120757**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)

Version: 1.0

Date of preparation: 2022-01-05

**Original instruction manual**

## Technical Data

<b>Name:</b>	<b>Grill plate Snackjet</b>
Art. No.:	<b>120757</b>
Material:	aluminium, non-stick coat
Version:	grooved
Designed for:	Snackjet 200
Features:	suitable for microwave ovens
Dimensions (W x D x H), in mm:	280 x 205 x 5
Weight, in kg:	0,8

We reserve the right to implement technical modifications.

## Indications for User

The grill plate is designed for Snackjet 200. Food prepared on the grill plate for Snackjet 200 has a roast aroma and an appetizing browned crust — no matter if it is meat, fish, sandwich, wrap or any vegetable.

1. The grill plate should be used with an air partition only; do not place the grill plate directly on the bottom of the thermal processing chamber of the appliance.
2. To remove food products, use heat-resistant plastic kitchen utensils, such as a pancake blade, spatula, etc.
3. To avoid burning residues, the grill plate should be cleaned regularly, also in between grilling processes. Follow indications provided in subsequent section.

## Cleaning

### **WARNING!**

**For cleaning, do not use any pointed implements nor metal objects, such as knives, forks, etc. This implements can damage the non-stick coating.**

**For cleaning, do not use any scouring agents containing solvents nor corrosive cleaning agents. Such agents can damage the surface of the grill plate.**

1. After use, leave the grill plate to cool down.
2. Use a paper towel to remove food residues from the grill plate.
3. Clean the grill plate immediately after use, under warm running water and with the use of a soft cloth or sponge. Use a mild cleaning agent if required.
4. Rinse the grill plate with fresh water.
5. To end with, dry the grill plate thoroughly.