

G-1KB 1K2000



105198

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2023-03-03

Original instruction manual

Technical Data

Name:	Base frame G-1KB 1K2000
Art. No.:	105198
Material:	stainless steel
Bottom shelf:	1
Dimensions (W x D x H), in mm:	600 x 600 x 210
Weight, in kg:	5,0

We reserve the right to implement technical modifications.

Version / Characteristics

- Colour: silver
- Designed for: gas stool cooker G-1KB 1K2000 / 1051993
- Delivery form: self-assembly set (simple assembly)
- Height adjustable feet: no
- With bottom shelf

EN

Intended Use

The base frame is designed and constructed as a leg extension for the G-1KB 1K2000 gas stool cooker, providing cooking and frying at a comfortable working height.

The base frame should only be used with the G-1KB 1K2000 / 1051993 gas stool cooker provided for this purpose.

Unpacking

1. Unpack the base frame and remove all packing materials according to the environmental regulations.

CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

Equipment Included

1. Check completeness of delivery according to the list below:

1 x bottom shelf

2 x leg rack with crossbars (pre-assembled)

Part Names

EN

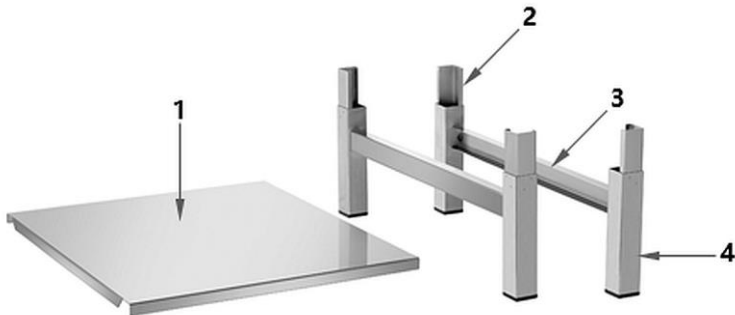


Fig. 1

1. Bottom shelf
2. Leg reinforcement (4 pcs)
3. Crossbar (2 pcs)
4. Foot (4 pcs)

Assembly

1. Fix the shelf on the leg racks, overlapping it with the slots on the crossbars.
2. Press the legs of the gas stool cooker into the legs of the base frame.

The connection is stabilised by reinforcing the legs.

This way, the gas stool cooker gains a comfortable working height.

Thanks to the plug-in system, the gas stool cooker can be used easily and quickly with and, if required, without a base frame.



Fig. 2

Cleaning

ATTENTION!

For cleaning, do not use any scouring agents containing solvents nor corrosive cleaning agents. They may damage the surface.

1. Clean the base frame and bottom shelf regularly with warm water and soft, damp cloth. Use a mild cleaning agent when required.
2. Dry the base frame and bottom shelf thoroughly with a soft cloth.