

**4P 3550-1 TCK**



**105770**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0  
Fax: +49 5258 971-120  
**Service hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)

Version: 1.0

Date of preparation: 2023-08-29

**Original instruction manual**

## Technical data

<b>Name:</b>	<b>Sub-Structure 4P 3550-1 TCK</b>
Art. No.:	<b>105770</b>
Material:	stainless steel
Dimensions (W x D x H), in mm:	720 x 800 x 663
Weight, in kg:	7,4

We reserve the right to implement technical modifications.

## Version / Characteristics

- Delivery form: self-assembly set (simple assembly)
- Colour: silver
- Designed for:
  - induction cooker 4P 35-1 TCK
  - induction cooker 4P 50-1 TCK
- Height-adjustable feet
- With bottom shelf

EN

## Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- reconstruction from a table-top appliance to a standalone appliance.

## Function

This stable base 4P 3550-1 TCK is a supplementary component of induction cooker 4P 35-1 TCK and induction cooker 4P 50-1 TCK, offering additional storage space with a shelf. With the feet length of 662 mm, the induction cookers are comfortable to use.

## Scope of Delivery / Part Name

1. Unpack individual elements and remove the packing material according to the environmental regulations.
2. Check if the delivery is complete, according to the list below:

No.	Name	Number
1	Adjustable feet	4
2	Bottom shelf	1
3	M6*15 hexagon socket screw	22
4	M6 spring ring	22
5	M6 washer	22
6	Hex key	1

## Assembly

1. To correctly fix the base to the appliance, follow the instructions below.
2. First, install the bottom shelf in the holes of the adjustable feet intended for this purpose.

Place a spring ring and a washer between each hexagonal socket screw and the adjustable feet. To tighten the hexagon socket screws use the included hex key.



Fig. 1

3. Put the induction cooker on its side.
4. Unscrew the feet from the bottom of the appliance.
5. Screw the adjustable feet to the bottom of the appliance. Place a spring ring and a washer between each hexagonal socket screw and the adjustable feet. Use hex key to tighten the hexagon socket screws.



Fig. 2

6. Put the appliance with the base in upright position.
7. If necessary, adjust the height by screwing in or out the adjustable feet.

## Cleaning

### **ATTENTION!**

**Scrubbing agents, cleaning agents with solvents or caustic substances may damage the surface of the base.**

For cleaning, use only agents suitable for stainless steel.

1. Clean the base with warm water and a soft, damp cloth. Use a mild cleaning agent when required.
2. Dry the base with a soft cloth.