

SW10



A500467

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com



Version: 1.0

Date of preparation: 2024-01-09

Original instruction manual

Technical data

Name:	Buffet display SW10
Art. No.:	A500467
Colour:	black
Material:	plastic
Hood version:	polystyrene, detachable
Number of levels:	1
Operation:	on both sides
Dimensions (W x D x H), in mm:	470 x 320 x 195
Weight, in kg:	1,5

We reserve the right to implement technical modifications.

Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Storing suitable cakes, snacks and similar food products.

Unpacking

1. Unpack the buffet display and remove the packing material observing environmental regulations in force.


CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

Equipment Included

1. Check completeness of delivery following the figure below:

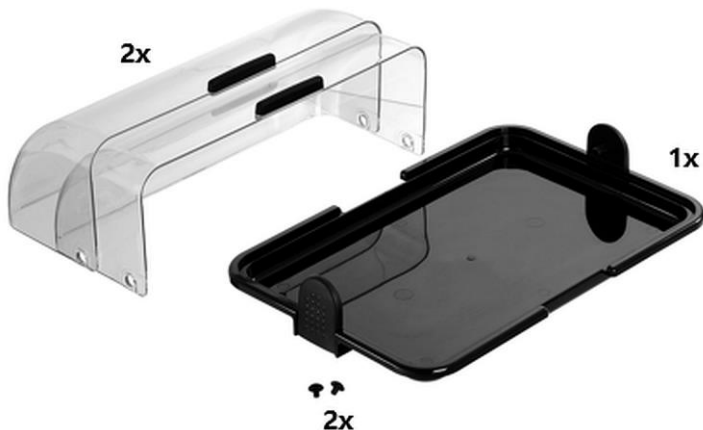

Before Use

1. Before use, clean the buffet display thoroughly observing indications in section '**Cleaning**'.
2. To end with, dry all cleaned parts with a soft dish-cloth.

Assembly

1. Connect all the components of the buffet display together.
2. Put both halves of the hood on the hood holders on the left and on the right.
3. Insert the rubber stops into the hood holders to secure the hood halves.



Fig. 1

Indications for User

- Place the buffet cabinet on an even surface.
- Do not locate the buffet cabinet in a place exposed to the direct sunlight.
- Use the buffet display to display cakes, snacks and similar food products in self-service areas.
- Do not store perishable products in the buffet cabinet.

Cleaning

ATTENTION!

For cleaning, do not use any scouring agents containing solvents nor corrosive cleaning agents. They may damage the surface.

1. For cleaning, disassemble all components of the buffet display.
2. After use and in the meantime, should it be needed, clean the buffet display with warm water, a mild cleaning agent and a soft cloth.
3. Thoroughly dry all cleaned elements.
4. Clean the buffet display regularly with food-grade disinfectant.