



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
1	Gehäuse	Housing	E0WEB130A
2	Bedienblende	Front panel	E0WEB106TAB
3	Abdeckung unten	Lower cover	E0WEB136A
4	Fettauffangschale, vorne	Grease drip pan, front side	E0WEB131FA
5	Fettauffangschale, hinten	Grease drip pan, back side	E0WEB131HA
6	Rahmen	Frame	E0WEB133AB
7	Backplatte, unten	Lower baking plate	E0WEB132AB
8	Backplatte, oben	Upper baking plate	E0WEB126AB
9a	Heizkörper unten	Heating element, bottom	E0WEB111
9b	Heizkörper oben	Heating element, top	E0WEB108
10	Montageplatte	Mounting plate	E0WEB134
11	Abdeckung oben	Top cover	E0WEB123
12 + 13	Bügel komplett, Metall	Complete clamp, metal	E0WEB107AB
14	Griff, Kunststoff	Handle, plastic	E0KLB121
15	Feder	Spring	E0KLB127
16	Anschlusskabel m. Stecker	Power cord w. plug	A039896
17	Zugentlastung	Strain relief	E0KLB138
18	Thermostat 50 - 310° C	Thermostat 50 - 310° C	E0KLB118
19	Kontrolllampe, grün	Green indicator light	E0KLB119
20	Knebel f. Thermostat	Knob f. thermostat	E0KLB120
21	Schalter, Nockenschalter	Switch, change over switch	E0KLB102
22	Kontrolllampe, rot	Red indicator light	E0KLB101
23	Knebel Ein - Aus	Knob on - off	E0KLB103
24	Fuß	Base	E0KLB117
25	Timer, Platine	Timer board	E0KLB109
26 x 2	Isolierung, Set	Insulation set	E0WEB1151
o.Abb/n.pic	Schaber	Scraper	E037016901



Waffeleisen 1BW16080
Artikel-Nr.: 370169

Ersatzteilliste
30.05.2017