

**1,5L**



**A135034**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 1.0

Date of preparation: 2019-09-17

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of signal words .....	2
1.2	Safety instructions.....	3
1.3	Intended use .....	5
1.4	Unintended Use .....	5
2	General information .....	6
2.1	Liability and warranty .....	6
2.2	Copyright protection.....	6
2.3	Declaration of conformity .....	6
3	Transport, packaging and storage .....	7
3.1	Delivery Check.....	7
3.2	Packaging .....	7
3.3	Storage .....	7
4	Technical data .....	8
4.1	Technical specifications .....	8
4.2	List of components of the appliance.....	9
4.3	Functions of the appliance .....	9
5	Installation and operation .....	10
5.1	Installation.....	10
5.2	Operation .....	11
6	Cleaning .....	14
6.1	Safety Instructions for cleaning.....	14
6.2	Cleaning.....	14
7	Disposal.....	15



**Read this instruction manual before using and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

## 1 Safety

EN

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of signal words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



**WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.

**CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

**IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

**NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.

## Operating Personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

## Supervised usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

## Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

### 1.3 Intended use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Mixing, pureeing, chopping, and stirring of suitable food products.

#### **The appliance is not designed for continuous operation in industrial applications.**

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

### 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Processing of unsuitable food products.

## 2 General information

### 2.1 Liability and warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

EN

### 2.2 Copyright protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### 2.3 Declaration of conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.



## 3 Transport, packaging and storage

### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical data

### 4.1 Technical specifications

<b>Name:</b>	<b>Blender 1,5L</b>
Item No.:	<b>A135034</b>
Material:	Stainless steel, glass, plastic
Mixing beaker material:	Glass
Volume, in l:	1,5
Speed levels:	2
Rotational speed (RPMs), max.:	22000
Power supply:	0,5 kW / 230 V / 50 Hz
Dimensions (W x D x H) in mm:	205 x 195 x 390
Weight in kg:	3,0

**EN** We reserve the right to implement technical modifications!

#### Version / Characteristics

- Designed for: blending, chopping
- Pulse operation function
- Safety switch:
- Control: knob
- Feet: 4 feet, hard rubber
- Filling opening at top of the appliance
- Filling level display in litres, cups, ounces, ml

### 4.2 List of components of the appliance



- |                          |                         |
|--------------------------|-------------------------|
| 1. Filling opening cover | 2. Lid                  |
| 3. Mixing beaker         | 4. Mixing beaker handle |
| 5. Motor block           | 6. Feet (4x)            |
| 7. Speed control knob    | 8. Blade assembly       |

### 4.3 Functions of the appliance

The blender with a 1.5 litre mixing beaker you may — using 2-step speed regulation or pulse operation function — process various food products and prepare, e.g. refreshing milk cocktails, delicious smoothies or simply chopped fruit and vegetables.

## 5 Installation and operation

### 5.1 Installation

#### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

##### Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
  - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
  - sufficiently large, and thus enabling usage of the appliance with no problems;
  - easily accessible;
  - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 20 cm clearance from flammable walls and items.

### Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
  
- Do not use the appliance with an external timer or remote control.

## 5.2 Operation



### WARNING!

#### **Injury hazard!**

#### **The blade at the bottom of the mixing beaker is very sharp!**

Never put hands into the mixing beaker!

When mixing, never use auxiliary means to press in the ingredients. They may be caught by the blade and cause injuries.

#### **Risk of scalding by escaping vapour and spatters!**

Hot liquids should be mixed only with low speeds and with the lid tightly fitted.

EN

### Tips for the User

- Do not process large amounts nor frozen ingredients at once. To obtain better results, these products should always be added in smaller portions, one by one.
- Prior to processing, hard ingredients should be sliced into smaller chunks (2–3 cm).
- Add a small amount of a liquid before you start mixing hard ingredients. Subsequent ingredients should be added successively through the opening in the lid.
- Do not overfill the mixing beaker. The filling level may be read off of the mixing beaker markings.
- When processing hot or foaming ingredients and when working at high revolutions pay particular attention to maximum filling level.
- To mix hard or very dense ingredients, we recommend using pulse operation function.

### Before the First Use

1. Make sure that all components of the appliance and accessories are available and in sound condition.
2. Prior to first use, thoroughly clean the appliance and equipment according to instructions in section 6 "Cleaning".
3. All cleaned parts should be dried thoroughly.

### Appliance Start-up

1. Prepare food products for processing.
2. Put the ingredients in the mixing beaker.
3. In the case of hard ingredients, add bit of water.
4. Place the lid on the mixing beaker.
5. Place the cover in the filling opening.
6. Screw the plastic cover in, rotating it clockwise.
7. Put the mixing beaker onto the motor block. Pay attention to markings.

**NOTE: The appliance is equipped with the safety switch. Thanks to this, the appliance may be operated only with the mixing beaker placed correctly on the motor block. When the mixing beaker is removed from the motor block, the motor is switched off.**

EN

8. Plug the appliance into a suitable single grounded socket.
9. Use the knob to select one of the settings, suitable for the processed ingredients.



- 0 – OFF position
- Level 1 – low revolutions
- Level 2 – high revolutions
- M (pulse operation function) – short-lasting processing of ingredients

## Installation and operation

---

10. Rotate the knob clockwise to position '1' or '2', to start the mixing process.
11. Do not keep the appliance working too long at once, as it processes the ingredients very rapidly.
12. After a few seconds check the texture of the processed ingredients.
13. If needed, switch the appliance back after cooling off.

### Pulse Operation Function

With pulse operation function ('M' position), the motor is operating at full speed as long as the knob is rotated to the left and held in this position. When the knob is released, it returns automatically to the home '0' position.

The pulse operation function is particularly suitable for chopping ice cubes (3 - 4 ice cubes at maximum), which may be then used for cocktails.

1. To obtain an optimal effect, add 1 cup of water to the ice cubes in the mixing beaker.
2. Turn the knob several times to the pulse operation position — 'M'.

### CAUTION!

**When the blade is blocked and the motor operates irregularly, stop the device at once, pull the plug out from the socket, and remove some ingredients from the mixing beaker. Then, restart the mixing process.**

EN

### Switching the Appliance Off

1. To switch the appliance off, turn the knob to OFF '0' position.
2. Wait for the motor to stop completely before removing the mixing beaker.
3. Unplug the appliance.

## 6 Cleaning

### 6.1 Safety Instructions for cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

### 6.2 Cleaning

1. Clean the appliance regularly after the end of each working day, or more frequently if needed.
2. Remove the mixing beaker from the motor block.
3. Remove the lid and the cover.
4. Clean the removed parts, which come into contact with food products (lid, cover, mixing beaker), using hot water and mild cleaning agent.
5. Rinse thoroughly with clear water.
6. Leave the parts to dry in open air or dry with a linen-free cloth.


**NOTE: all detachable stainless steel components are dishwasher-safe.**

7. Clean the motor block and power cable with a soft, damp cloth only.
8. Wipe the motor block and power cable at the end with a soft, cloth.
9. Assemble all the parts prior to subsequent use or storing the appliance.



### 7 Disposal

#### Electrical appliance

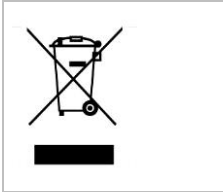

Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.