

**67L**



**700251**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 2.0

Date of preparation: 2024-10-15

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of Signal Words .....	2
1.2	Safety instructions.....	3
1.3	Intended Use .....	6
1.4	Unintended Use .....	6
2	General information .....	7
2.1	Liability and Warranty .....	7
2.2	Copyright Protection .....	7
2.3	Declaration of Conformity .....	7
3	Transport, Packaging and Storage .....	8
3.1	Delivery Check.....	8
3.2	Packaging .....	8
3.3	Storage .....	8
4	Technical Data.....	9
4.1	Technical Specifications .....	9
4.2	Functions of the Appliance.....	10
4.3	List of Components of the Appliance .....	11
5	Installation and operation .....	12
5.1	Installation.....	12
5.2	Operation .....	14
6	Cleaning and Maintenance .....	18
6.1	Safety Instructions for Cleaning .....	18
6.2	Cleaning.....	18
6.3	Maintenance .....	19
7	Possible Malfunctions.....	20
8	Disposal.....	22



**Read these instruction manual before using the appliance and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance.

Read this instruction manual before you use the appliance and particularly before you start the appliance to prevent injury or damage. Incorrect use may cause damage.

All important information contained in the operating instructions must be available to the appropriate staff at all time. The operator shall be responsible for their availability.

In addition to the operating instructions, you must comply with the general, legal and other applicable regulations for occupational safety and environmental protection.

EN

## 1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



### **WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



### **CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

### **IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

### **NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

### **Fire hazard / flammable materials hazard / explosion hazard!**

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

## Safety

---

### Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

### Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.
  
- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.

## 1.3 Intended Use

This appliance is only intended for use described in the operating instructions, with the supplied and approved components.

Any other use is considered against the intended purpose. The manufacturer shall not be liable for any damage due to unintended use. In such cases the responsible party shall only be the user/operator.

The following is an intended purpose:

- Cooling of suitable food products and dishes.

The appliance is intended for operation in maximum ambient temperature of 32°C and relative humidity of 70%.

## 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives;
- Storing explosive materials, like sprays filled with flammable propellants;
- Storing pharmaceutical products or preserved blood;
- Storing live pets.



## 2 General information

### 2.1 Liability and Warranty

The appliance was built in accordance with the current state of the art and recognized technical safety principles. Nevertheless, during its use, there may be a threat to the health and life of the user or bystanders, or the danger of damage to the device or other assets. Warranty and liability claims for personal injury/property damage as well as defects at work are excluded if they can be attributed to one or more of the following causes:

- Use against the intended purpose
- Failure to follow/disregard the instructions and all related information
- Unauthorized structural or technical changes to the device
- Engaging insufficiently trained and insufficiently qualified personnel
- Operation with defective or incorrectly installed safety and protective devices
- Inadequate maintenance or cleaning
- Faults not fixed
- Use of prohibited media, cleaning agents, etc.
- Use of unauthorised spare parts
- Errors in operation or other misuse
- Disasters caused by foreign objects or force majeure
- Destruction of the type plate and stickers relevant for operation and safety

The warranty period for this appliance is 24 months, counted from the purchase date.

### 2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### 2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

### 3 Transport, Packaging and Storage

#### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint.

Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

#### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

#### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical Data

### 4.1 Technical Specifications

<b>Name:</b>	<b>Refrigerated display 67L</b>
Art. No.:	<b>700251</b>
Material:	stainless steel
Chopping board material:	polyethylene
Volume, in l:	67
GN capacity:	8 x 1/6 GN
Max. GN container depth, in mm:	100
Temperature range, min.–max., in °C:	1 - 7
Amount of coolant, in kg:	R600a / 0,04 kg
Climate class:	4
Energy efficiency class:	C (EU Nr. 2019 / 2018)
Energy consumption, in kWh/year:	550
Power load:	0,105 kW   220-240 V   50 Hz
Dimensions (W x D x H), in mm:	790 x 620 x 320
Weight, in kg:	25,1

We reserve the right to implement technical modifications.

## Version / features

- Colour: silver, black
- Temperature control: digital
- Control: key
- Cooling: static
- Evaporation of condensed water
- Automatic defrosting function
- Digital display
- ON/OFF switch
- Indicator light: ON/OFF
- Door type: lifting door
- Door position: rear side
- Door hinge: top
- Door with no possibility for door hinge to be changed
- Type of glazing:
  - double glazing
  - safety glass
- Front pane: rounded, cased / framed
- The set includes:
  - 8 GN containers 1/6, 100 mm deep., chromium-nickel steel 18/10;
  - 3 bars, length 360 mm, width 30 mm

EN

More information on the appliance is available in our website [www.bartscher.com](http://www.bartscher.com) or, pursuant to the Regulation (EU) 2019/2018, in our product data base at <https://energy-label.ec.europa.eu/>. Enter article number for a given model.

## 4.2 Functions of the Appliance

The refrigerated display is designed to cool food products and dishes in GN containers at appropriate temperature settings.

## 4.3 List of Components of the Appliance



Fig. 1

EN

- |                                   |                                                              |
|-----------------------------------|--------------------------------------------------------------|
| 1. Lifting door handle            | 2. Lifting door                                              |
| 3. GN container (8x)              | 4. Chopping board                                            |
| 5. Ventilation openings           | 6. ON/OFF switch with integrated power indicator light (red) |
| 7. Digital temperature controller | 8. Feet (4x)                                                 |
| 9. Housing                        | 10. Lifting door hinge (2x)                                  |

## 5 Installation and operation

### 5.1 Installation

#### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

##### Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels affixed to the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- When selecting the installation site, please consider the following items:
  - The mounting surface must be even, sufficiently load-bearing, waterproof, dry and resistant to high temperatures.
  - Make sure that the designated escape routes are clear.
  - Ensure a stable position.
  - Allow sufficient space for work, maintenance and cleaning.
  - Leave the supply and exhaust air vents, if any, free.
  - Comply with applicable technical and building regulations.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- In order to avoid damage to the compressor, do not tilt the appliance more than 45° when positioning or transporting it.

## Installation and operation

---

- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and restrict functions of the appliance, too.
- Do not block nor cover the ventilation openings nor air inlet or air outlet of the appliance.
- Place the appliance so that sufficient air circulation is ensured. Do not block nor cover ventilation openings in the rear wall of the appliance.
- Leave at least 10 cm clearance from walls and other objects.

## Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Prior to first use, the appliance should be installed and left standing upright for at least 2 hours, before it is connected to power supply.
- After a power failure or when the plug is removed from the socket, do not reconnect the appliance to power supply for at least 5 minutes.

## 5.2 Operation

### Preparation of the appliance

1. Before use clean the appliance according to the instructions in section 6 'Cleaning'.
2. Then dry the appliance thoroughly.
3. Close the the lifting door.

### Appliance start-up

1. Plug the device into a suitable single socket.
2. Switch the appliance on with the ON/OFF switch located at the service side (switch to position 'I').

The digital display shows current temperature in the appliance and cooling indicator LCD ❄️ lights up.

The appliance will be cooled down to the factory pre-set temperature.

3. Place food in the refrigerated display only after the device has reached sufficient cooling power.
4. If needed, the temperature may be altered with digital temperature control buttons. Observe indications set forth in '**Settings**'.



### Digital Temperature Control / Button Functions

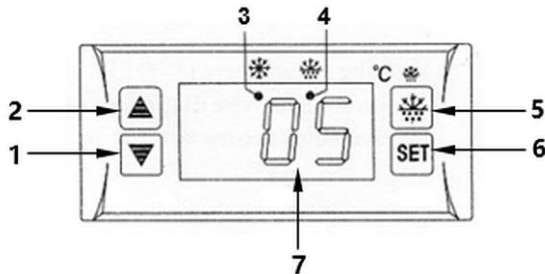


Fig. 2

1. Temperature decrease key
2. Temperature increase key
3. LCD cooling indicator
4. LCD defrosting indicator
5. Defrosting key
6. SET function key
7. Digital display

EN

### LCD indicators



#### LCD cooling indicator

This indicator is lit over the cooling process; it remains off as long as the cooling temperature remains at constant level, and blinks during switch on delay.



#### LCD defrosting indicator





This indicator is lit over defrosting process; goes off when the defrosting process is completed, and flashes during defrost delay.

### Settings

#### Setting the set point (the set temperature value)

The optimum temperature setting is factory default and it equals the inside appliance operating temperature of 1 °C – 7 °C (depending on the external temperature).

The set temperature may be changed in the following way:

- press  button shortly; the set value will start to flash immediately;
- use  or  buttons to increase or decrease the temperature value;
- use  button to confirm the set temperature value.

#### HINT!

**If no other button is pressed within 10 seconds, the display switches from displaying the temperature setting to displaying the temperature inside the refrigerated display.**


**The displayed temperature value is the measured value within the area of the temperature sensor. It serves the purpose of controlling the compressor.**


EN

#### Automatic defrosting

The appliance defrosts automatically 4 times over a 24-hour period.

#### Manual defrosting

If the cooling performance of the appliance drops, manual defrosting is required. Press the  manual defrosting button and hold it pressed for 6 seconds, to initiate instant defrosting.

The LCD defrosting indicator light  will come on. Subsequent defrosting cycle is initiated after 6 hours.

### Cooling of food products/ dishes

#### HINT!

**Do not place warm dishes in the refrigerated display. Cool them down to ambient temperature first.**

Immediately after the set temperature has been reached inside the appliance, the LCD cooling indicator light goes off and the appliance is ready for placing the appropriate food products in.

1. Prepare the required food products or dishes.
2. Place them in suitable GN containers.
3. Close the lifting door immediately after putting food products into the refrigerated display to limit the escape of cold air from the inside.
4. Remove food as required and then close the lifting door of the appliance again.



Fig. 3

### Switching the Appliance Off

1. If the appliance is not to be used any more or is scheduled for cleaning, it should be switched off with the ON/OFF switch.
2. Disconnect the appliance from the mains socket (pull the plug out).

## 6 Cleaning and Maintenance

### 6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

EN

### 6.2 Cleaning

1. At the end of a working day, clean the appliance thoroughly.
2. Open the lifting door.
3. Remove GN containers with food products from the refrigerated display and store them temporarily in a refrigerator to prevent their deterioration.
4. The internal surfaces of the refrigerated display and lifting door should be cleaned regularly with warm water and cleaning disinfectant approved for contact with food. Follow the instructions of the cleaning agent manufacturer.
5. Rinse with fresh water to remove all traces of the cleaning agent.
6. Dry all cleaned surfaces thoroughly.

## Cleaning and Maintenance

---

7. A drain hose closed with a rubber plug is placed on the bottom of the appliance. If, during operation of the appliance, condensed water or post-cleaning water collects at the bottom of the GN containers placing area, it may be drained to an appropriate collection container with the use of the drain hose. Close the drain hose with the rubber plug again after draining the water.
8. Clean the housing of the appliance, the chopping board and the glazed cover with a damp cloth with a mild cleaning agent, and then dry thoroughly.
9. Clean the used GN containers with warm water and a food grade disinfectant. Rinse the GN containers thoroughly with fresh water and dry afterwards.

### 6.3 Maintenance

Let the appliance to be inspected by professional technician at least once a year or as required.

### 7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. The works may only be performed by suitably qualified technical personnel.

When malfunction cannot be removed, contact the technical service. In such a case, provide article number, model and serial number. You will find this information on the rating plate.

Malfunction	Possible cause	Solution
No cooling	Plug not connected properly	Check the plug and insert it properly in a socket
	Electric power supply safety fuse damaged	Check a fuse, connect the appliance to another socket and check it
	No power supply	Check the electric power supply
	Damaged temperature controller	Contact the supplier
	Loss of the coolant	Contact the supplier
Insufficient cooling efficiency	Heat source or direct sunlight nearby	Move the appliance away from heat sources
	Poor air circulation around the appliance	Ensure sufficient clearance from walls or other objects
	Incorrect temperature setting	Check the setting, set a lower temperature if necessary
	The lifting door is not entirely closed or is kept open for too long.	Close the lifting door and open it for as short a period as possible.

## Possible Malfunctions

---

<b>Malfunction</b>	<b>Possible cause</b>	<b>Solution</b>
Appliance generates loud noises	Appliance is not placed on an even surface	Place the appliance on an even surface
	Appliance touches walls or other objects	Ensure sufficient clearance from walls or other objects
Compressor does not switch automatically off	The lifting door has been open for too long	Limit the opening time to minimum

## Spare Parts

Spare parts for the purpose of repairing this appliance, as stipulated in Annex II to the REGULATION (EU) 2019/2018, are available for at least eight years, counted from the date of introduction of the last appliance of this model to market.

## 8 Disposal

### Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.

### Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.