



| Pos. | Artikelbeschreibung | Description of item | Artikel Nr./Item No. |
|--------------|----------------------------------|-------------------------------------|-----------------------------|
| 1 | Kontrolllampe, grün 230V, 14A | Green indicator light 230V, 14A | A039883 |
| 2 | Kontrolllampe, gelb 230V, 14A | Yellow indicator light 230V, 14A | E0301130005 |
| 4 | Abdeckung, hinten | Back cover | A040459 |
| 4+5 | Gehäuse z. Schaltkasten | Housing f. switch box | A040460 |
| 6 | Sicherheitsthermostat EGO 230°C | Safety thermostat EGO 230°C | 016240438 |
| 7 | Mikroschalter, komplett | Microswitch complete | 016240435 |
| | Mutter z. Mikroschalter | Nut f. mircoswitch | E0302201242 |
| 8 | Anschlussklemme | Terminal clamp | A040461 |
| 9 | Thermostat EGO 220V, 190°C | Thermostat EGO 220V, 190°C | A039882 |
| 10 | Knebel z. Thermostat | Knob f. thermostat | E0301110479 |
| 12 | Zugentlastung | Strain relief | 016240434 |
| 13 | Anschlusskabel m. Stecker | Power cord w. plug | A039896 |
| 14 | Griff f. Gehäuse m. Schrauben | Handle f. housing with screws | n.m.lieferbar/n.m.available |
| | Griff f. Gehäuse m. Schrauben | Handle f. housing with screws | E0302070011 |
| 15 | Gehäuse | Housing | E020109027410 |
| 16 | Fuß, Gummi, schwarz Ø 30 x 15 mm | Base, rubber, black Ø 30 x 15 | A042567 |
| 17 | Becken | Basin | 016240425 |
| 18 | Deckel | Lid | A040920 |
| 19 | Krümelsieb | Crumb sieve | 016240418 |
| 20 | Ersatzkorb Fritteuse "SNACK", 4L | Sub.basket deep f. fryer "SNACK",4L | 165522 |
| 21 | Abdeckung z. Heizkörper | Cover f. heating element | 01624049 |
| 22 + 23 | Heizkörper 230V, 50Hz | Heating element 230V, 50Hz | A039885 |
| 24 | Korbaufhängung | Rod f. hanging basket | 016240426 |
| 25 | Griff z. Korb, Kunststoff | Handle f. basket, plastic | A041303 |
| 26 | Klemme groß | Big clamp | 016210820 |
| 27 | Griff z. Deckel | Handle f. lid | A040913 |
| 28 | Dichtung z. Temperaturfühler | Gasket f. temperature sensor | 016240433 |
| 29 | Bedienfeldfolie | Control panel sticker | E0A16240227 |
| o.Abb/n.pic. | Schaltkasten, Elektro | Switch box, electric | A040457 |
| o.Abb/n.pic. | Stütze m. Verschraubung | Support w. screw connection | A040572 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |



Fritteuse "SNACK I"
Artikel-Nr.: A162410E

Ersatzteilliste
04.01.2016