

**7181**



**104922**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 1.0

Date of preparation: 2020-01-03

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of signal words .....	2
1.2	Safety instructions.....	3
1.3	Intended use .....	6
1.4	Unintended use.....	6
2	General information .....	7
2.1	Liability and warranty .....	7
2.2	Copyright protection.....	7
2.3	Declaration of conformity .....	7
3	Transport, packaging and storage .....	8
3.1	Delivery check .....	8
3.2	Packaging .....	8
3.3	Storage .....	8
4	Technical data .....	9
4.1	Technical specifications .....	9
4.2	List of components of the appliance.....	10
4.3	Functions of the appliance .....	10
5	Installation and operation .....	11
5.1	Installation.....	11
5.2	Operation .....	12
6	Cleaning .....	13
6.1	Safety Instructions for cleaning.....	13
6.2	Cleaning.....	13
7	Possible malfunctions.....	15
8	Disposal.....	16



**Read this instruction manual before using and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

## 1 Safety

EN

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of signal words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



### **WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



### **CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

### **IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

### **NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## **1.2 Safety instructions**

### **Electrical current**

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.

- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.

### Flammable materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

### Hot surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

## Safety

---

### Supervised usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

### Operating Personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

### Improper use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used in a technically flawless condition, providing for safe use.
- The appliance may only be used with connections in a technically flawless condition, providing for safe use.
- The appliance may only be used clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not attempt to modify nor alter the appliance.

## 1.3 Intended use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Keeping hot-dog sausages warm.

## 1.4 Unintended use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Grilling sausages in natural casings

## 2 General information

### 2.1 Liability and warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

### 2.2 Copyright protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

EN

### 2.3 Declaration of conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

## 3 Transport, packaging and storage

### 3.1 Delivery check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

EN

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical data

### 4.1 Technical specifications


<b>Name:</b>	<b>Sausage roller grill 7181</b>
Item No.:	<b>104922</b>
Material:	Stainless steel
Temperature range, max., in °C:	20 - 110
Number of heating zones:	2
Power supply:	0,59 kW / 230 V / 50 Hz
Dimensions (W x D x H) in mm:	600 x 320 x 230
Weight in kg:	13,3

We reserve the right to implement technical modifications!

#### Version / Characteristics

- Grill surface design: rotating rollers
- Version of rollers:
  - 7 stainless steel rollers
  - Dimensions of each roller: Ø29 mm, length: 460 mm
- Designed for, max. 18 sausages
- Heating zones may be controlled separately:
  - 4 front rollers, 3 rear rollers
- Temperature control: stepless, thermostatic
- Grease collection tray
- Control: rocker switch, knob
- ON/OFF switch
- Indicator light: heating, rollers in operation
- The temperature and rollers may be controlled separately
- Additional warming option with the supplied grate
- The set includes: 1 grease collection tray, 1 grate

## 4.2 List of components of the appliance

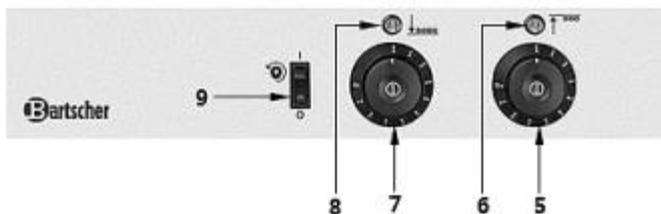

EN

- |   |  |
|---|--|
| 1. Rotating rollers (7)   | 2. Housing   |
| 3. Grease collection tray   | 4. Feet (4x)   |
| 5. Temperature controller for rear rollers                                    | 6. Heating up indicator light for rear rollers (orange)  |
| 7. Temperature controller for front rollers                                   | 8. Heating up indicator light for front rollers (orange) |
| 9. ON/OFF switch for rotating rollers with integrated indicator light (green) | 10. Grate  |

## 4.3 Functions of the appliance

The sausage roller grill keeps the hot-dog sausages warm while rotating the rollers steadily.

## 5 Installation and operation

### 5.1 Installation

#### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

##### Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
  - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
  - sufficiently large, and thus enabling usage of the appliance with no problems;
  - easily accessible;
  - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Keep minimum distance from walls and objects; maintain clearance of 10 cm at both sides and 20 cm at the rear to provide for proper air circulation and avoid overheating.

### Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

## 5.2 Operation

1. Before the first use, clean the device according to the instructions included in section 6. **“Cleaning”**.
2. Prepare sausages suitable for keeping them warm.
3. Before you operate the appliance, place grease collection tray underneath the rollers.
4. If needed, put the grate inside the grease collection tray. Make sure they are cleaned and dried.
5. Heat up the appliance before you place the sausages. Heating up time is ca. 15 min.

The surface with rotating rollers is divided into 2 separately controlled heating zones: front heating zone with 4 rollers and rear heating zone with 3 rollers.

Depending on the number of sausages you may use one or both heating zones.

6. Use the suitable stepless temperature controller to set the temperature of respective heating zones in the range of 1–10.

Orange heating indicator lights for respective heating zones are lit during heating-up phase and go off, when the set temperature is reached. If the temperature of rollers drops, the heaters switch on again and orange heating-up indicator lights are lit anew.

7. When the set temperature is reached, the required sausages may be placed.

The maximum number of (standard shape) sausages for placing is 18. You may always place 3 sausages between 2 rollers.

## Cleaning

---

8. To obtain a uniform effect, the **ON/OFF** switch for rotating rollers should be set in “I” position.

The sausages are rotating on the rotating rollers and are heated up.

9. Remove the ready sausages from the roller grill. They are ready for immediate consumption or placed on the grate beneath the rollers, where they will be kept warm.
10. If the appliance is not used, rotate both temperature controllers to the “0” (OFF) position.
11. Set the **ON/OFF** switch for rotating rollers to “0” position and disconnect the appliance from power supply (pull the plug out).

The appliance is equipped with a **safety thermostat**. When the rollers are overheated, it engages and switches the appliance off. Disconnect the device from the power supply (pull the plug out) and wait for it to cool down. When it has cooled down, you may start using the appliance again.

## 6 Cleaning

### 6.1 Safety Instructions for cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

### 6.2 Cleaning

1. Clean the appliance regularly after the end of each working day, or more frequently if needed.
2. Always make sure that during cleaning no humidity, oil nor fat enters the appliance.

**CAUTION! Never wash the device or its components in a dishwasher.**

3. Clean the housing and the rollers with soft, damp cloth, moistened with water and a drop of dishwashing liquid.

4. Rinse the cleaned surfaces thoroughly with clean water to remove all traces of the cleaning agent.

**NOTE: To remove stubborn soiling from rollers, use wooden spatula or a plastic dishwashing brush.**

5. Remove the **grease collection tray** with the **grate** from a shelf underneath the rollers.
6. Take out the grate and remove burnt left-overs, grease, etc. from the grease collection tray.
7. Wash the grate and grease collection tray in warm water with gentle cleaning agent. Use soft cloth or sponge. You may use plastic dish-washing brush to remove stubborn soilings of burnt left-overs.
8. Dry the grate and grease collection tray with soft cloth.
9. If the appliance is not to be used for a longer time, follow the description above to clean it and store it in a dry, clean place, protected against frost, sunlight, and access of children. Do not place any heavy objects on the appliance.

## 7 Possible malfunctions

Malfunction	Possible Cause	Solution
Indicator lights are not lit and the rollers do not heat up.	Damaged power cord	Contact the supplier
	The appliance is not connected correctly to the power supply.	Connect the appliance to the power supply
	Fuse damaged.	Contact the supplier
The appliance is connected to the power supply, the temperature is set, but the orange indicator light is off and the rollers do not heat up.	Damaged thermostat	Contact the supplier
	Damaged heater	Contact the supplier
The appliance is connected to the power supply, the temperature is set, the orange indicator light is on but the rollers do not heat up.	Heating element damaged	Contact the supplier
The appliance is connected to the power supply, the temperature is set, the rollers heat up but the orange indicator light is off.	Damaged indicator light	Contact the supplier

Malfunction	Possible Cause	Solution
The appliance switches off by itself when operating.	Overheating protection triggered	Disconnect the appliance from power supply, leave it to cool down and restart again. If the overheating protection engages again, contact the supplier.

When malfunction cannot be removed:

- disconnect the appliance from the power supply (pull the plug out);
- do not open the housing;
- contact the supplier.

## 8 Disposal

### Electrical appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.