

1/1 “Flexible“



500507

General guidelines



Before the operation, carefully read this instruction manual and then store it in an easily accessible place near the device.

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

To know and follow all the operational and safety instructions included in this manual is the pre-condition for the safe and proper use of the device.

All the users must follow the information included in this instruction manual and observe the health and safety guidelines. When the device is transferred to the third party, this operation manual should be transferred as well.

Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be supervised to ensure that they are not playing with the device.
- Never leave the operating device without supervision!
- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Choking hazard!**
- The device can be used only when it is in good working order and allows for safe operation. In case of malfunction, contact the service company or sales agent.



WARNING! Risk of burns and scalding by hot water!

When using the device incorrectly, during operation and directly afterwards the following hazards may appear:

- **Risk of burns** against hot surfaces of the device;
- **Risk of scalding** by water spilling from the water basin or food from the GN container;
- **Risk of scalding** by hot steam when opening the lid and removing hot foods.

Follow all the safety tips included in this instruction manual.

Use as intended

Chafing-Dish is intended for use with induction or ceramic hob only to maintain the temperature of warm food products.

Temperature in the Chafing-Dish is controlled via the external hob.

Important tip: We recommend to use the Chafing-Dish with an induction cooker for built-in installation by Bartscher IK 35-EB (105829).

Chafing Dish should not be used for:

- food preparation;
- warm and hot water preparation,
- storing and heating of flammable, harmful, and quickly evaporating liquids or materials, etc.

Technical data

Description	Chafing dish 1/1 “Flexible“
Code-no.:	500507
Material:	Stainless steel; lid: stainless steel, plexiglass
Model:	<ul style="list-style-type: none">▪ Keeping warm function▪ Heating method:<ul style="list-style-type: none">- External, via level induction or glass ceramic installed hob▪ Lid properties:<ul style="list-style-type: none">- With window- Soft Close Mechanism (hydraulic lid hinge)▪ Heat control via external hob▪ Dishwasher safe▪ GN-capable▪ Lift-Up device for GN containers
Capacity:	8.5 litres
Dimensions:	W 580 x D 420 x H 205 mm
Weight:	7.0 kg
Includes:	1 GN container 1/1 GN, 65 mm deep, stainless steel

Subject to technical changes and alterations!

List of components



- 1** Lid handle
- 2** Lid
- 3** Lid window
- 4** GN container 1/1
- 5** Water basin
- 6** Bottom
- 7** Lift-Up device for GN containers
- 8** Standing foot
- 9** Lid hinge

Properties

Lid with Soft-Close mechanism and window

The lid is provided with Soft-Close mechanism.

The lid hydraulic hinge allows for slow closing when the lid is moved forward.

When the lid has been opened it remains still in the open position.

The window in the lid enables viewing the foods in the GN container.



Standing foot

Upon placing the Chafing-Dish on a induction or ceramic hob it should be stabilized using the standing foot (bolt) at the rear wall of the device.



Lift-Up device for GN containers

To facilitate removal of GN containers use the Lift-Up device provided at the rear on the left under the water basin. Press the pin upwards (fig. on the right) and remove the GN container.



Operation

- Before the first use, thoroughly clean the Chafing-Dish according to the instructions in section “**Cleaning**”.
- Place the Chafing-Dish on the induction or ceramic hob.
- Open the lid of the device.
- Fill in with water (approx. 5.5 litres) up to the lowest projection in the water basin (fig. on the right).



CAUTION!

Never use the Chafing-Dish without water in the water basin!

Check the water level regularly.

Do not overfill as the GN container must not float.



NOTE!

To save time and energy, fill in the container with hot water of approx. 70 °C. The food will not cool and it will be quickly heated to the set temperature, and it will be kept warm during the time required.

- Put **warm** food into appropriate GN container and place it in the water basin.
- Close the lid using the handle.



WARNING! Risk of burns!

Ovfilling of the water basin and GN container may lead to spills or overflow of water and food, which may result in risk of burns. Check the level of water in the water basin and food in the GN container.

- The device is now ready for maintaining the food temperature.

- Set the desired temperature using the external heat source (induction or ceramic hob). Recommended temperature is 80 °C.

Tip: Follow the tips in the instruction manual with reference to the electric device.



- Food in the GN container are kept warm via heating water in the water basin.



HOT SURFACE! Risk of burns!

Do not touch the device during operation, use the designated handles.

- To remove warm food from the container open the lid.



HOT STEAM! Risk of burns!

When removing warm foods hot steam may be released. Take extra care when opening the lid.

- Serve warm food and replace the lid to avoid temperature drop.

- If the Chafing-dish is to remain unused, take the following steps:
 - Switch off the induction or ceramic hob.
 - Leave the water in the water basin and any food left in the GN container to cool down.
 - Once cooled down, remove the GN container from the water basin using the Lift-Up device at the rear on the left. Move the food to relevant container.
 - Remove the water from the water basin.
 - Clean the Chafing-Dish according to the instruction in section “**Cleaning**”.

Cleaning



CAUTION!

Do not use any aggressive or scouring cleaning agents, they may damage the surface of the Chafing-Dish.

- Clean the Chafing-Dish regularly.
- Before cleaning, switch off the induction or ceramic hob and leave the Chafing-Dish to cool down completely.
- Remove the GN container from the water basin and remove the cooled down water from the water basin.
- To facilitate the cleaning, remove the lid from the device in the open position.
- All the elements of the Chafing-Dish can be cleaned manually or in a dishwasher.
- Clean the water basin and lid from outside and inside with warm water and soft cloth or sponge and rinse with clean water.
- Clean the GN container with warm water and mild cleaning agent. Rinse thoroughly with clear water.
- Finally dry all cleaned elements with a soft cloth.

Descaling

- When the device is used frequently limescale may built up on the bottom of the water basin. Regularly remove the limescale. Use a water and vinegar solution (solution proportion 3:1) or special descaling product. Follow the product manufacturer's instructions.

Storage of Chafing-Dish

- If the Chafing-Dish is to remain unused for a longer period of time, clean it according to the above instructions and store in a dry, clean place safe from frost and sunlight, and out of the reach of children. Do not place any heavy objects on the Chafing-Dish.