

**ST350 TR****203515**

**ENGLISH**

**Table of contents**

**1. Safety ..... 20**  
1.1 Key to symbols ..... 20  
1.2 Safety instructions ..... 21  
1.3 Proper use ..... 25

**2. General information ..... 26**  
2.1 Liability and Warrantees ..... 26  
2.2 Copyright protection ..... 26  
2.3 Declaration of conformity ..... 26

**3. Transport, packaging and storage..... 27**  
3.1 Delivery check ..... 27  
3.2 Packaging..... 27  
3.3 Storage..... 27

**4. Technical data ..... 28**  
4.1 Technical specification ..... 28  
4.2 Overview of parts ..... 29  
4.3 Control panel elements..... 30

**5. Installation and operation..... 30**  
5.1 Installation ..... 30  
5.2 Operation..... 32

**6. Cleaning ..... 35**

**7. Waste disposal ..... 36**

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 5258 971-0  
fax: +49 5258 971-120  
**Service-Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)



**Read this instruction manual before using and keep them available at all times!**

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

## 1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

### 1.1 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



**DANGER!**

This symbol highlights hazards which could lead to injury.



**WARNING!**

This symbol highlights dangerous situations which could lead to injury or death.



### HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



### CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



### NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

## 1.2 Safety instructions

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with or starting the device.
- **Never** leave the device unattended when in use.
- Only use the device indoors.
- The device is not adapted for use with an external timer or remote control.
- The device must be operated in correct and safe technical condition only. In case of operational problems disconnect the device from the power supply (pull the plug from the socket) and contact the service company.

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements. **Suffocation hazard!**
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.



## **DANGER! Electric shock hazard!**

To avoid the hazard results please follow the safety instructions below.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled. Never place the device or other objects on the power cable.
- Do not cover the cable. Keep away the cable from operating range.

- Check the power cord regularly for damage. Do not use the device if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the **electric shock hazard** will occur.
- Never immerse the appliance, the power cord and the power plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
  - when the device is not used,
  - in case of anomalies during operation,
  - before cleaning.



## **HOT SURFACE! Risk of burns!**

To avoid the hazard results please follow the safety instructions below.

- External surfaces of the pizza oven become very hot during its operation. Do not touch them with bare hands. Operate the device with designated control knobs and handles.
- The device remains hot for some time after it has been switched off. Leave it to cool off before cleaning or maintenance.
- **Never** move the device during operation.



## **WARNING! Risk of fire or explosion!**

To avoid the hazard results please follow the safety instructions below.

- In order to avoid risk of fire and damage to the device, **never** place kitchen utensils, towels, paper and the like on the device during operation.
- **Never** use the device near flammable or inflammable materials (such as alcohol, spirits, petrol etc). High temperature may cause their evaporation and due to contact with the ignition sources the deflagration may occur, and it may result in personal injuries and material damage.
- **Never** use the device near flammable objects, e.g. curtains, beneath cupboards.

- When a fire arises unplug the power cord from the socket before you initiate appropriate measures for fire-fighting.

**Caution: Never extinguish the fire with water when the power plug is connected to the socket. Electric shock hazard!**

Provide sufficient supply of fresh air.

### 1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The pizza oven is intended only for baking pizza.



#### **CAUTION!**

**Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.**

**Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.**

**The operator is liable for all damages resulting from inappropriate use.**

## 2. General information

### 2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



#### **CAUTION!**

**Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!**

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

### 2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



#### **NOTE!**

**The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.**

### 2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

## 3. Transport, packaging and storage

### 3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

### 3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



**If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.**

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

### 3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.


## 4. Technical data

### 4.1 Technical specification

| Description        | Pizza oven ST350 TR                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Code no.:          | <b>203515</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
| Material:          | Stainless steel<br>Cooking chamber: stainless steel                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Model:             | <ul style="list-style-type: none"><li>▪ The connection of the device: ready to connect</li><li>▪ Number of baking chambers: 1</li><li>▪ Capacity - pizza quantity: 1 pizza Ø 34 cm</li><li>▪ Oven functions: Upper / lower heat</li><li>▪ Timer: optionally 0 - 15 minutes or continuous operation</li><li>▪ Signal tone after expiry of the time</li><li>▪ Heat-up time: 10 minutes.</li><li>▪ Pizza grid (size: W 340 x D 335 x H 5 mm), firmly connected to the oven door and handle</li><li>▪ Crumb drawer with foldable handle</li></ul> |
| Temperature range: | 50 °C to 300 °C                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| Power supply:      | 1.75 kW / 230 V 50/60 Hz                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Dimensions:        | W 500 x D 420 x H 215 mm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| Inner size:        | W 350 x D 345 x H 70 mm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Weight:            | 14.55 kg                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |


We reserve the right to make technical changes!

## 4.2 Overview of parts

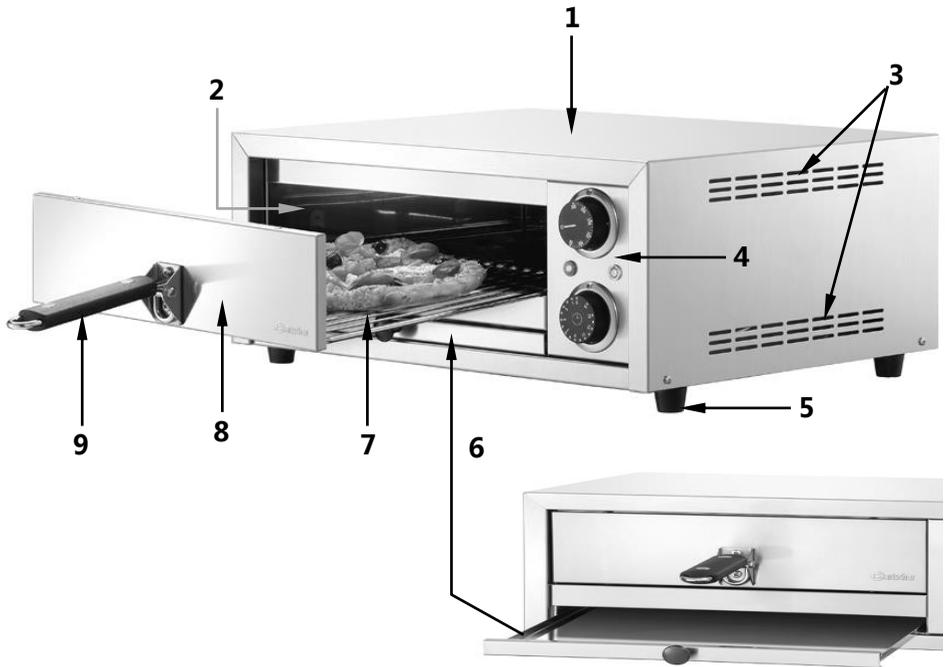

- 1** Housing
- 2** Baking chamber
- 3** Ventilation slots
- 4** Control panel
- 5** Feet (4)
- 6** Crumb drawer
- 7** Pizza grid
- 8** Oven door
- 9** Oven door handle

## 4.3 Control panel elements

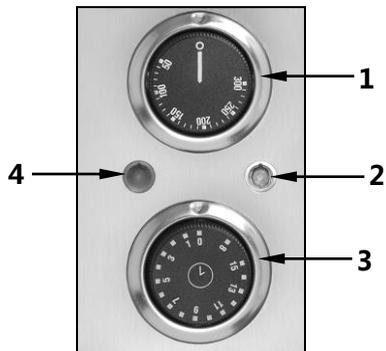

- 1 Temperature control knob for upper / lower heat
- 2 Heating indicator light (red)
- 3 Time control knob (0 – 15 min. / continuous operation)
- 4 Power light (green)

## 5. Installation and operation

### 5.1 Installation

#### Positioning

- Unpack the device and remove and dispose of all package materials according to the environment protection regulations.
- Put the device on an even, stable, dry and waterproof surface which is resistant to high temperature.
- **Never** place the device on an inflammable surface.
- Do not place the device near open flame, electric heaters or other heat source.
- **Never** locate the device in the direct vicinity of walls, low wall, kitchen furniture, or other objects. Leave at least 10 cm free space around the device. Follow the valid fire protection regulations.
- When it is not possible to leave the recommended distance, use appropriate protection measures (e.g. heat-resistant foil) that will ensure keeping the wall temperature within the safe range (up to 60 °C).
- Do not place the device in places of high air humidity. The excessive humidity may damage the device.
- **Never** put the device in a moist or wet area.

- The device may only be installed in a well ventilated room.
- Never cover the ventilation holes. Never cover the device with towels or tablecloth. Never hang any objects on the device.
- When locating the device, make sure the power plug is easily accessible to immediately unplug the device, if necessary.
- Before starting operation, remove the protective film from the device. Remove the film slowly in order not to leave the glue residues. Any glue residues may be removed with use of a suitable solvent.



**CAUTION!**

**Never remove the nameplate and warning signs from the device.**

### Connection



**DANGER! Electric shock hazard!**

**The device can cause injuries due to improper installation! Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!**

- The power supply circuit with the socket must be protected by the fuse of at least 16A. Connect the device directly to a single grounded socket. Do not use any power bar or multiple socket.

## 5.2 Operation

### Prepare the device

- Before the first use the device should be thoroughly cleaned according to the instructions in **section 6 “Cleaning”**.
- Insert the crumb drawer into the provided slot underneath the device. Never use the device without properly attached crumb drawer. Empty and clean the crumb drawer regularly during operation.
- Connect the device to a single grounded socket.



**CAUTION!**

**Never leave the operating device without supervision!**

### Settings

#### Temperature

- Upper/lower heat temperature is set with the **temperature control knob**.  
The temperature range that can be set is between 50 °C and 300 °C. The set temperature should be relevant to the foods that are going to be cooked.
- The orange **heating indicator light** will be on. It will be off when the set temperature has been reached and it will be on again when the temperature in the baking chamber has gone down.

The device will be heating up again up to the set temperature.



## Time

- To turn the device on, the **time control knob** should be set at a position between **0 - 15** (minutes). The green **ON/OFF** indicator will come on signalling that the device is switched on.
- Set the desired baking time. When the cooking time elapses, the signal tone is emitted.
- If you wish to set the time longer than 15 minutes choose the position “∞” for continuous operation turning the time control knob to the left.
- To interrupt the set time or continuous operation turn the time control knob to the left to the “0” position.



## Pizza baking



- Using the handle pull out the oven door together with the grid.
- Place the pizza ready to bake (Ø do 34 cm) on the pizza grid.
- Using the handle push the oven door together with the grid into the baking chamber.
- Set the desired baking temperature and time according to the instructions in section “**Settings**”.

- When the baking time elapses, the signal tone is emitted.
- After baking, remove the baked pizza from the oven. To do so, use the handle to pull the oven door together with the grid out of the baking chamber and place the pizza on the relevant plate.



**HOT SURFACE! Risk of burns!**

**External surfaces of the pizza oven become very hot during its operation. Do not touch them with bare hands. Use the protective gloves to avoid burns. Use the door handle for opening and closing the door.**

- When the device is not to be used again, set the temperature and time control knob to position “0”. Finally, disconnect the device from the socket (pull the plug!).

## 6. Cleaning



### **WARNING!**

**Before cleaning, turn the temperature control knob and time control knob to position “0” and disconnect the device from the power supply (pull out the plug!).**

**Leave the device to cool down completely.**

**Never clean the device with use of water jet!**

**Protect the device from the water penetration.**



### **CAUTION!**

**Never use sharp, scouring, caustic or aggressive cleaning agents, agents containing benzene or solvents because they may damage the surface of the device.**

- Clean the device regularly.
- Remove and empty the crumb drawer.
- Remove the pizza grid and oven door from the device.
- Clean the removed elements of the device with a soft cloth or sponge and warm water with mild cleaning agent. Thoroughly rinse in clean water and finally dry the cleaned elements.
- Wipe the housing of the device with a soft, moist cloth. Use a mild cleaning agent when required.
- Periodically check the device ventilation slots and clean them with use of a soft brush or vacuum cleaner to assure air circulation inside the device.

### **Storing of the device**

- If the device is not used for a longer time, clean it according to the aforementioned description and store it in dry, clean place protected against cold, sun, and children. In order to protect the device against dust and dirt pack or cover it. Do not place any heavy objects on the device.

## 7. Waste disposal

### Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



### NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.