

Kids W4110-150U / 150W / 150A



125631-125631V1-125631V2

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 1.0

Date of preparation: 2021-11-17

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check.....	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data.....	9
4.1	Technical Specifications	9
4.2	Functions of the Appliance.....	10
4.3	List of Components of the Appliance	11
5	Installation and operation	12
5.1	Installation.....	12
5.2	Operation	13
6	Cleaning	15
6.1	Safety Instructions for Cleaning	15
6.2	Cleaning.....	16
7	Disposal.....	16



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

EN

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.

EN

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Safety

Children may only take dishes or food products from the device!

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Keeping the prepared food warm in suitable GN containers.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Heating-up flammable, hazardous to health and volatile, etc. liquids and materials.

2 General information

2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

EN

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Buffet trolley Kids W4110-150U / 150W / 150A
Art. No.:	125631-125631V1-125631V2
Material:	laminated wood; stainless steel, plastic
Colour:	elm / wenge / anthracite
Number of slits:	1
Basin size, GN format	4 x 1/1 GN
Max. GN container depth, in mm:	150
Temperature range, min.–max., in °C:	30 - 90
Serving height, in mm:	700
Dimensions of tray slide shelf (W x D), in mm:	1.460 x 250
Number of bars:	4
Bar dimensions (W x D), in mm:	528 x 30
Power supply:	2,73 kW 230 V 50 Hz
Dimensions (W x D x H), in mm:	1.460 x 1.160 x 1.305
Weight, in kg:	111,6

We reserve the right to implement technical modifications.

Version / Characteristics


- Folding tray slide shelf
- Sneeze guard
- Lighting:
 - infrared heating lamps
 - switched on separately
- Drain tap
- Type of power cord:
 - spiral cord
 - cord length: 1 m
- Swivel castors: 5 swivel castors, 2 with brakes
- Indicator lights:
 - heating-up
 - lighting
- State at delivery: assembled for ready to use
- Features:
 - stainless steel basins
 - rounded edges
- The set includes: 4 bars, length 528 mm, width 30 mm
- The set does not include: GN container

EN

4.2 Functions of the Appliance

The buffet trolley is intended for displaying and serving warm food prepared in suitable GN containers. Thanks to the appropriate height of service, children can also enjoy the possibility of self-service and the choice of perfectly warm food.

4.3 List of Components of the Appliance

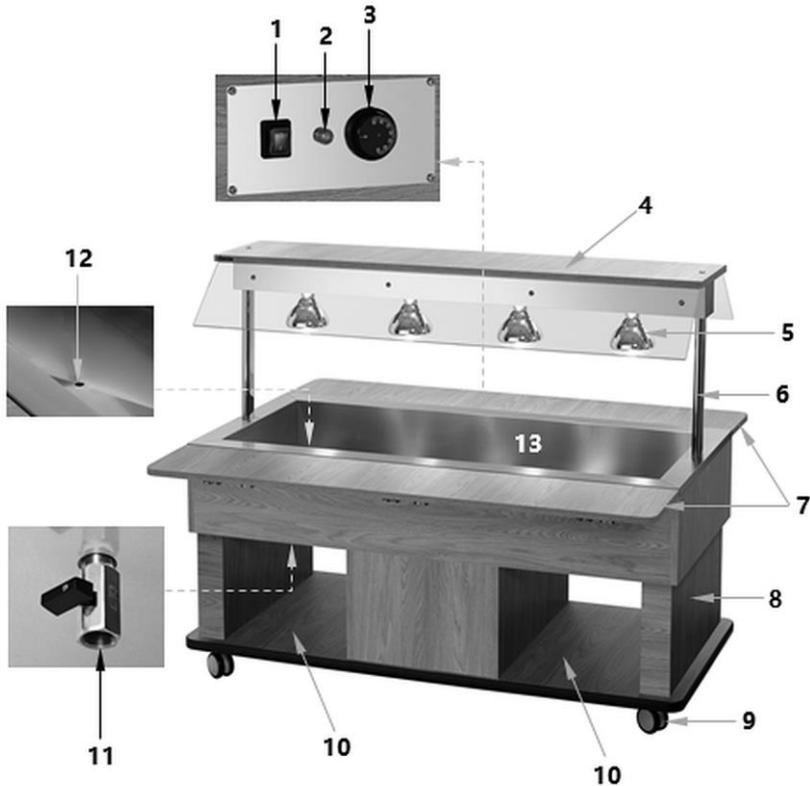

EN

Fig. 1

- | | |
|---|--|
| 1. Lighting ON/OFF switch with integrated power indicator light (green) | 2. Heating-up indicator light (orange) |
| 3. Temperature controller | 4. Sneeze guard |
| 5. Infrared heating lamps (4 pcs) | 6. Sneeze guard bars (2 pcs) |
| 7. Tray slide shelf (2 pcs) | 8. Body |
| 9. Swivel castors (4 pcs), 2 with brakes | 10. Bottom working surface |
| 11. Water drain tap | 12. GN container basin drain opening |
| 13. GN containers basin | |

5 Installation and operation

5.1 Installation



CAUTION!

Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- Leave at least 20 cm clearance from flammable walls and items.

- When the appliance is move to the selected location, block the swivel castors with parking brakes.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation

Tips for the User

- Do not place any objects on the sneeze guard (for example, do not place a stack of plates).
- To place utensils, etc., use bottom working surfaces.
- Avoid large amounts of water coming into contact with the wooden parts to prevent blistering and scratching.
- If possible, put warm food in appropriate GN containers into the GN container basin, so that they are ready for serving faster.

EN

Preparation of the Appliance

1. Before use, clean the appliance, observing instructions in section 6 'Cleaning'.
2. Dry the appliance thoroughly.
3. Screw the enclosed infrared heating lamps into the designated fittings.
4. Make sure the drain tap is closed.
5. Make sure that the appliance is switched off.
6. Pour water into the GN containers basin, up to MAX marking.

ATTENTION!

Never use the appliance without water.

Check the water level in the GN containers basin regularly. If needed, top up with water.

Appliance Start-up

1. Plug the appliance into a suitable single socket.
2. Use the temperature controller to set the desired temperature within the range of 30–90°C.

The heating up indicator light (orange) lights up.

As soon as the set temperature is reached, the heating up indicator light (orange) goes off and lights up again, when the temperature of the GN containers basin drops and the heater switches on again.

The needed warm food may be put in the appliance in suitable GN containers only when the appliance reaches the set temperature.

3. If needed, switch the lighting on the sneeze guard on (infrared heating lamps) using the lighting ON/OFF switch.

The green indicator light integrated in the ON/OFF switch will be lit.

Heating of Food

1. Fill in the GN containers with warm food and place them in the GN containers basin.

The food will be kept warm, at the selected temperature, and for the required period.

2. Serve the warm food as needed.

Switching the Appliance Off

1. If the appliance is not be used any more, set the temperature controller to '0' position.
2. Use the lighting ON/OFF switch to switch the lighting on the sneeze guard on. The green indicator light integrated in the ON/OFF switch will be off.
3. Disconnect the appliance from the socket (pull the plug out).

Cleaning

Drain water.

WARNING! Risk of scalding!

The water in the GN containers basin may heat up considerably.

Wait for the water to cool down before draining.

1. To drain water from the GN containers basin, perform the following:
 - place a suitable container under the spout pipe (A);
 - open the drain valve (A);
 - drain water.
2. Close the drain tap.

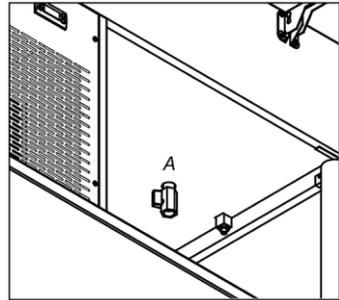


Fig. 2

6 Cleaning

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance regularly at the end of each working day, and, if necessary, also in the meantime or when the appliance is not to be used for a longer time.
2. Remove GN containers from the basin only when the appliance cools down completely.
3. Drain water from the GN containers basin (section '**Draining Water**').
4. Clean the GN containers basin thoroughly with a soft cloth and a mild cleaning agent.
5. Wipe with a clean cloth.
6. Dry the GN containers basin thoroughly afterwards.
7. Clean the hygienic cover with a soft, damp cloth and dry it thoroughly.
8. Clean laminated wooden surfaces only with a slightly damp cloth. For stubborn stains, use a little alcohol.
9. Wash GN containers regularly and thoroughly in warm water with a soft cloth and a mild cleaning agent.
10. Rinse in fresh water.
11. Dry GN containers or leave them in the open air to dry.

EN

7 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.