

PRO XTRA 2,5L



150182

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

Technical Support Hotline: +49 5258 971-197

www.bartscher.com



Version: 2.0

Date of preparation: 2022-03-15

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words.....	2
1.2	Safety instructions.....	3
1.3	Intended Use	5
1.4	Unintended Use	5
2	General information	6
2.1	Liability and Warranty	6
2.2	Copyright Protection	6
2.3	Declaration of Conformity	6
3	Transport, Packaging and Storage	7
3.1	Delivery Check.....	7
3.2	Packaging	7
3.3	Storage	7
4	Technical Data.....	8
4.1	Technical Specifications	8
4.2	List of Components of the Appliance	9
4.3	Functions of the Appliance.....	9
5	Installation and operation	10
5.1	Installation.....	10
5.2	Operation	11
6	Cleaning	13
6.1	Safety Instructions for Cleaning	13
6.2	Cleaning.....	13
7	Possible Malfunctions.....	14
8	Disposal.....	14



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

EN

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.
- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.

- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

EN

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Mixing, pureeing, chopping of suitable food products, as well as ice crushing.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

2 General information

2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Mixér PRO XTRA 2,5L
Item No.:	150182
Material:	Plastic, ABS
Jug material:	Polycarbonate, transparent
BPA-free:	yes, 0.1 mg/kg
Volume, in l:	2,875
Usable volume, in l:	2,5
Rotational speed (RPMs), max.:	28.000
Type of protection:	IP20
Power supply:	1,68 kW 220-240 V 50/60 Hz
Dimensions (W x D x H) in mm:	240 x 300 x 565
Weight in kg:	9,1

EN

We reserve the right to implement technical modifications!

Version / Characteristics

- Blade design: stainless steel, 6-arm
- Detachable noise protection hood
- Speed control: stepless
- Pulse operation function
- Control: switch, knob
- 2 safety switches: on the container and hood
- Overheating protection
- ON/OFF switch
- Adjustable feet: hard rubber
- The set includes: 1 stamper
- Ideal for use at the counters

4.2 List of Components of the Appliance



- | | |
|---------------------------------|--------------------------|
| 1. Noise protection hood handle | 2. Noise protection hood |
| 3. Container opening | 4. Container handle |
| 5. Container | 6. Blade |
| 7. Pulse operation switch | 8. Speed regulator |
| 9. ON/OFF switch | 10. Adjustable feet (4x) |
| 11. Motor block | |

4.3 Functions of the Appliance

The blender is designed for mixing, preparation of shakes, pureeing foods, blending smoothies, as well as ice crushing.

5 Installation and operation

5.1 Installation

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Leave at least 20 cm clearance from flammable walls and items.

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.

5.2 Operation



WARNING!

Injury hazard!

The blade at the bottom of the container is very sharp!

Do not reach into the container.

Risk of scalding!

Moving elements become hot during prolonged use!

Do not touch the moving elements

Risk of scalding by escaping vapour and spatters!

Hot liquids should be mixed only with low speeds and with the lid tightly fitted.

EN

Before the First Use

1. Make sure that all components of the appliance and accessories are available and in sound condition.
2. Prior to first use, thoroughly clean the appliance and equipment according to instructions in section **6 “Cleaning”**.
3. All cleaned parts should be dried thoroughly.

Appliance Start-up

1. Prepare food products for processing.
2. Fill the container with necessary products.
3. Place the lid on the container.
4. Close the noise protection hood.
5. Plug the appliance into the socket.
6. Turn the appliance on with the ON/OFF switch.

7. Set the right speed with the speed regulator, suitable for the products processed.
8. Rotate the speed regulator clockwise to increase the speed and counter-clockwise to reduce the speed.

NOTE: For safety reasons, the appliance is equipped with 2 safety switches, which makes it possible to operate the appliance only with the container on and the noise protection hood closed.

Pulse Operation Function

The pulse operation button (the right button) maintains the motor unit operating at full speed as long as it is pressed. When the button is released, the motor stops.

The pulse operation function is especially recommended for crushing ice.

Switching the Appliance Off

1. Switch the appliance off with the ON/OFF switch and wait for the motor to stop completely before removing the container.

When the container is removed, the motor is automatically disconnected by means of micro-switch.

2. Unplug the appliance.

6 Cleaning

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Clean the appliance regularly after the end of each working day, or more frequently if needed.
2. Pour water and mild cleaning agent into the container.
3. Put the lid on the container and close it.
4. Insert the container onto the motor unit.
5. Operate the appliance for 10 - 20 seconds at full speed.
6. Then thoroughly rinse the container in clean water.

The container is not suitable for washing in a dishwasher.

7. Remove the noise protection hood for cleaning and wash it in warm water with mild cleaning agent.
8. Wipe the appliance motor block with a soft, moist cloth.
Never immerse the motor block nor bottom part of the container in water nor in any other liquids!
9. Use soft cloth only for wiping dry.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. When malfunction cannot be removed, contact the technical service.

Error	Possible Cause	Solution
The appliance cannot be switched on.	The noise protection hood is closed incorrectly.	Close the noise protection hood correctly.
	The container is not inserted correctly.	Insert the container correctly onto the motor unit.
	The ON/OFF switch has not been operated.	Switch the appliance on with the ON/OFF switch.
The appliance stops during operation.	The overheating protection has been activated.	Switch the appliance off and pull the plug out. Let the appliance cool off for a approx. 30 minutes, and restart the appliance afterwards.

EN

8 Disposal

Electrical Appliance

	<p>Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.</p>
--	---

Electrical appliances should be returned to designated collection points.