



Pos.	Artikelbeschreibung	Description of item	Artikel Nr./Item No.
31428	Fuß, Edelstahl 100 x 80, 2"	Base, stainless steel 100 x 80, 2"	E031428
60021	Auflageschiene	Guiding rail	E060021
60033	Kamingitter	Draught diverter grid	E060033
60045	Dichtung z. Backofentür	Gasket f. oven door	E060045
60119	Lampenabdeckung, grün	Lamp cover, green	E060119
60120	Lampenabdeckung, rot	Lamp cover, red	E60120
60144	Lampenabdeckung, neutral	Lamp cover, neutral	E060144
60145	Kontrolllampe grün	Green indicator light	E060145
60248	Gegenstück z. Türscharnier	Counterpiece f. door hinge	E0MA1304500
60272	Backofentür	Oven door	E060272
60336	Anschlussklemme, 6-polig	Terminal clamp, 6-pole	0A036206
60467	Backofenboden hinten	Oven bottom, back	E060467
60469	Backofenboden vorne	Oven bottom, front	E060469
60609	Skalenring z. Knebel	Thermostat knob	E060609
60610	Markierung/Nullpunkt	Marking/zero point	E060610
60779	Sicherheitsthermostat 360 ° C, 20 A	Safety thermostat 360°C, 20 A	E060779
60786	Thermostat 75 - 295° C, 16 A	Thermostat 75-295°C, 16 A	E060786
60833	Bedienblende	Panel cover	E061855
60858	Heizkörper 2300 W	Heating element 2300 W	E064871
60897	Schalter, 4-polig, 16 A	Switch, 4-pole, 16 A	E060897
60898	Schalter, 2-polig	Switch, 2-pole	E060898
60996	60996 GN Rost 2/1, CNS	GN grid 2/1, SS	A101092
61230	Zugentlastung	Strain relief	E061230
61307	Kontrolllampe rot	Red indicator light	E061307
61364	Magnet z. Tür D22 x 3	Magnet f. door D22 x 3	E061364
61548	Heizkörper 3300 W	Heating element 3300 W	E064873
62045	Türscharnier oben rechts	Door hinge, top right	E062045
62229	Tür 900, rechts Anschlag	Door 900, right side	296014
62237	Türscharnier unten rechts	Door hinge, bottom right	E062237
62242	Verbindungsset	Connector set	E062242
62308	Knebel	Handle	E062308
62309	Knebel	Handle	E062309
62310	Knebel	Handle	E062310
62411	Kochmulde	Cooking top	Auf Anfr./On req.
62682	Kochplatte, eckig 4 kW, 230 V	Angular cooking plate 4 kW, 230 V	E065289
63044	Blende, unten	Lower blind	E063044
63548	Schalter 32 A	Switch 32 A	E063548

