



A150510

Bedienungsanleitung

Party-Kochtopf, 16L

Seite 1 bis 16

D/A/CH

Instruction manual

Party stockpot, 16L

from page 17 to 32

GB/UK

Mode d'emploi

Soupière Party, 16L

de page 33 à page 48

F/B/CH

ENGLISH

Table of contents

1. Safety 18
1.1 Safety instructions 18
1.2 Key to symbols 22
1.3 Proper use 23

2. General information 24
2.1 Liability and Warrantees 24
2.2 Copyright protection 24
2.3 Declaration of conformity 24

3. Transport, packaging and storage..... 25
3.1 Delivery check 25
3.2 Packaging..... 25
3.3 Storage..... 25

4. Technical data 26
4.1 Overview of parts 26
4.2 Technical specification 27

5. Installation and operation..... 27
5.1 Installation 27
5.2 Operation..... 28

6. Cleaning and descaling 30

7. Waste disposal 32

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com



Read this instruction manual before using and keep them available at all times!

Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- The device must be operated only in perfect technical condition.
- The device must not be operated by **children below 8 years old**, as well as persons physically, sensorially, or mentally impaired, or having low experience and/or knowledge, unless they are supervised or instructed in range of safe operation and resulting hazards. **Children** should be continuously supervised in order to avoid playing with the device. Cleaning and **maintenance** must not be realized **by children** left without supervision. **Children below 8 years old** must not be present in the vicinity of the device and the supply cable.
- **Never** leave the device unattended during its operation.
- The device is not designed for operation with external timer switch or remote control.



WARNING!

Electric shock hazard!

- Check the device and its equipment for perfect condition before each start-up. Do not use the device in case of incorrect operation, damages, or dropping on the floor.
In such cases disconnect the device from the power supply and order its inspection to the qualified electrician.
- Periodically check the supply cable for damages. Do not operate the device with damaged supply cable. When the cable is damaged it should be replaced by the service company or qualified electrician in order to avoid hazards.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the electric shock hazard will occur.
- Never immerse the device, supply cable, or plug in water or other liquids.
- Do not use any aggressive agents and protect the device from the water penetration.
- **Never** operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.
- The maintenance and repair works must be performed only by the qualified professionals with use of original spare parts and equipment.
Never attempt to repair the device by yourself!

- Do not use the accessories and spare parts not recommended by the manufacturer. They may be dangerous for the user and other people or may damage the device, harm anyone, and cause loss of warranty rights.
- In order to avoid hazards and assure optimum performance it is forbidden to make any replacements or modifications in the device, not expressly approved by the manufacturer.
- The supply cable must not touch the heat sources or sharp edges. The supply cable should not hang from the table or other surface. Pay attention to avoid stepping on or tripping by the cable.
- The supply cable must not be bent, crushed, tangled, it must be always completely unwound. Do not place the device or other objects on the supply cable.
- Do not place the supply cable on carpets or other flammable materials. The supply cable must not be covered, put in operating range, or immersed in water or other liquids.



HOT SURFACE!

Burn and injury hazard!

- **Never** move the device when it contains hot liquids or food, as they may cause serious burns. Before cleaning or moving wait for the device to cool down. Always use the device handles to move it.
- During the device operation it releases hot steam. Lid should be lifted or removed only with use of protective gloves or appropriate cloth.
- Liquid level must not reach **higher than 4 cm** below the upper vessel edge. In case of overfilling hot liquid may spill and cause burns.
- External surfaces of the device become very hot during its operation. Do not touch them with bare hands to avoid burns. The device should be operated with use of temperature control knob and handles only.



WARNING!

Fire and explosion hazard!

- Do not use the device near the heat sources (kitchen oven, gas flame, etc.) and in explosion hazard space, where flammable liquids or gases are present. High temperature may cause their evaporation and due to contact with the ignition sources the deflagration may occur, and in result the injuries and damages. Assure free air circulation.
- Place the device on an even and stable surface, resistant to high temperature. Leave sufficient free space around the device in order to avoid damages due to high temperature or steam and assure appropriate work conditions.
- In case of fire before the fire extinguishing activities remove the plug from the socket or disconnect the device from the power supply (pull the plug!). **Note:** Do not spray the device with water when it is still connected to the power supply: **Electric shock hazard!**



CAUTION!

In order to avoid any damages of the device follow the instructions below.

- **Never** use the device without liquid.
In case of activation of empty device it is additionally protected from overheating by **dry operation protection**. When that protection activates, leave the device for cooling before filling with water, otherwise steam may occur and cause burns and the enamelled surface may become damaged.
- Do not use sharp or pointed objects for stirring as they may damage the enamelled surface.
- Never wash the device or its elements in the dishwasher.
Do not wash the device in running water!
- The device is designed for indoor use only.
- Do not store the device in open air or humid rooms.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The device is intended for home use or in similar places such as:

- in stores, offices, or similar work places;
- in agricultural farms;
- for the customers in hotels, motels, and similar places;
- in breakfast restaurants.

Party stockpot is designed for:

- cooking meat, one-plate dishes, soups, etc.;
- maintaining temperature of food and drinks;
- blanching vegetables.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:


- do not store outdoors,
- keep it dry and dust-free,
- do not expose it to aggressive media,
- do not expose it to direct sunlight,
- avoid mechanical shocks and vibration,
- in case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly, if required refresh or renew.

4. Technical data

4.1 Overview of parts



Bottom of the device

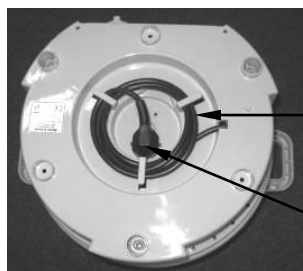

- 1 Lid handle
- 2 Lid
- 3 Pot handle
- 4 Pot tank
- 5 Temperature control
- 6 Heating indicator (red)
- 7 Feet
- 8 Base unit
- 9 Cable compartment
- 10 Plug compartment (bottom of the device)

4.2 Technical specification

Name	Party stockpot, 16L
Code-No.:	A150510
Realization:	pot tank: enamelled steel; bottom, lid, handles: plastic
Power supply:	1.8 kW / 230 V / 50-60 Hz
Capacity:	16 litres
Temperature adjustment:	30 °C – 90 °C „obtaining juice / cooking“
Dimensions:	W 465 x D 365 x H 370 mm
Weight:	4.7 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material.



CAUTION!

Never remove the rating plate and any warning signs from the device.

- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device at the edge of a table to avoid accidents.
- **Never** place the device in humid or wet environment.
- **Never** place the device on the flammable surfaces.
- There must be sufficient distance to the walls, cabinets, shelves, etc. during operation in order to assure free circulation of hot air released from the device.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

Before operation

- Due to hygienic reasons before the first use of the device fill it with approx. 5 litres of water and boil it for approx. 5 minutes; set the temperature control knob to „**obtaining juice / cooking**“. Read instructions in section „**Heating of liquids or food**“.
- Then rotate the knob counterclockwise to position „**0**“, disconnect the device from the socket (pull the plug!) **and wait until it cools down**. Empty the pot and rinse it thoroughly with clean water.

Heating of liquids or food



WARNING! Electric shock hazard!

Avoid splashes of liquid during operation as it may cause short-circuit in adjustment electronic parts and lead to injuries due to electric shock.


- It is very important to **always** heat **drinkable liquids only** in the pot. Do not fill Party stockpot with any **non-drinkable liquids**, like acids, lyes, oils, nitrates, etc.



CAUTION!

Never turn on the device without liquid or food, as it may lead to damages of enamel coating!

- Rotate the temperature control knob to position „0“.
- Place appropriate liquid or food in the Party stockpot. Fill the pot with liquids or food **up to 4 cm below** the upper vessel edge.
- Before turning on cover the vessel with lid which must remain on it during heating. **Burn hazard during cooking!**
- Connect the device to grounded socket only after filling.
- Temperature control knob allows for stepless adjustment: **30 °C – 90 °C / "obtaining juice / cooking"** (see fig. below)

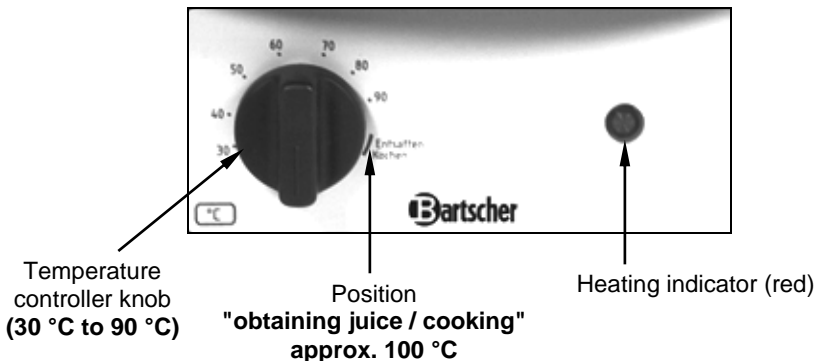

- Select required position by rotating the temperature controller clockwise. **Red heating indicator** will come on. After reaching temperature selected from range **30 °C to 90 °C** heating will be automatically turned off by thermostat.
- After temperature drop thermostat will reactivate heating, which allows for long maintaining of liquid in required temperature.
- When temperature value of **100 °C** is required, rotate the temperature control knob to „**obtaining juice / cooking**“ position clockwise. After reaching that temperature the liquid is boiled and thermostat **does not turn heating automatically off.** In order to obtain lower temperature for maintaining temperature of liquid or food rotate the temperature control knob counterclockwise. When it is not required, turn the device off to avoid content evaporation.

 **NOTE!**

Heating time depends on content volume.

Removing of liquids/food



WARNING! Burn hazard!

During removing the lid there is a risk of burns cause by released steam and condensate. Remove the lid carefully to allow the condensate to drain into the pot.

- Party stockpot allows for taking liquids or soups and serving them as required. Then close the lid to reduce heat losses.
- After use set the temperature controller in position „0“ and disconnect the device from the power supply (pull the plug!), wait for the device to cool down, and empty it completely.
 - ❖ The device is equipped with **overheating/dry operation protection**. In case of accidental start-up without liquid or with its insufficient amount the protection will be activated and the device will be automatically turned off.

Rotate the temperature control knob to position „0“, disconnect the device from the socket (pull the plug!), and wait at least 30 minutes for cooling down.
After cooling down the pot may be refilled with liquid and used again as usually.

6. Cleaning and descaling



WARNING!

Before cleaning disconnect the electric power supply (pull the plug!) and wait for the device to cool down.

The device is not designed for flushing with direct water jet. Therefore do not use the pressurized jet for cleaning the device!

Never immerse the bottom and supply cable in water or other liquids!

Protect the device from the water penetration.

Regular cleaning

- The device should be regularly cleaned after use and as required.
- Always use the soft cloth only, never use any abrasive cleaning agents which may scratch the device.
- Do not use any flammable cleaning agents (alcohol, etc.) as **they increase fire and explosion hazard** during the next use.

- Clean the pot interior thoroughly, rinse a few times with clean water, and empty the vessel completely.
- Wash the lid in warm water with the gentle washing agent. Rinse with clean water.
- Wipe the device external surfaces with soft, moist cloth. Use the gentle washing agent in case of stubborn dirt. **Never** use any aggressive cleaning agents.
- Wipe the supply cable and plug with dry cloth.

Descaling

- Hard water may lead to scaling in the pot. This results in longer heating time and might damage the device. **When possible, use pre-filtered water in order to avoid scaling!**



CAUTION!

Complaints will not be accepted if the device is not descaled regularly as described in the instruction manual. Such complaints are no cases of warranty. Descale the device regularly!

- We recommend ecological descaling with use of vinegar or citric acid. Prepare **water and vinegar** solution (ratio **3:1**) or **water and citric acid** solution (**2 table-spoons** per **1 l** of water) and pour it into the tank. Wait some time (approx. 1 hour) and boil the solution.
- Wait some time for the device to cool down, drain the descaling solution and rinse the tank with clean water **a few times** to remove the solution residuals.
- When using other commercial descalers follow the manufacturer's instructions.

Storage

- In case of longer standstill clean and descale the device according to the instructions above. Place supply cable and plug in appropriate places in the bottom of the device. Store the device in wventilated, dry, clean place, protected from frost and sunlight, and inaccessible for children.

7. Waste disposal

Old devices



The electric devices are marked with this symbol. You must not dispose of electric devices with household waste. When the device may not be longer used each consumer is obliged to dispose of the device at the dedicated local collection point, separately from household waste.



NOTE!

Electric devices should be used and disposed of properly to prevent the impact on the environment.

- Disconnect the device from the power supply and remove the power cord from the device.