

„Piccolino“



A120787

Read these instructions before using and keep them available at all times!

**ENGLISH
Translation
of the original instruction manual**

- 1. General information 16**
 - 1.1 Information about the instruction manual 16
 - 1.2 Key to symbols 16
 - 1.3 Liability and Warrantees 17
 - 1.4 Copyright protection 17
 - 1.5 Declaration of conformity 17
- 2. Safety 18**
 - 2.1 General information 18
 - 2.2 Safety instructions for use of the device 18
 - 2.3 Intended use 19
- 3. Transport, packaging and storage 20**
 - 3.1 Delivery check 20
 - 3.2 Packaging 20
 - 3.3 Storage 20
- 4. Technical data 21**
 - 4.1 Overview of parts 21
 - 4.2 Technical specification 22
- 5. Installation and operation 22**
 - 5.1 Safety instructions 22
 - 5.2 Installation and connection 23
 - 5.3 Operation 24
- 6. Cleaning and maintenance 27**
 - 6.1 Safety advice 27
 - 6.2 Cleaning 27
 - 6.3 Safety instructions for maintenance 28
- 7. Waste disposal 28**

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120

1. General information

1.1 Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards, which could lead to injury.

Please follow the instructions very carefully and proceed with particular attention in these cases.



WARNING! Electrical hazard!

This symbol draws attention to potential electrical hazards. If you do not follow the safety instructions, you may risk injury or death.



CAUTION!

This symbol highlights instructions, which should be followed to avoid any risk of damage, malfunctioning and/or breakdown of the device.



NOTE!

This symbol highlights tips and information, which have to be followed for an efficient and trouble-free operation of the device.



WARNING! Hot surface!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!

1.3 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology. If you have any questions, you should contact the manufacturer.



NOTE!

Read the instruction manual carefully before using the device. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.

The instruction manual should be kept near the device, easily accessible for anyone wishing to work with or using it. We reserve the right to make technical changes for purposes of developing and improving the useful properties.

1.4 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

1.5 Declaration of conformity

The device complies with the current standards and directives of the EU.

We certify this in the EC declaration of conformity.

If required we will be glad to send you the according declaration of conformity.

2. Safety

This section provides an overview of all important safety aspects.

In addition every chapter provides precise safety advice for the prevention of dangers which are highlighted by the use of the above mentioned symbols.

Furthermore, attention should be paid to all pictograms, markers and labels on the device, which must be kept in a permanent state of legibility.

By following all the important safety advice you gain an optimal protection against all hazards as well as the assurance of a safe and trouble-free operation.

2.1 General information

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

Knowing the contents of the instruction manual as well as avoiding mistakes and thus operating this device safely and in a fault-free manner is very essential to protect yourselves from the hazards.

To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.

This device may only be operated in technically proper and safe condition.

2.2 Safety instructions for use of the device

The specifications regarding the industrial safety are based on the Regulations of the European Union applicable at the time of manufacturing the device.

If the device is used commercially, the user is obliged to ensure that the said industrial safety measures concur with the state of the rules and regulations applicable at the time in question for the entire period of use of the device and to comply with the new specifications.

Outside the European Union, the industrial safety laws applicable at the place of installation of the device and the regional territorial provisions must be complied with.

Besides the industrial safety instructions in the instruction manual, the general safety and accident prevention regulations as well as environment protection regulations applicable for area of application of the device must be followed and complied with.



CAUTION!

- The device can be used by children **8 years and up**, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers.

- **Children** should not play with the device.
- Cleaning and **maintenance cannot be performed by children** younger than 8 years old and must be done under supervision.
- **Children under the age of 8 years old** must be kept away from the device and its power cord.
- Please keep these instructions and give them to future owners of the device.
- All people using the device should follow the instructions and tips contained in these instructions.
- Only use the device indoors.

2.3 Intended use

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The device is not adapted for use with an external timer or remote control.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in other service locations;
- in suburban properties;
- by guests of hotels, motels and other places of accommodation;
- in Bed & Breakfasts.

The convection oven is intended **only** for **preparing** appropriate **food products**.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

 
 
- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

4.1 Overview of parts



- ① Housing
- ② Ventilation ducts
- ③ Control panel
- ④ Feet
- ⑤ Crumb tray
- ⑥ Grid
- ⑦ Glass door handle
- ⑧ Glass door
- ⑨ Grid/tray handle
- ⑩ Baking tray
- ⑪ Chicken skewer
- ⑫ Chicken skewer handle

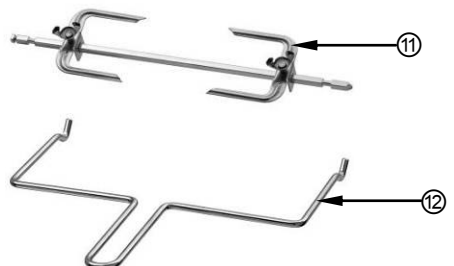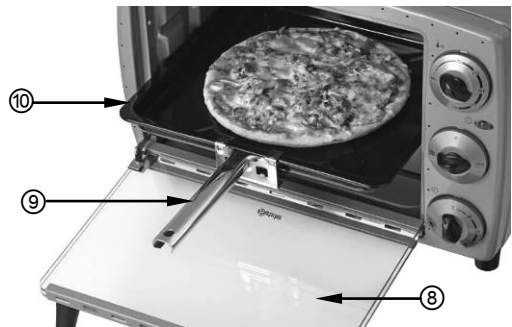

4.2 Technical specification

Name	Convection oven "Piccolino"
Code-No.:	A120787
Construction:	exterior: painted metal, interior: zinc-coated steel
Cooking compartment capacity:	19 liters
Thermostat:	max. 230 °C
Timer:	0 – 60 min.
Power:	1.5 kW / 230 V 50 Hz
Dimensions:	W 425 x D 380 x H 295 mm
Weight:	7.3 kg
Includes:	1 grid, 1 baking tray, 1 grid/tray handle, 1 chicken skewer, 1 chicken skewer handle

We reserve the right to make technical changes!

5. Installation and operation

5.1 Safety instructions



WARNING! Risk of electric shock!

The device must only be connected to a properly installed single socket with protective contact.

Never remove the power cable by pulling the cable itself; always grab the plug housing.

- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.

- Do not use the device in case it does not function properly, has been damaged or dropped.
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- Do not move or tilt the device when in operation.



WARNING! Hazard via electrical current!

The device can cause injuries due to improper installation!

Before installation the local power grid specification should be compared with that of the device (see type label).

Connect the device only in case of compliance!

Take note of the security advice!

5.2 Installation and connection

 
- Unpack the device and remove all packing material.
- Put the device in a safe place that can support its weight and is heat-resistant.
- **Never** place the device on a flammable surface.
- **Do not** operate the device near an open flame, electric oven, heater or other source of heat.
- Do not place the device near walls or other flammable materials. Maintain a minimum distance of 10 cm from all sides.
- **Never** block the ventilation ducts.
- **Never** cover the device while in use, nor place any objects on it.
- The socket's circuit must be secured to a minimum of 16A. Only connect the device directly to a wall socket; do not use extension cords or power strips.
- The device should be placed to provide quick access in case it becomes necessary to disconnect it.

5.3 Operation

Setting up the device

- Remove the included equipment (baking tray, grid, grid/tray handle, chicken skewer, chicken skewer handle, crumb tray) from the device. Before operating, clean the device in accordance with the instructions contained in section 6.2 "Cleaning".
- Connect the device to a single, grounded outlet.


Control panel

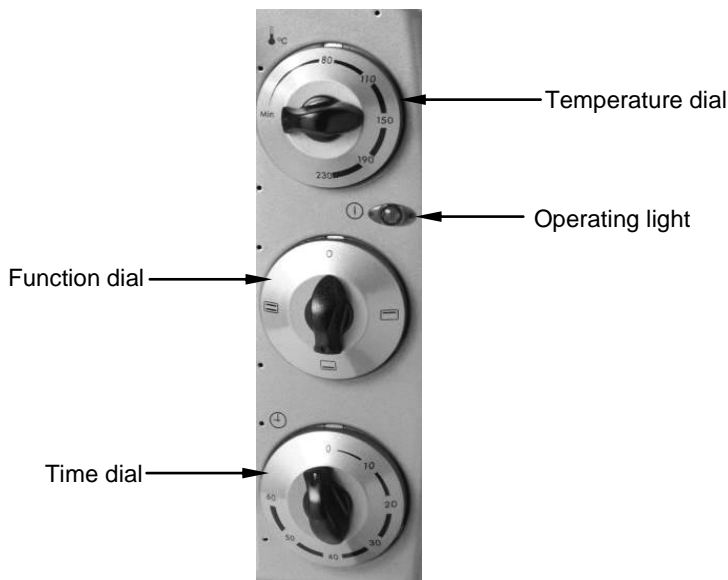

Settings

- Use the **temperature dial** to set the temperature as appropriate for the food being cooked up to 230° C. The temperature can be adjusted while the device is in operation.

 - Select the desired function using the **function dial**. The following functions are available:

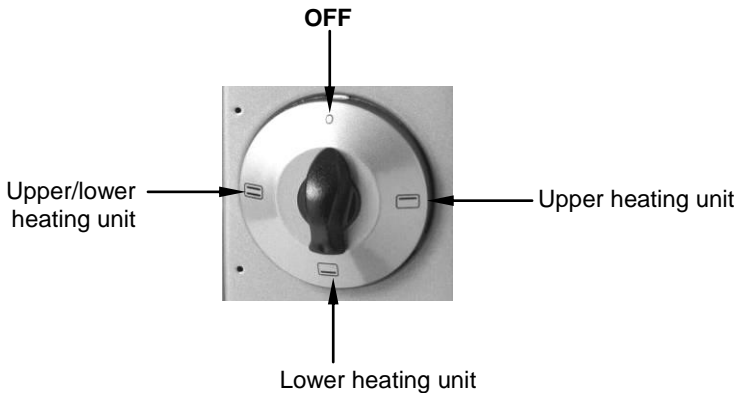

- Settings can be adjusted while the device is operating.
- Use the time dial to set the desired roasting/baking time (0 – 60 minutes). After setting the time, the orange operating light will come on.
- Roasting/baking will begin after the time has been set.

Preparing food

- Preheat the device as needed.
- Place the food inside the convection oven
- After the cooking/baking time has elapsed, a signal will be heard. The device will automatically turn off and the orange operating light will go off.
- Carefully open the glass door and remove the prepared food.



WARNING! Hot surface! Danger of burns!

While in use the device's surfaces and glass door can get very hot. Do not touch ot surfaces with bare hands.

**Only open the glass door using the handle!
Use the supplied handle to insert and
remove the grid and baking tray.**



- The baking process can be finished by turning the time dial to the position labeled "0".
- After use, remove the device's plug from its socket.

Crumb tray

- The removable crumb tray is located at the bottom of the device.
- Empty the crumb tray regularly by removing the tray and disposing of crumbs. The crumb tray can be washed with a soft, moist cloth. Always dry before using.



CAUTION!

To prevent damage to the cooking chamber, always use the crumb tray. Ensure the entire tray is located inside its dedicated location.

Chicken skewer

- The convection oven is also designed to be used with a chicken skewer.
- Prepare the chicken according to the desired recipe.
- Place the mounting element on the skewer and screw it on securely. Then place the chicken on the skewer so that the skewer goes through its middle and securely holds the chicken at the mounting element. Next, insert the second mounting element so that it holds the chicken and screw it in securely.
- Remember that the chicken should be located in the center of the skewer. Bind the chicken with a cotton thread to prevent it from making contact with heating coils.
- Use the chicken skewer handle to mount the chicken skewer in the appropriate elements at the left and right sides of the chamber, then ensure the skewer is stable.
- Place a baking tray under the chicken skewer to collect drippings.



- Use the temperature dial to set the desired temperature, and use the time dial to set the required cooking time. The function dial should be turned to the upper heating coil/lower heating coil setting.
- After grilling is finished, carefully remove the skewer using the handle, then prepare the chicken for serving.

6. Cleaning and maintenance

6.1 Safety advice

- Before beginning with repair or cleaning works make sure the device has been disconnected from power supply and has cooled down.
- Do not use any acid agents and make sure no water ingresses the device.
- To protect yourself from electric shock, **never** immerse the device, its cables and the plug in water or other liquids.



CAUTION!

The device is not suited for direct washing via water jets.

Therefore, you must not use any kind of pressure water jet for cleaning the device!

6.2 Cleaning

- Clean the device regularly.
- Remove the device's plug from its socket and wait for it to cool.
- Wash removable elements of the device (grid, baking tray, grid/tray handle, chicken skewer, chicken skewer handle, crumb tray) in warm water with a mild cleaning agent and soft cloth or sponge. Rinse the washed elements in clean water to remove leftover soap, then dry thoroughly.
- If the baking tray has stubborn dirt, it can be removed with a small amount of oil. Leave the oil to soak the dirt for a few minutes, then remove with a paper towel.
- Wash the device's surface and cooking chamber with a mild cleaning agent and soft, moist cloth.
- Common oven cleaners can be used for removing stubborn dirt.
- Always use soft cloths or sponges, **never** use sharp cleaners that could scratch the device.
- After cleaning, dry and polish the device with a soft, dry cloth.

6.3 Safety instructions for maintenance

- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- In case of damage or malfunction, please contact your stockist or our customer service centre.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



NOTE!



For the disposal of the device please consider and act according to the national and local rules and regulations.

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120