

„SNACK“



132260

Gebrauchsanleitung**Elektro-Nudelkocher**

Seite 1 bis 16

D/A/CH

Instruction manual**Electric pasta cooker**

from page 17 to 32

GB/UK

Mode d'emploi**Cuiseur à pâtes électrique**

de page 33 à page 48

F/B/CH

Manuale di utilizzo**Cuocipasta elettrico**

pagine da 49 a 64

I/CH

Instrucciones de uso**Cocedor de pasta eléctrico**

de la página 65 a la 80

E

ENGLISH
Translation
of the original instruction manual

Table of contents

1. Safety 18
 1.1 Safety instructions 18
 1.2 Key to symbols 20
 1.3 Hazard sources 20
 1.4 Proper use 22

2. General information 23
 2.1 Liability and Warrantees 23
 2.2 Copyright protection 23
 2.3 Declaration of conformity 23

3. Transport, packaging and storage 24
 3.1 Delivery check 24
 3.2 Packaging 24
 3.3 Storage 24

4. Technical data 25
 4.1 Overview of parts 25
 4.2 Technical specification 26

5. Installation and operation 27
 5.1 Installation 27
 5.2 Operation 28

6. Cleaning and descaling 30

7. Possible Malfunctions 31

8. Waste disposal 32

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- This device may only be operated in technically proper and safe condition.
- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device.
Do not attempt to repair the device yourself.

- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.
- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- The device is not adapted for use with an external timer or remote control.
- **Never** leave the device unattended when in use.
- Do not move or tilt the device when in operation.
- Only use the device indoors.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Hazard sources



DANGER!

Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Do not use the machine in case of incorrect operation, damages or dropping on the floor.
- The supply cable must be disconnected from the socket only by pulling the plug.

- Never carry or lift the device by the supply cable. Always use the device handles.
- In any case do not open the device housing. In case of electrical or mechanical modifications the electric shock hazard will occur.
- Never immerse the plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- Never operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



DANGER!

Suffocation hazard!

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements.



HOT SURFACE!

Burn hazard!

To avoid the hazard results please follow the safety instructions below.

- During the operation the surface of the device is very hot!
To avoid burns to the hands and fingers, do not touch the hot surface of the device!
Operate the device only using the designated handles and switches.
- After switching off, the surface of the device and the water in the basin are hot for some time afterwards. Before starting the cleaning of the device or moving it to another place, leave the device to cool down.



WARNING!

Risk of injury when in contact with hot surfaces, steam or hot water!

To avoid the hazard results please follow the safety instructions below.

- Steam may burn arms, hands or fingers. Remove baskets from the basin by grabbing the handles. Wear protective gloves when removing baskets containing food.

- **Never** touch the basin during the operation and directly afterwards. Hot water may burn arms, hands or fingers! Make sure that the water is cool by placing your hands 2 to 5 cm above the basin!



CAUTION!

In order to avoid any damages of the device follow the instructions below.

- Never switch the device on without water in the basin.
- **Never** clean the device in the dishwasher.
- To clean the surface, do not use sharp objects or abrasive cleaning agents.

1.4 Proper use



CAUTION!

The device has been designed and constructed only for commercial use and should be operated by qualified personnel of restaurants, cafeterias, bars and similar facilities.

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The pasta cooker is intended only for preparing flour-based products.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage


Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:


- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.

4. Technical data

4.1 Overview of parts

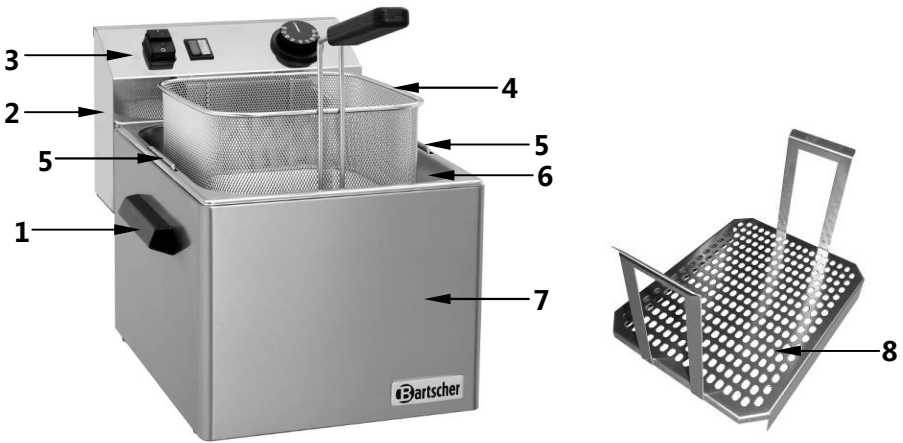

Control elements

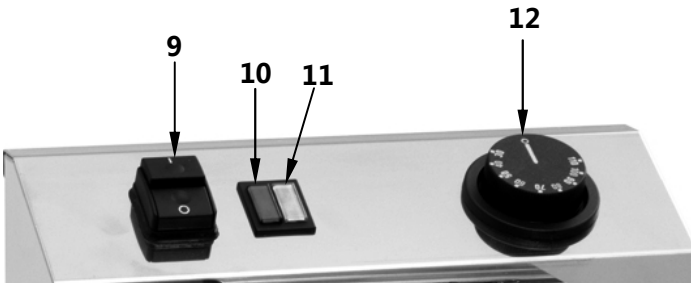

- | | |
|---------------------------------------|-----------------------------------|
| 1 Handle | 7 Housing |
| 2 Circuit box | 8 Heating element shield |
| 3 Control panel | 9 ON/OFF switch |
| 4 Basket | 10 Standby light (green) |
| 5 Lowered handles at the basin | 11 Function light (orange) |
| 6 Basin | 12 Temperature dial |

4.2 Technical specification

Name	Electric pasta cooker "SNACK"
Code-no.:	132260
Material:	stainless steel
Power:	3.4 kW / 230 V~ 50 Hz
Temperature range:	up to 110°C
Basin dimensions:	W 240 x D 300 x H 200 mm
Basin capacity:	7 liters
Dimensions:	W 305 x D 410 x H 315 mm
Weight:	6.75 kg
Included:	1 pasta basket, W 210 x D 235 x H 100 mm

We reserve the right to make technical changes!

Additional equipment (not included!)



Substitute basket small

Dimensions: W 100 x D 138 x H 135 mm

Weight: 0.29 kg

Code-no. 132261



Substitute basket large

Dimensions: W 210 x D 235 x H 100 mm

Weight: 0.69 kg

Code-no. 132262

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material. Remove the protective film from the device.



CAUTION!

- **Never** remove the rating plate and any warning signs from the device.
- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device on a flammable surface.
- If the device is placed near walls or furniture, they must be resistant to a temperature of 60 °C. If the wall contains flammable materials, they must be covered with a heat-absorbent layer.
- Ensure there is sufficient air circulation around the device. Leave 10 cm at the sides and 30 cm from the ceiling or cupboards. Leave sufficient space for personnel operating the device.
- Place the device under a fume hood to ensure all fumes are removed when the device is in operation.
- Do not locate the device in places with high ambient humidity. Excessive moisture can damage the device.
- Never place the device in humid or wet areas.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

Before first use

- Clean the device before first use in accordance with the instructions in 6 "Cleaning and descaling".
- Fill the basin up to the top with water and add a cleaning agent. Turn the device on and boil the water for several minutes. Next, remove the water from the basin and rinse it with clean water.
- The device is now ready for preparing food products.

Activating the device

- Place the basin into the device's housing and carefully insert the circuit box with heating device on the edge of the basin. The bolt at the side of the circuit box must fit in the opening of the slot at the rear of the housing for it to be properly placed. For safety reasons the device only operates when the circuit box is properly placed in the housing, allowing the microswitch to place it in standby mode.
- Ensure the device is turned off (temperature dial is in position "0" and the **ON/OFF** switch is in the position "O").
- Place the heating element shield in the basin.
- Fill the basin with water to the required level, observing the "**MIN**" and "**MAX**" indicators.



CAUTION!

Never turn the device on without water in the basin.

Always ensure that the water level is somewhere between "MIN" and "MAX".

Monitor the water and change it as necessary.

- Turn the device on using the **ON/OFF** switch (set to position "I"). The green standby light will come on.
- Set the desired temperature (to 110 °C) using the temperature dial. The orange control light will come on, and will go off when the device reaches the set temperature. When the temperature inside the basin falls, the control light comes back on and the device again heats to the set temperature.

Preparing dishes



NOTE!

Put salt into heated water before placing the basket with pasta inside.

- Place the desired food products into the basket.



NOTE!

Do not fill the baskets more than halfway, as the food contained may be over- or under-cooked. Follow the instructions for cooking as written on packaging.

- Place the basket in the basin. **Do not leave the device unattended when in operation!**
- After the cooking time has elapsed, grasp the handle and remove the basket from the basin, then place it on an appropriate holder to drain.
- After draining, the food can be served.



WARNING! Risk of burns!


Steam may burn arms, hands or fingers. Remove baskets by grabbing the handles. Wear protective gloves when removing baskets containing food.

- When the water level in the basin falls below "**MIN**", add or change water.
- After the device is no longer in use, turn the temperature dial to position "**0**", and the **ON/OFF** switch to position "**O**". Remove the device's plug from its socket.
- If the device is to remain unused for longer periods, clean it according to the instructions in **6 "Cleaning and descaling"** and store in a dry, clean place protected from frost, sunlight and children.

Overheating prevention mechanism

- If the device is activated with too little or no water in the basin, the device automatically shuts off when it begins to overheat.
- If this happens, turn the device off using the **ON/OFF** switch (set to "**O**") and remove the plug from its socket. Leave the device to cool.

- After the device automatically shuts down to prevent overheating, it can only be reactivated by using the **RESET** button located at the bottom of the circuit box.
- First, leave the device to cool, then remove the plastic cover over the **RESET** button by turning it counterclockwise, press the button, then turn the cover clockwise to replace it.
- After performing the above steps, the device can be used again.

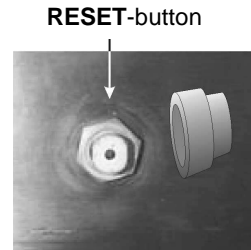

6. Cleaning and descaling



CAUTION!

Disconnect the unit from the power supply (unplug!) before cleaning.
The unit is not designed to be rinsed with running water.
Do not use a pressure washer to clean the device!
Be careful and do not let the water into the unit.

- Clean the device regularly.
- Turn the device off before cleaning (turn the **ON/OFF** switch to "**O**"), remove the plug from its socket, then leave to cool.
- Remove the basket and heating element shield from the basin.
- Carefully lift the circuit box and separate from the device, then clean with a moist, soft cloth. Ensure that **no water gets** into the circuitry, as the device can cause injury or be damaged.
- Use the lowered handles to remove the basin with water from the housing, then empty it.
- Wash the basket and basin in warm water with a mild cleaning agent. Rinse with clean water, then dry the cleaned elements.
- Clean the interior and exterior of the device's housing with a soft, moist cloth.
- **Never** use cleaning agents containing bleach, chlorine or alcohol, nor abrasive substances that could damage the device's surface.
- Dry the device thoroughly with a soft, dry cloth.

- Remove regularly the **limestone deposits** forming in the basin to avoid excessive energy consumption and reduced performance of the device. For this purpose use a solution of water with vinegar (3:1 ratio) or a commercially available descaling agent. Observe the instructions of manufacturers of such agents.
- After descaling, rinse the basin with clean water a few times.

7. Possible Malfunctions

In case of malfunction, disconnect the device from its power source. Before contacting the service or sales agent, verify - based on the table below - whether it is possible to eliminate disruption in operation.

Problem	Cause	Solution
<p>The device is connected to an electricity source, turned on, temperature set, but the green control light does not come on and the device does not heat up.</p>	<ul style="list-style-type: none"> • Plug improperly inserted • Circuit breaker activated • Circuit box installed improperly • No contact in microswitch • Overheating protection mechanism activated • Damaged temperature regulator (overheating protection) 	<ul style="list-style-type: none"> • Remove the plug and reinsert it correctly • Check the circuit breaker, check the device by connecting it to another socket • Check placement of the circuit box • Contact a sales agent • Press the RESET button on the circuit box • Contact a sales agent
<p>The orange control light comes on, but the temperature in the device does not rise.</p>	<ul style="list-style-type: none"> • The heating element terminal is damaged • Heating element is damaged 	<ul style="list-style-type: none"> • Contact a sales agent • Contact a sales agent
<p>The green standby light comes on, but the orange operation control light does not come on even though the temperature has been set.</p>	<ul style="list-style-type: none"> • The set temperature has been reached • Damaged temperature dial • Damaged control light 	<ul style="list-style-type: none"> • Check the device's operation after changing the temperature setting • Contact a sales agent • Contact a sales agent

Problem	Cause	Solution
The heating element stops heating.	<ul style="list-style-type: none">• The overheating protection mechanism has come on	<ul style="list-style-type: none">• Press the RESET button in the circuit box

When the anomalies cannot be removed:

- **do not** open the housing,
- contact the service company or the vendor, and specify:
 - failure type;
 - article number and serial number (see rating plate on the back wall).

8. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.