



200069

ENGLISH
Translation
of the original instruction manual

Table of contents

1. Safety	18
1.1 Safety instructions	18
1.2 Key to symbols	20
1.3 Hazard sources	21
1.4 Proper use	23
2. General information	24
2.1 Liability and Warrantees	24
2.2 Copyright protection	24
2.3 Declaration of conformity	24
3. Transport, packaging and storage.....	25
3.1 Delivery check	25
3.2 Packaging.....	25
3.3 Storage.....	25
4. Technical data	26
4.1 Overview of parts	26
4.2 Technical specification	27
5. Installation and operation.....	28
5.1 Installation	28
5.2 Operation.....	29
6. Cleaning and descaling	31
7. Waste disposal	32

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120



Read this instruction manual before using and keep them available at all times!

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

Please keep these instructions and give them to future owners of the device.

1. Safety

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

All persons using the device must follow the recommendations and instructions in this instruction manual.

1.1 Safety instructions

- This device may only be operated in technically proper and safe condition.
- The device can be used by children **8 years and up**, as well as by people with disabilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on proper use of the device and its possible dangers.
- **Children** should not play with the device.
- Cleaning and **maintenance cannot be performed by children** younger than 8 years old and must be done under supervision.
- **Children under the age of 8 years old** must be kept away from the device and its power cord.

- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device.
Do not attempt to repair the device yourself.
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.
- Never allow the power cable to come into contact with heat sources or sharp edges. The power cable should not hang over the side of the working surface. Ensure that no one can step on or trip over the cable.
- The power cable must not be folded, bent or tangled, and must always remain fully unrolled.
- Never place the device or other objects on the power cable.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Inspect the power cable regularly for damage. Never use the device if the cable is damaged. If the power cable is damaged, have an authorised service center or qualified electrician replace it.
- The device is not adapted for use with an external timer or remote control.
- **Never** leave the device unattended when in use.
- Always transfer or move the appliance only when it has completely cooled down.
- Only use the device indoors.

1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



WARNING!

This symbol highlights hazards which could lead to injury.



WARNING!

This symbol highlights dangerous situations which could lead to injury or death.



HOT SURFACE!

This symbol is a warning that the device surface is hot when in use. Ignoring this warning may result in burns!



CAUTION!

This symbol highlights dangerous situations which could lead to light injuries, or damage, malfunction, and/or destruction of the device.



NOTE!

This symbol highlights recommendations and information aimed for effective and trouble-free device operation.

1.3 Hazard sources



DANGER!

Electric shock hazard!

To avoid the hazard results please follow the safety instructions below.

- Do not use the device in case of incorrect operation, damages or dropping on the floor. When the cable is damaged it should be replaced by the service company or qualified electrician in order to avoid the hazards.
- The supply cable must be disconnected from the socket only by pulling the plug.
- Never carry or lift the device by the supply cable.
- In any case do not open the device housing. In case of electrical or mechanical modifications the electric shock hazard will occur.
- Never immerse the plug in water or other liquids.
- Do not use any acid agents and make sure no water ingresses the device.
- Never operate the device with moist hands or standing on wet floor.
- Remove the plug from its socket:
 - when the device is not used,
 - in case of anomalies during operation,
 - before cleaning.



DANGER!

Suffocation hazard!

- Prevent access of children to the package materials like plastic bags and foamed polystyrene elements.



HOT SURFACE!

Burn hazard!

To avoid the hazard results please follow the safety instructions below.

- The water tank gets very hot when in use! To avoid burns to fingers and hands, do not touch hot surfaces of the device! When using the device, touch only the handles and switches designed for this purpose.
- After the device has been switched off, the water tank remains hot for some time afterwards. Before cleaning or moving it to another place, leave the device to cool off.



WARNING!

Risk of burns or risk of injury when in contact with hot surfaces, steam or hot water!

To avoid the hazard results please follow the safety instructions below.

- Do not overfill the device! Overfilling the water tank may cause a leak of hot water and scalding!
- Do not lift the cover during boiling! The released steam can scald hands, arms and face!



WARNING!

Germs hazardous to health!

To avoid the hazard results please follow the safety instructions below.

- The water tank must be regularly emptied out, cleaned and disinfected to eliminate any possibility of accumulation of harmful germs.



CAUTION!

In order to avoid any damages of the device follow the instructions below.

- **Never** clean the device or its parts in the dishwasher.
- Do not use sharp objects or abrasive cleaning agents when cleaning the surfaces.
- Do not use the device when the water tank is empty.

1.4 Proper use

The operational safety of the device is assured only in case of proper use, according to the operation manual.

All technical activities like installation and maintenance must be performed by the qualified service personnel only.

The hot water dispenser is not suitable for continuous commercial use.

The device is intended for home use or in similar places such as:

- in kitchens for store or office employees or in similar business areas;
- in agricultural farms;
- by guests of hotels, motels and other typical places of accomodation;
- in Bed and Breakfast facilities.

The hot water dispenser is designed only for **boiling and heating** water.

Do not use the hot water dispenser to:

- cooking food products;
- storing and heating flammable, harmful and volatile liquids or substances, etc.



CAUTION!

Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.

Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.

The operator is liable for all damages resulting from inappropriate use.

2. General information

2.1 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology.



CAUTION!

Read this manual carefully and thoroughly before any operation of the device, and especially before turning it on!

Manufacturer **is not liable** for any damages or faults caused by:

- violation of advice concerning operation and cleaning;
- use other than designed;
- alterations made by user;
- use of inadequate spare parts.

We reserve the right to make technical changes for purposes of developing and improving the useful properties.

2.2 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



NOTE!

The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.

2.3 Declaration of conformity



The device complies with the current standards and directives of the EU. We certify this in the EC declaration of conformity. If required we will be glad to send you the according declaration of conformity.

3. Transport, packaging and storage

3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt. In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



NOTE!

If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly.
If required refresh or renew.


4. Technical data

4.1 Overview of parts



- 1 Lid
- 2 Lid handle
- 3 Water tank handle
- 4 Water tank
- 5 Control elements
- 6 Base
- 7 Drain tap
- 8 Filling level indicator

Control elements

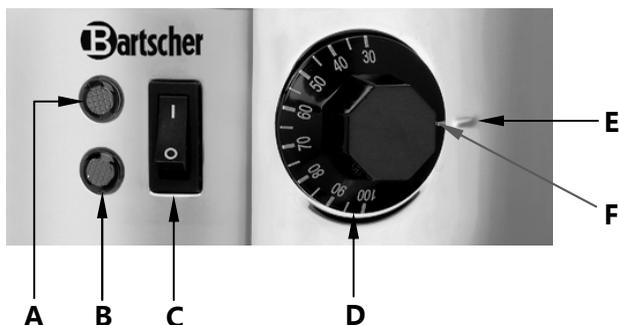

- A** Heating indicator (red)
- B** Power indicator (green)
- C** ON/OFF switch
- D** Temperature dial
- E** Setting mark (device)
- F** Temperature dial „OFF” position

4.2 Technical specification

Name	Hot water dispenser 8.5L, double-walled
Code-No.:	200069
Material:	Body and lid: chrome nickel steel
Temperature range:	30 °C – 100 °C
Capacity:	8.5 liters
Power:	1,6 kW / 220-240 V 50/60 Hz
Dimensions:	Ø 225 mm, H 470 mm
Weight:	2.7 kg

We reserve the right to make technical changes!

5. Installation and operation

5.1 Installation

Positioning

- Unpack the device and remove all packing material.



CAUTION!

- **Never** remove the rating plate and any warning signs from the device.
- Place the device on top of an even, stable, dry, and water-resistant surface which supports the weight of the device and is not heat sensitive.
- **Never** place the device at the edge of a table to avoid accidents.
- **Never** place the device in humid or wet environment.
- **Never** place the device on the flammable surfaces.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

Connection



DANGER! Electric shock hazard!

The device can cause injuries due to improper installation!

Before installation and connecting the local power grid specification should be compared with that of the device (see rating plate). Connect the device only in case of compliance!

Connect the device only to properly installed single socket with protective terminal.

- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.

5.2 Operation

- Before using the device, clean it in accordance with the instructions in section 6 „**Cleaning and descaling**“.
- Pour the desired amount of water into the tank (up to the „**MAX**“ mark).
- When using the device, make sure it always contains a **drinkable liquid**. The device must not hold any liquids unsuitable for drinking such as acids, bases, oils, nitrates, etc.!



NOTE!

**In order to shorten the water heating time, use warm water.
This helps save time and power!**

- Place the lid on the water tank and turn it clockwise to close the tank (bayonet lid).
- Connect the device to a single grounded outlet.
- Set the desired temperature between 30 °C and 100 °C using the temperature dial.
- Switch the device on using the **ON/OFF** switch. The green power light will come on, and remains on during the entire time of operation.
- Immediately after changing the position of the temperature dial, the red heating light will come on. Heating of water to the desired temperature starts at this moment.
- After the set temperature is reached, the red heating light will go off. Set the temperature dial in the position for maintaining the water temperature.
- If the temperature inside the tank drops, the thermostat will activate the device and the red heating light will come on.
- Hot water can be used to prepare various beverages (tea, instant coffee, instant soup, etc.).
- When preparing e.g. a tea, remember that various types of tea brew best at different temperatures. Follow the manufacturer's instructions on the tea package.

- To pour hot water, place an appropriate container (glass, cup or mug) under the drain tap. Press the tap lever down and hold it until the desired amount of water is poured.

When finished pouring, release the tap lever and the tap will close automatically.



- During operation of the device, monitor the water tank's level by observing the filling level indicator.



CAUTION!

**Monitor the water level regularly and add water as needed.
Never operate the device without water!**


- Before filling in the tank or adding water, switch the device off.
- Then carefully remove the lid and add the desired amount of water. When using the device, touch only the handles and switches designed for this purpose.
- After you have finished using the device, turn the temperature dial to the „OFF“ position by turning it counterclockwise, then switch the device off using **ON/OFF** switch and remove its plug from the socket.
- Wait for any remaining water in the tank to cool off, then pour it into another container using the drain tap.

- ❖ The device is equipped with an **overheating/dry heating** protection function. If the device is accidentally switched on with too little or no water, this protection will be activated and the device will switch off automatically.

Disconnect the device from the socket (pull the plug!) and wait for it to cool off.

After cooling, empty the water tank and press the **RESET button** at the bottom of the device.

The device can be later filled with fresh water and used again.

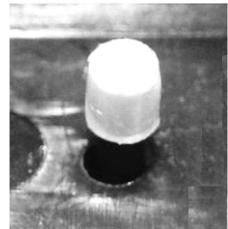

6. Cleaning and descaling



CAUTION!

Disconnect the unit from the power supply (unplug!) before cleaning.
The unit is not designed to be rinsed with running water.
Do not use a pressure washer to clean the device!
Be careful and do not let the water into the unit.

Regular cleaning

- Clean the device after every use.
- Wash the inside of the water tank with a mild cleaning agent, then rinse with running water. To clean the drain tap, run the clean water through it.
- Wash the lid and rinse under warm, running water.
- Clean the device's external surfaces with a wet soft cloth, and a mild cleaning agent if needed.
- Always use a soft cloth, **never** use abrasive cleaners that might scratch the device.
- After cleaning, dry surface and polish it with a soft, dry cloth.

Descaling



CAUTION!

Failure to conduct regular descaling - in accordance with the instructions - may be the basis for rejecting complaints.
The warranty does not cover this type of complaint!
Descal the device regularly!

- Hard water may cause scaling in the water tank, thus extending the time needed to heat water and possibly causing damage of the device. **If possible, use filtered water to avoid scaling!**
- We recommend using citric acid or vinegar for ecological descaling. Prepare a solution of **water with vinegar (3:1 ratio)** or **water with citric acid (2 table spoons per 1 liter of water)** and fill the tank. Wait some time (ca. 1 hour), and then boil the solution.

- Wait for the device to cool off.
- After cooling, pour out the descaling solution and rinse the tank **several times** with clean water. Drain the clean water through the drain tap to thoroughly remove all scaling solution leftovers.
- Follow manufacturer's instructions if you choose to use other commercially available descaling products.

Storing the device

- If the device is not used for a longer time, clean the device according to the above mentioned instructions and store it in a dry, clean place protected against frost, sun and children.
- Do not place any heavy objects on the device.

7. Waste disposal

Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



WARNING!

To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.



CAUTION!



For the disposal of the device please consider and act according to the national and local rules and regulations.