

## **TBRB20 - TBRB40**



**100373 - 100374**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 2.0

Date of preparation: 2023-04-03

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of Signal Words .....	2
1.2	Safety instructions.....	3
1.3	Intended Use .....	5
1.4	Unintended Use .....	6
2	General information .....	7
2.1	Liability and Warranty .....	7
2.2	Copyright Protection .....	7
2.3	Declaration of Conformity .....	7
3	Transport, Packaging and Storage .....	8
3.1	Delivery Check.....	8
3.2	Packaging .....	8
3.3	Storage .....	8
4	Technical Data.....	9
4.1	Technical Specifications .....	9
4.2	List of Components of the Appliance .....	11
4.3	Functions of the Appliance.....	12
5	Installation and operation .....	13
5.1	Installation.....	13
5.2	Operation .....	14
6	Cleaning .....	21
6.1	Safety Instructions for Cleaning .....	21
6.2	Cleaning.....	21
7	Disposal.....	22



**Read this instruction manual before using and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

## 1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



### **WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



### **CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

### **IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

### **NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

### Flammable Materials

- Never subject the appliance to contact with high temperature sources, e.g.: oven, furnace, open flame, heat generating devices, etc.
- To avoid fire hazard, clean the appliance regularly.
- Do not cover the appliance with, e.g., aluminium foil or cloths.
- Use the appliance only with materials designated to this end and with correct temperature settings. Materials, groceries and left-overs remaining in the appliance may catch fire.
- Never use the appliance near flammable or inflammable materials, e.g.: petrol, spirit, alcohol, etc. High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- In case of fire, disconnect the appliance from the power supply before attempting suitable fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- The bread may burn. That is why the toaster should not be used near or under flammable materials, like curtains.

EN

### Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

### Health Hazard Due to Burnt Food Products

- Acrylamides that are present in burnt food products are hazardous to health and may cause cancer.

## Safety

---

- Remove the burnt pieces.
- Do not brown bread excessively.

### Operating personnel

- The appliance can be used by children of 8 years old and older, as well as by people with reduced physical, sensory or mental abilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on safe use of the appliance and possible risks. Children should not play with the appliance.
- Do not leave the appliance unattended in the presence of children.
- Cleaning and maintenance may not be carried out by children unless they are at least 8 years old and supervised.
- Children that are below 8 years old may not get close to the appliance nor the power cord.

### Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

EN

### Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

## 1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- toasting toasts

- toasting bagels
- heating-up toasts and bread rolls
- defrosting toasts and bread rolls

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

## 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- baking bread rolls
- toasting unsuitable bakery products
- toasting spread slices of bread (e.g. sandwiches), bakery products with filling or toppings (e.g. jam or icing).



## 2 General information

### 2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

### 2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

EN

### 2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

### 3 Transport, Packaging and Storage

#### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

#### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

#### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical Data

### 4.1 Technical Specifications

#### Version / Characteristics 100373 – 100374

- Functions:
  - toasting
  - defrosting
  - heating-up
  - toasting bagels
- Designed for:
  - toast bread
  - bread rolls
  - bagels
- Control:
  - lever
  - knob
  - key
- Operation:
  - 100373: 1 control field for 2 slits
  - 100374: 2 separate control fields for 2 slits each
- Indicator lights:
  - toasting
  - defrosting
  - heating-up
  - toasting bagels
- 'Cancel' key
- Crumb tray(s), removable

We reserve the right to implement technical modifications.

<b>Name:</b>	<b>Toaster TBRB20</b>
Art. No.:	<b>100373</b>
Material:	stainless steel, brushed
Number of slits:	2
Slit dimensions (W x D), in mm:	140 x 35
Number of browning levels:	6
Number of bread roll tops	2
Number of crumb drawers:	1
Connected load:	0,88 kW   230 V   50/60 Hz
Dimensions (W x D x H), in mm:	195 x 300 x 200
Weight, in kg:	1,4

EN

<b>Name:</b>	<b>Toaster TBRB40</b>
Art. No.:	<b>100374</b>
Material:	stainless steel, brushed
Number of slits:	4
Slit dimensions (W x D), in mm:	140 x 35
Number of browning levels:	6
Number of bread roll tops	4
Number of crumb drawers:	2
Connected load:	1,48 kW   230 V   50/60 Hz
Dimensions (W x D x H), in mm:	330 x 300 x 200
Weight, in kg:	2,4

## 4.2 List of Components of the Appliance

100373

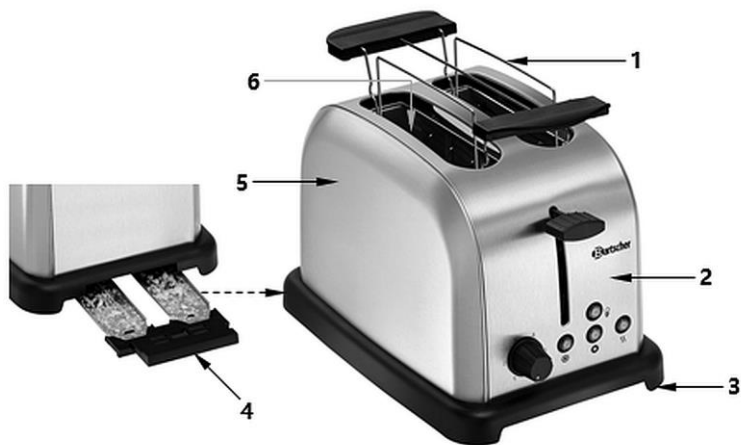 


Fig. 1

EN

- 1. Bread roll top
- 2. Control panel
- 3. Feet (4 pcs)
- 4. Removable crumb tray
- 5. Housing
- 6. Toasting slit (2 pcs)

100374

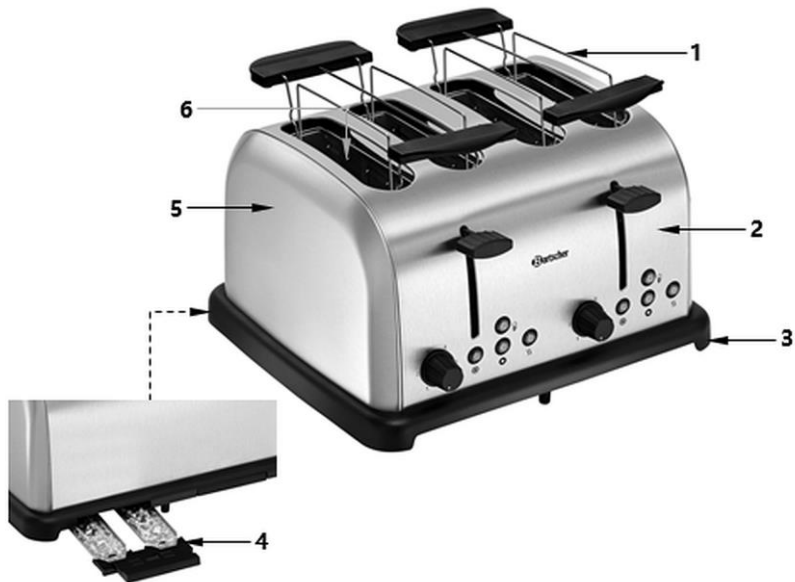 


Fig. 2

- |                           |                                 |
|---------------------------|---------------------------------|
| 1. Bread roll top (2 pcs) | 2. Control panel                |
| 3. Feet (4 pcs)           | 4. Removable crumb tray (2 pcs) |
| 5. Housing                | 6. Toasting slit (4 pcs)        |

### 4.3 Functions of the Appliance

2- or 4-slice toaster makes it possible to defrost, heat up and toast toast bread and bread rolls, as well as one-sided toasting of bagels. The removable crumb drawer(s) facilitate(s) cleaning of the appliance.

## 5 Installation and operation

### 5.1 Installation

#### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

##### Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
  - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
  - sufficiently large, and thus enabling usage of the appliance with no problems;
  - easily accessible;
  - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Never place the appliance directly underneath a hanging cupboard as hot air moves upwards.
- Maintain a minimum clearance of 20 cm from all sides of the appliance to provide for convenient usage and good air circulation.

### Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
  
- Do not use the appliance with an external timer or remote control.

## 5.2 Operation

### Important Tips for Optimal Toasting Result

With the same setting of the browning level, the toasting result varies depending on the different characteristics of bread or bread rolls (moisture, bread type, size and thickness of slices).

- Set lower browning level when toasting dry, smaller or thinner slices or when toasting only one slice.
- Set higher browning level or carry out 2 toasting processes when toasting thicker slices of bread.
- The cut surface of bread slices should be as smooth as possible in order to achieve a uniform toasting result.
- Remove loose crumbs or protruding bread components, e.g. grains, before toasting because they can burn.
- Set higher browning level for slices with an uneven surface.
- For uniform result of toasting, toast one type of bread at a time.
- Take into account that during several operations one after another the toaster becomes hotter and toasted slices become more browned accordingly. If necessary, set lower browning level for subsequent toasting processes.
- The level of browning can be changed also during the toasting process by rotating the browning level controller.



### Warning Indications



#### **WARNING**

##### **Risk of burning!**

**During the toasting process, the surface of the appliance, bread roll tops, and bread (bread rolls) heat up considerably.**

Do not touch any surfaces and elements of the appliance, nor insert hands into the toasting slits.

Remove bread slices from toasting slits or bread rolls from bread roll top carefully. Use suitable tongs for toasts.

When removing bread roll tops, use protective gloves or a kitchen cloth.

### **Before the First Use**

1. Before you start using the appliance, make sure that there are no packaging materials nor other objects in toaster slits.
2. Before use, clean the appliance, observing instructions in section '**Cleaning**'.
3. To end with, dry all washed elements and surfaces.
4. Slide the crumb drawer entirely in the right slot at the back of the appliance.

#### **ATTENTION!**

**Using the appliance without the crumb drawer may lead to the damage of the appliance or to soiling.**

Always use the appliance with the correctly inserted crumb drawer.

5. Plug the appliance into a suitable single socket.

### Control Panel

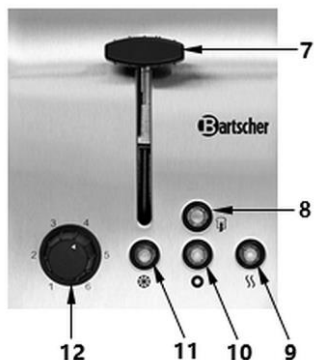 


Fig. 3

- |                    |                               |
|--------------------|-------------------------------|
| 7. Operating lever | 8. 'Cancel' key               |
| 9. Heating-up key  | 10. 'Bagel' key               |
| 11. Defrosting key | 12. Browning level controller |

EN

### Toasting Bread Slices

1. Always introduce only one bread slice into a given toaster slit.

#### NOTE!

The 4-slit toaster features separate operating elements for each pair of toaster slits. The following operating steps apply to both pairs of toaster slits.

2. Use the browning level controller to set the browning level in the range of 1–7.

#### NOTE!

To obtain darker browning, rotate the browning level controller clockwise; to obtain lighter browning, rotate the browning level controller counter-clockwise.



Fig. 4

3. In the case of 4-slit models, 2 toasting slits may be used for toasting different types of bread. Set both browning level controllers accordingly.
4. After each toasting process, wait approx. 20 seconds before you introduce subsequent bread slices, to let the appliance cool.

5. Press the operating lever down to lock it.

The toasting process begins. The 'Cancel' key indicator light is lit during the toasting process.

When the toasting process is finished, the operating lever will pop out automatically. The 'Cancel' key indicator light goes off.

The bread slices are lifted from the toasting slits.

6. Carefully remove ready bread slices.
7. Disconnect the appliance from the socket (pull the plug out) if it is no longer used.

EN

### Interruption of Toasting Process

1. To interrupt and end the toasting process, press the 'Cancel' key.

The operating lever pops out automatically. The 'Cancel' key indicator light goes off. You can remove bread slices/bread rolls/bagels.

#### **NOTE!**

**Interruption of the toasting process is possible irrespective of the available and used function — you just need to use the 'Cancel' key.**

### Heating-up of the Already Toasted Bread

1. Introduce the already toasted bread slices into the toaster slit.
2. Use the browning level controller to set the browning level in the range of 1–7.
3. Press the heating-up key.
4. Press the operating lever down to lock it.

The heating-up process begins. The 'Cancel' key and heating-up key indicator lights are lit.

#### **NOTE!**

**When this function is selected, the toasting process is shorter than in the case of regular toasting.**

As soon as the heating-up process is finished, the operating lever pops out, and the 'Cancel' key and heating-up key indicator lights go off.

You can remove bread slices.

5. Disconnect the appliance from the socket (pull the plug out) if it is no longer used.

EN

### Toasting Frozen Bread

#### **NOTE!**

**The defrosting and heating-up functions may be selected independently.**

1. Introduce frozen bread slices into the toaster slit.
2. Use the browning level controller to set the browning level in the range of 1–7.
3. Press the defrosting key.
4. Press the operating lever down to lock it.

The toasting process starts, and the 'Cancel' key and defrosting key indicator lights are lit.

#### **NOTE!**

**With this function, the toasting process lasts longer than in the case of regular toasting.**

As soon as the defrosting process is finished, the operating lever pops out, and the 'Cancel' key and defrosting key indicator lights go off.

5. Remove bread slices.
6. Disconnect the appliance from the socket (pull the plug out) if it is no longer used.

### Bagel Toasting



Fig. 5

1. Slice a bagel horizontally.
2. Insert halves of a bagel in slits.
3. Use the browning level controller to set the browning level in the range of 1–7.
4. Press the 'Bagel' key.
5. Press the operating lever down to lock it.

The toasting process starts, and the 'Cancel' key and defrosting key indicator lights are lit.

As soon as the defrosting process is finished, the operating lever pops out, and the 'Bagel' key and defrosting key indicator lights go off.

6. Remove bagels from the toasting slits.
7. Disconnect the appliance from the socket (pull the plug out) if it is no longer used.

EN

### Removing Stuck Bread Slices



#### **DANGER!**

**Electric shock hazard!**

**Disconnect the appliance from the mains socket (pull the plug out).**

**Sharp objects may damage the heating elements and when in contact with live parts they may cause electric shock.**

Do not use any sharp metal objects to remove a stuck bread slice.



#### **WARNING!**

**Fire hazard!**

**A stuck bread may start to burn.**

Remove the stuck bread.

### Hot surface!

### Surfaces remain hot after switching off.

Remove the stuck bread only when it has cooled down.

1. Always pay attention, so that bread slices are not too thick.
2. When the toasting process is finished and the toasted bread slice is stuck, rotate the appliance by 180° and shake it gently to remove the stuck bread slice from the toasting slit.
3. Carefully remove the stuck bread.

### Bread Roll Top

The toaster is equipped with one or two removable bread roll top(s).

The tops are fixed in toasting slits.

#### NOTE!

**Bread roll top should be used only with the browning level 1.**



Fig. 6

1. To heat up or defrost bread rolls, put them on a bread roll top.
2. Select one of the functions, according to your needs: heating up or defrosting.
3. Use the browning level controller to set the browning level 1.
4. Press the operating lever down to lock it.

The selected process starts.

The 'Cancel' key indicator light is lit during the process.

When the toasting process is finished, the operating lever will pop out automatically. The 'Cancel' key indicator light goes off.

5. Remove the bread rolls carefully from the bread roll top.
6. Disconnect the appliance from the socket (pull the plug out) if it is no longer used.

## 6 Cleaning

### 6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

### 6.2 Cleaning

1. Clean the appliance regularly.



Fig. 7

The removable bread crumb drawer(s) is (are) located underneath the appliance, at its back.

2. Remove the crumb tray(s) from the slot underneath the appliance.
  3. Remove crumbs.
  4. Clean the crumb tray(s) with a dry or slightly damp, soft cloth and dry it (them).
5. Insert the crumb tray(s) into the provided slot(s) underneath the appliance.
  6. Remove the bread roll top.
  7. Clean the bread roll tops with a soft, damp cloth.
  8. Rotate the appliance by 180° and shake gently to remove bread crumbs from the toasting slits.
  9. Wipe the housing with a damp, soft cloth. Use mild cleaning agent if required.
  10. Dry the housing thoroughly with a soft cloth.
  11. Leave the appliance to dry completely before next use.

### 7 Disposal

#### Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.