



A130442

Product description

Cookware set T4P1

- Material: chrome-nickel steel
- Pouring rim
- Cold handles
- Also suitable for induction

4 pots with lids

2.0 litres	Ø 16 cm	10.0 cm height
2.7 litres	Ø 18 cm	11.0 cm height
5.1 litres	Ø 24 cm	11.5 cm height
6.1 litres	Ø 20 cm	20.0 cm height

1 pan

2.8 litres

Hints:

- Never leave the empty pot on a heated plate!
- Never leave the pots on a heated plate unattended for a long time.
- During cooking, try to use the lowest possible temperatures to minimize pots discolouration.
- Always add salt only to boiling water to prevent the salt from damaging the pots.

Maintenance:

- 1) Before the first use, thoroughly clean the pots with a detergent and hot water, and then dry, to remove any manufacturing residues and packaging material leftovers.
- 2) The pots are dishwasher safe. However, due to high temperature during washing in a dishwasher water spots may appear on the pots. To prevent the spots, remove the pots from the dishwasher before the drying phase. Dry the pots with a soft kitchen towel.
- 3) After the use, clean the pots with a sponge or dishwashing brush and popular dishwashing liquids. In the case of more stubborn marks, we recommend to leave the pots in water for a while.

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com