

700FX-GST110



2837861

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com



CE-0085DL0222

Version: **1.0**

Date of preparation: 2023-06-07

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions.....	3
1.3	Residual Risks	6
1.4	Personal Protective Equipment.....	8
1.5	Intended Use	9
1.6	Unintended Use	9
2	General information	10
2.1	Liability and Warranty	10
2.2	Copyright Protection	10
2.3	Declaration of Conformity	10
3	Transport, Packaging and Storage	11
3.1	Delivery Check.....	11
3.2	Packaging	11
3.3	Storage	11
4	Technical Data.....	12
4.1	Technical Specifications	12
4.2	Functions of the Appliance.....	13
4.3	List of Components of the Appliance	19
5	Installation Instructions	20
5.1	Installation.....	20
6	Operating Instruction	26
7	Cleaning and Maintenance	29
7.1	Safety Instructions for Cleaning	29
7.2	Cleaning.....	29
7.3	Maintenance	30
8	Possible Malfunctions.....	32
9	Disposal.....	34



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Safety of Gas Supplied Appliances

- Do not use a gas supplied appliance in the event of a malfunction or damage or in the case of a suspected malfunction or damage. In such a case set the knob(s) to 'O' and close the main gas valve. Contact the service company immediately.
- Regularly conduct tightness checks using suds (a spray for detecting leakages).

Do not use open flame for checking tightness of gas installation!

WARNING!

Suffocation and explosion hazard due to leaking gas!

- When you sense gas odour, observe the following rules:
 - immediately close the knob(s) and the main gas valve;
 - provide for sufficient venting of rooms: open wide all doors and windows;
 - do not light up any open flame, quench flames;
 - do not smoke;

- do not produce sparks, do not actuate any electric switches, do not use phones (irrespective of it being landline phone or mobile phone);
- do not operate any electric appliances in the vicinity of a gas supplied appliance;
- if needed, notify all persons in a building by calling loud and knocking on doors;
- leave building;
- when outside of a building, contact the service company. If it is impossible to precisely locate gas leak, immediately phone fire fighters and notify gas supplier.

Flammable Materials

- Never use the appliance near flammable or easily combustible materials (e.g.: petrol, spirit, alcohol). High temperature triggers evaporation of these materials, and, as a result of contact with sources of ignition, an explosion may occur.
- Use the appliance only with materials designed to this end and with correct temperature settings. Materials, food products and left-overs of food products remaining in the appliance may catch fire.
- To avoid fire hazard, clean the appliance regularly.
- Never leave the appliance unattended, especially when cooking with fats or oils as they may cause fire.
- Close the gas shut-off valve should the fire emerge. Never put the flame out with water; to suppress fire, use a lid or a fire-blanket. Following extinction of fire, ensure sufficient fresh air inflow.

Hot Surfaces

- Surfaces of the appliance become hot during operation. Burning hazard! High temperature remains for some time after switching the appliance off.
- Do not touch any hot surfaces of the appliance. Use the provided handling elements and holders.
- You may transport and clean the appliance after it cools down entirely.
- It is prohibited to sprinkle hot surfaces with cold water or flammable liquids.

Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.

Safety

- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

Supervised Usage only

- Only supervised appliance may be used.
- Always remain in an immediate vicinity of the appliance.

Improper Use








- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

1.3 Residual Risks

Residual Risks	Dangerous situation	Warning
Danger of slipping or falling	User may slip on the floor due to the presence of water or dirt.	Wear non-skid safety shoes when using the device.
Burn	Operator is deliberately touches the machine components.	
		Operator is deliberately touching hot substances (oil, water, steam, ...).
Danger of falling	Operator performs actions on the upper part of the device using inappropriate aids (e.g. a ladder with rungs or climbs the device).	Do not work on the top of the device with unsuitable aids (e.g. ladders with rungs or by climbing on the device).
Danger of the load tipping over	Moving the device or its elements with inappropriate aids.	Appropriate lifting aids or equipment must be used when moving the device or its packaging.

Residual Risks	Dangerous situation	Warning
Chemicals	Operator is dealing with chemicals (e.g. cleaners, descaling agents, etc.)	Appropriate precautions should be taken. Always follow the instructions on the safety data sheets and labels for the products you use. Use personal protection measures recommended in the safety data sheets.
Danger of injury	There is a risk of injury during maintenance work if you touch the internal parts of the machine frame.	Maintenance work may only be performed by qualified personnel, equipped with appropriate personal protective equipment (cut-resistant protective gloves, forearm protectors).
Danger of crushing	The personnel may crush their fingers or hands when moving parts.	Maintenance work may only be performed by qualified personnel, equipped with personal protective equipment.
Ergonomics	Operator works on the device without using the necessary personal protective equipment.	Operator working on the device must use personal protective equipment.

1.4 Personal Protective Equipment

	Safety clothing	Safety footwear	Gloves	Eye protection	Hearing protection	Respiratory tract protection	Head protection
Phase							
Transport		X					
Moving		X					
Unpacking		X					
Assembly		X					
Standard usage	X	X	X (*)				
Settings		X					
Standard cleaning		X					
Special cleaning		X	X				
Maintenance		X	X (*)				
Dismantling		X					
Disposal		X					

X	Personal protective equipment provided
	Personal protective equipment is available or must be used if required
	Personal protective equipment not provided

* Gloves intended for standard usage and maintenance works must be resistant to high temperatures to protect operator's hands when the operator touches hot elements of the appliance or hot substances (oil, water, steam, etc.).

1.5 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Preparation of meat, fish and vegetables.
- Baking bread, pies and cakes.
- Heating up food.
- Defrosting deep frozen products.
- Cooking au gratin.
- Processing of frozen and deep frozen food.

1.6 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Heating of rooms.
- Drying clothes.
- Storage of flammable objects.
- Heating up and warming up flammable, hazardous to health and volatile, etc. liquids and materials.

2 General information

2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

EN

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Gas oven 700FX-GST110
Art. No.:	2837861
Gastronorm:	1/1 GN
Material:	CNS 18/10
Thermal processing chamber material:	Stainless steel
Thermal processing chamber dimensions (W x D x H), in mm:	570 x 530 x 295
Thermal processing chamber volume, in litres:	89
Number of guide rail pairs:	5
Guide rail format, in mm:	438 x 315
Distance between guide rail pairs in mm:	25
Temperature range, min.–max., in °C:	140 - 280
Connected load:	5,0 kW
Dimensions (W x D x H), in mm:	800 x 650 x 620
Weight, in kg:	63,0

We reserve the right to implement technical modifications.

Version / Characteristics

- Operating mode: gas
- Gas type:
 - natural gas, type E (20 mbar),
 - liquid gas nozzles (50 mbar) included
- Heating type: static
- Ignition type: piezoelectric ignition
- Type: appliance for integration under table-top
- Pressure-tested stainless steel surface with Scotch-Brite finish
- Control:
 - knob
- Functions:
 - bottom heating element
- Fume extractor
- Height-adjustable feet: 130 - 210 mm
- The set includes: 1 rack
- Possibility to individually equip with 700FX series table-top appliance

4.2 Functions of the Appliance

The 700FX series gas oven provides for full flexibility — serving as a base, it may be equipped with table-top appliances from the series, in a fully customised way. The gas supplied oven's benefits are obvious: rapidly reached the right temperature, power and time savings due to the lack of need for pre-heating, as well as more economical operation in comparison to electric ovens.

Gas Pressure Table

Countries	Appliance categories	Gas pressure (mbar)	Connection pressure (mbar)		
			Rated	Min.	Max.
LU-PL	I2E	G20	20	17	25
NO	I2H	G20	20	17	25
NL	I2L	G25	25	20	30
NL	I2EK	G20	20	17	25
		G25.3	25	20	30
NO-NL-CY-MT	I3B/P	G30/G31	28-30	25	35
PL	I3B/P	G30/G31	37	25	45
BE-FR	II2E+3+	G20/G25	20/25	17	25/30
		G30/G31	28-30/37	20/25	35/45
DE	II2ELL3B/P	G20	20	17	25
		G25	20	18	25
		G30/G31	50	42,5	57,5
ES-GB-GR-IE-IT-PT-SK	II2H3+	G20	20	17	25
		G30/G31	28-30/37	20/25	35/45
DK-FI-SE-BG-EE-LV-LT-CZ-SI-TR-HR-RO	II2H3B/P	G20	20	17	25
		G30/G31	28-30	25	35
AT-CH	II2H3B/P	G20	20	17	25
		G30/G31	50	42,5	57,5
HU	II2HS3B/P	G20	25	18	33
		G25.1	25	18	33
		G30/G31	28-30	25	35
HU	II2HS3B/P	G20	25	18	33
		G25.1	25	18	33
		G30/G31	50	42,5	57,5

Technical Data

Countries	Appliance categories	Gas pressure (mbar)	Connection pressure (mbar)		
			Rated	Min.	Max.
SE-DK	III1a2H3BP	G20	20	17	25
		G30/G31	28-30	25	35
IT-CH	II1a2H	G20	20	17	25
NL	II2EK3B/P	G20	20	17	25
		G25.3	25	20	30
		G30/G31	28-30	25	35

Tab. 1

Nozzles and settings

Countries	Gas type	Pa (mbar)	Ref.	Art. No.
				2837861 / 78GSO
AT-BE-BG-CH-CZ- DE-DK-EE-ES-FI- FR-GB-GR-HR-IE- IT-LT-LU-LV-NO-PL- PT-RO-SE-SI-SK-TR	G20 G20/ G25	20 20/25	UM	175
			UP	-
			A(mm)	0 6
			Um	90
DE	G25	20	UM	195
			UP	-
			A(mm)	0 6
			Um	90
NL	G25.3	25	UM	175
			UP	-
			A(mm)	0 6
			Um	90
HU	G20	25	UM	165
			UP	-
			A(mm)	0 6
			Um	90
HU	G25.1	25	UM	190
			UP	-
			A(mm)	0 6
			Um	90
BE-BG-CY-CZ-DK- EE-ES-FI-FR-GB- GR-HR-HU-IE-IT-LT- LU-LV-MT-NL-NO- PT-RO-SE-SI-SK-TR	G30/ G31	28-30 /37 28-30	UM	115
			UP	-
			A(mm)	12
			Um	55

Technical Data

Countries	Gas type	Pa (mbar)	Ref.	Art. No.
				2837861 / 78GSO
PL	G30/ G31	37	UM	110
			UP	-
			A(mm)	12
			Um	555
AT-CH-DE-HU	G30/ G31	50	UM	100
			UP	-
			A(mm)	12
			Um	55
UM: MAX nozzle				
Um: MIN nozzle				
UP: Ignition burner				
A: Open the air ring				
Pa: Connection pressure				
reg: set				


Tab. 2

Gas Consumption

Model / Art. No.		2837861 / 78GSO	
Rated heat load, Qn		kW	5
Rated heat load, Qn G25.3 (25)		kW	4,7
Total gas consumption	G20 (20)	0,69	0,53
	G25.3 (25)	0,75	0,57
	G25 (20)	0,80	0,62
	G20 (25)	0,69	0,53
	G25.1 (25)	0,80	0,61
	G30 (29)	0,51	0,39
	G30 (37)	0,51	0,39
	G30 (50)	0,51	0,39

Tab. 3

4.3 List of Components of the Appliance

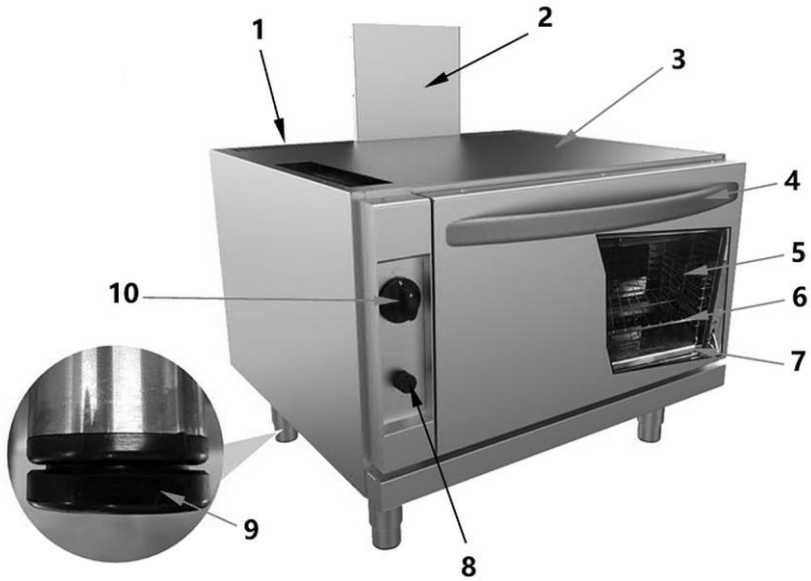

EN

Fig. 1

- | | |
|---------------------------------------|----------------------------------|
| 1. Ventilation chimney | 2. Ventilation chimney extension |
| 3. Housing | 4. Appliance door |
| 5. Left and right guide rails (2 pcs) | 6. Grate |
| 7. Heating element cover | 8. Piezoelectric ignition |
| 9. Feet (4 pcs) | 10. Temperature controller |

5 Installation Instructions

5.1 Installation



CAUTION!

Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

NOTE!

The manufacturer disclaims all liability and provides no warranty for damages, which may be attributed to non-observance of regulations or incorrect installation.

EN

Place of Installation

- This appliance are A1 type appliances, which means that they do not have to be connected to a fume extraction system. In order to provide venting in the place of installation, follow indications included in DVGW G631 data sheet.
- Place the appliance in a well-ventilated room, under a fume extractor, if possible, in order to eliminate fumes or odours generated when food is prepared (see DVGW G631 data sheet).
- A room, in which the appliance is installed, should contain the amount of air necessary for burning gas according to regulations in force. For proper burning, the required fresh air inflow may not be lower than 2 m³/h per kW of appliance's rated power (see appliance's rated plate). Additionally, accident prevention regulations should be observed.
- Make sure that there are no objects near or under the appliance that may restrict the amount of air necessary for burning.
- Before placing the appliance, check the dimensions and exact position of gas connections.

Installation Instructions

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- Screw 4 feet in.
 - To level the appliance, you may adjust the height of feet.

IMPORTANT!

Never use the appliance without feet.

- Never place the appliance directly next to walls, furniture, or other objects made of flammable materials. Maintain minimum clearance of 200 mm between side and rear walls and the said objects and walls. Maintain clearance of at least 600 mm between the appliance's surface and horizontal surfaces over the appliance.
- If keeping the minimum clearance is not possible, walls should be isolated with non-combustible, thermo-insulation materials (e.g., films made of heat resistant materials, which may sustain temperature of at least 65°C). Follow fire protection regulations in force.

- When adjusting the feet, level the appliance and set its height. Considerable differences in height or tilting may negatively affect the appliance's operation.

Connection to Gas Installation

- Before making the connection to gas installation, make sure that the appliance is set to gas and pressure is available in the installation location (see rating plate on the appliance and packaging). If factory default settings are not suitable, the appliance must be adapted to the available gas type (section '**Resetting to Other Type of Gas / Required Adjustments**').
- The attested gas shut-off valve must be installed in an easily accessible location between the gas supply installation and the appliance, so that, if needed, gas supply may be interrupted at any time.
- Check if the gas cylinder (if it is included) is correctly set up and secured, and if it is located in a dry place.
- Connect the appliance to the gas supply installation, using rigid connection tubes or flexible steel hoses, with section suitable for the given rated power and length.
- Use only connection tubes with, at least, diameters equalling the diameter of the appliance's gas connection. Gas connection stub is found at the back of the appliance.
- Make sure that flexible hoses do not run on or near hot surfaces, are not subject to stress or pressure and do not come into contact with sharp edges or other objects that could damage the tube.
- After connecting the appliance, all connection points between the installation and the appliance must be subject of tightness check. To this end, use spray for detecting leakages or foam producing agents, which do not spur corrosion. Connection points should be covered with an agent - no air bubbles should be produced. Also the gas shut-off valves should be subject of this check.

WARNING!

Do not use open fire to test tightness.

Checking Gas Pressure and Rated Heat Load

- With first installation, the gas installation technician must verify the appliance's rated heat load, as well as conduct maintenance, and, if needed, resetting to other type of gas.
- **DO NOT** attempt to increase the power nor rated heat load specified by the manufacturer.

Installation Instructions

- Check the rated heat pressure with gas meter and a stop watch. Measure exactly the amount of gas flowing per unit of time the appliance is consuming with maximum power.
- Compare the measured value with data on consumption in section '**Technical Specifications**', Table 3. Admissible deviation is $\pm 5\%$.
- Check the gas supply pressure observing indication in section **7.3 „Maintenance / Gas Supply Pressure Check“**.

Resetting to Other Type of Gas / Required Adjustments

The appliance is factory set to natural gas E.

Check the type of the supplied gas in the country of installation, and, if needed, reset the appliance to the other gas type.

Tables 1 and 2 in section '**Technical Specifications**' provide, depending on the country of installation:

- what gas types may be used to power the appliance;
- nozzles and settings for each gas type that is used.

The number provided in Table 2 for proper nozzles is pressed on nozzles' bodies.

In order to adapt the appliance to the gas type, with which it may be effectively operated, collect data from Table 2 and perform the following actions:

- exchange main burner's nozzle (UM)
- fit main burner air controller within the distance A
- exchange ignition burner's nozzle (UP)
- perform air adjustment of ignition burner (if needed).

Replacement of Main Burner Nozzle

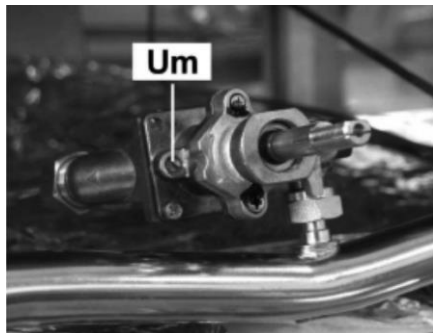


Fig. 2

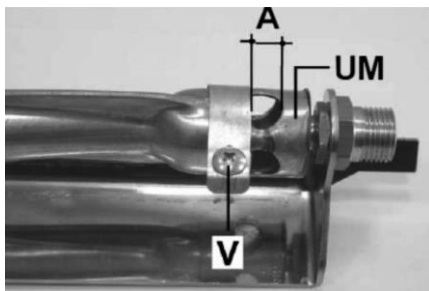


Fig. 3

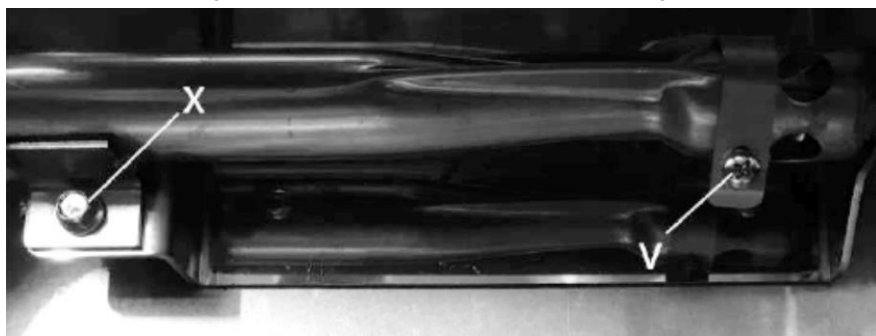


Fig. 4

1. Remove gas controller.
2. Remove the oven's bottom.
3. Loosen the X screw (Fig. 4).
4. Remove main burner's nozzle UM (Fig. 2), and exchange it with a nozzle provided in Table 2 (part of the delivery).
5. Re-tighten main burner's nozzle UM (Fig. 2).
6. Set the air controller within the distance of A (Fig. 3), as provided in Table 2.
7. Re-tighten firmly the V (Fig. 3) bolt.

Functional Check

- Before test-running, install the appliance in a well ventilated room and remove any flammable materials from the vicinity of the appliance.
- Before starting, perform the tightness test using soapsuds. Cover connections and pipe fittings with suds. Leakages are revealed when bubbles are produced on couplings and pipe connections. Other method involves observation of gas meter. No reaction of gas meter indicates that there are no gas leakages.

WARNING!

Do not use open flame for checking tightness of gas installation!

- Restart the appliance, observing indications in section '**Appliance Start-up**'.
- Check the appliance for gas tightness (see DVGW data sheets, TRGI/TRF).
- Verify burner's ignition.
 - Verify flame shape.

6 Operating Instruction

Indications for the User

- Read carefully this instruction manual. It contains important indications for installation, usage and maintenance of the appliance.
- Before operating the appliance, make sure that its condition is flawless and that it is located in a well ventilated room.
- Always strictly observe the following safety precautions:
 - Check if there are no objects near or under the appliance that may restrict the amount of air necessary for burning.
 - Never cover ventilation and discharge openings in the appliance.
 - If the malfunction persists, do not use the appliance and arrange for gas installation technician's visit.
 - Any manipulation with the appliance, assembly or maintenance work may be performed exclusively by the authorized service personnel.
 - The user is authorized to perform only everyday routine cleaning to maintain the device in a good condition.
 - The appliance should be used solely for grilling of suitable food products; do not use it for any other purposes. The use against the intended purpose may lead to severe injury or damage caused by, for example, high temperatures and fire, etc.
 - Never leave the operating appliance without supervision.
 - If the appliance is not to be used any more, rotate the knob(s) to OFF position and close the gas shut-off valve in the gas line.



WARNING

Risk of burning!

During operation, the housing and appliance door become very hot and remain hot for a while after switching the appliance off.

Do not touch the appliance during operation nor immediately after switching it off. Open and close the appliance door only using the door handle.

To operate the appliance, use handles and elements designed to this end.

Oven sheets heat up considerably during operation.

For removing hot food use dish-washing cloths or oven mitts.

Preparation of the Appliance

1. Before starting-up, clean the appliance and its equipment inside and outside observing instructions in section '**Cleaning**'.
2. Before first use, and observing instructions in section '**Control Elements / Settings**', heat the oven up without food to eliminate any unpleasant odours that come from the thermal insulation. Select the highest temperature setting.

A small amount of smoke or unpleasant odour may be produced. This is normal during first use and should not recur.

3. Next, open the appliance door to allow all the smoke to escape.

Control Elements / Settings

The appliance is controlled with the use of the temperature controller.



Fig. 5

Temperature Setting

The precise temperature setting (140–280°C) provides for correct cooking/roasting of foods, both on the outside as well as in the inside.

When the temperature is too low, the foods are more dried than roasted.

On the other hand, too high a temperature may lead to burning foods from the outside, while they remain raw in the inside (a phenomenon that is, at times, desirable especially with meat).

EN

Cooking/Roasting Process in Gas Oven

NOTE:

Prior to each use, heat the gas oven properly. Set the temperature approx. 30°C above the required temperature and correct it when food is put into the oven in order to obtain uniform effect.

1. Press the knob and rotate it to the required temperature in the range of 140–280°C.
2. Press the piezo ignition button.
3. Keep the temperature controller knob pressed for approx. 20 seconds, and then release it.
4. Once the pre-set temperature has been reached, place the products to be cooked/roasted in suitable GN containers or in containers (casserole dish, baking trays, oven sheets, etc.) in the gas oven chamber on the grill grate.

You can place up to 5 oven sheets/grates on 5 guide rail pairs of the gas oven at a time. When filling the appliance with food products, make sure that there is a

sufficient top clearance between dishes and oven sheets, which will allow for maintaining optimum heat distribution in the oven chamber.

5. Remove the prepared food from the oven.
6. When the appliance is not to be used any more, switch the ignition burner off by pressing the knob and setting it to '0' position.

7 Cleaning and Maintenance

7.1 Safety Instructions for Cleaning

- Close the gas supply valve before cleaning.
- Leave the appliance to cool down completely.
- Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed objects may damage the appliance.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

7.2 Cleaning

1. Clean the appliance regularly at the end of each working day, and, if necessary, also in the meantime or when the appliance is not to be used for a longer time.

With regular cleaning you may avoid burning leftovers of pies and roasts.

2. Remove the used oven sheets, grates and food containers from the appliance.
3. Clean the thermal processing chamber with a soft, damp cloth and mild cleaning agent.
4. In case of stubborn soiling, use commercially available oven cleaning agents. Observe instructions of the manufacturer of such a cleaning agent.

In order to facilitate cleaning of the oven chamber, you may remove the guide rails.

5. Remove the guide rails and take them out of the thermal processing chamber.
6. Clean the guide rails thoroughly with warm water, a soft cloth and a mild cleaning agent.
7. Clean the oven chamber observing the instructions above.
8. Reinsert the guide rails.
9. Wipe the appliance housing and door from the inside and the outside with a soft, damp cloth.
10. Finally dry all cleaned parts and surfaces with a soft cloth.

Accessories

1. Clean the oven sheets with a paper towel or damp cloth.
2. Pour a little bit of oil onto the oven sheets to remove the stubborn residues. Let them soak for 5–10 minutes.
3. Clean the oven sheets with a soft, damp cloth and mild cleaning agent.
4. Wipe the oven sheets with a cloth soaked in fresh water.
5. Clean the rest of the used accessories — e.g.: grate, trays, etc. — with warm water, mild cleaning agent and a soft cloth or sponge.
6. Rinse the cleaned accessories with fresh water.
7. Dry the accessories with soft cloth.

7.3 Maintenance

ATTENTION!

Any works interfering in the appliance must be performed by professional and qualified personnel.

EN

We recommend to order the maintenance of the appliance with the qualified and authorised maintenance technician at least twice a year.

Perform the following maintenance works:

- Operation verification of the available control elements and protective devices;
- Verification of the flame;
- Verification of the ignition;
- Verification of the flame's safety;
- Verification of functions.

Operate the appliance observing the instruction manual and indications in section '**Indications for the User**' and check:

- gas supply pressure (see next section).
- correct switching of burners and operation of the fume extractor (chimney).

Gas Supply Pressure Check

Use a suitable manometer with 0.1 mbar minimum pitch.

Cleaning and Maintenance

- Remove operating panels.
- Remove the retaining screw from the pressure connection.
- Connect the manometer.
- Perform the measurement with an operating appliance.
- Disconnect the manometer and re-tighten the retaining screw back to the pressure connection.

ATTENTION!

If the gas supply pressure is outside the limit values range (min. – max.) in Table 2, interrupt the appliance's operation and contact local gas supply operator.

Cleaning Performed by the Maintenance Technician

At least twice a year, have the authorised maintenance technician perform the cleaning of the appliance's interior.

8 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. When malfunction cannot be removed, contact the technical service.

In such a case, provide article number, model name and serial number. These data may be found in the rating plate.

Problem	Possible Cause	Solution
Ignition burner does not switch on	Insufficient gas supply pressure	Check gas supply
	Clogged line or nozzles	Contact the service company
	Spark plug is incorrectly connected or damaged	Connect spark plug or replace it
	Igniter or spark plug line is damaged	Contact the service company
	Damaged knob	Contact the service company
Ignition burner does not switch on or goes out when the knob or piezoelectric igniter is released	Thermo-element is incorrectly connected to the knob	Contact the service company
	Thermo-element is damaged or insufficiently heated up by the ignition burner	Repeat the ignition process
	Damaged knob	Contact the service company
	Knob has not been pressed sufficiently long	Keep the knob pressed for approx. 20 seconds
	Damaged gas fittings	Contact the service company

Possible Malfunctions

Problem	Possible Cause	Solution
Main burner does not switch on when the ignition burner is on	Loss of pressure in gas supply line	Check gas supply
	Clogged line or nozzles	Contact the service company
	Damaged knob	Contact the service company
	Main burner is damaged or gas outlet openings are clogged	Contact the service company
Heating power output control is not possible	Damaged knob	Contact the service company

9 Disposal

At the end of the appliance's operational life cycle, dispose of the appliance, observing national and local regulations. To this end, we recommend contacting a professional company or local authorities' unit, proper for utilisation matters.

Before disposing of the appliance make sure that the appliance cannot be restarted to prevent any abuse and related risks, and then deliver it to the local collection point.