

600ST



700856

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Technical Support Hotline: +49 5258 971-197
www.bartscher.com



Version: 1.0

Date of preparation: 2024-01-10

Original instruction manual

1	Safety	2
1.1	Explanation of Signal Words	2
1.2	Safety instructions.....	3
1.3	Intended Use	6
1.4	Unintended Use	6
2	General information	7
2.1	Liability and Warranty	7
2.2	Copyright Protection	7
2.3	Declaration of Conformity	7
3	Transport, Packaging and Storage	8
3.1	Delivery Check.....	8
3.2	Packaging	8
3.3	Storage	8
4	Technical Data.....	9
4.1	Technical Specifications	9
4.2	Functions of the Appliance.....	10
4.3	List of Components of the Appliance	11
5	Installation and operation	12
5.1	Installation.....	12
5.2	Operation	14
6	Cleaning and Maintenance	20
6.1	Safety Instructions for Cleaning	20
6.2	Cleaning.....	20
6.3	Maintenance	21
7	Possible Malfunctions.....	22
8	Disposal.....	24



Read this instruction manual before using and keep it available at all times!

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



DANGER!

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



WARNING!

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



CAUTION!

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

IMPORTANT!

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

NOTE!

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

1.2 Safety instructions

Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

Fire hazard / flammable materials hazard / explosion hazard!

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

Safety

Operating personnel

- This appliance is not intended to be used by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching the appliance on.

Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.

- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.

- Do not use any electric appliances inside the cooling compartment, unless they are of the type approved by the manufacturer.

1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Freezing and storage of deep-frozen food products.
- Freezing and prolonged storage of suitable food products.

The appliance is intended for operation in maximum ambient temperature of 32 °C and relative humidity of 55%.

1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives;
- Storing explosive materials, like sprays filled with flammable propellants;
- Storing pharmaceutical products or preserved blood.

2 General information

2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

The warranty period for this appliance is 24 months, counted from the purchase date.

EN

2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

3 Transport, Packaging and Storage

3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint. Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

4 Technical Data

4.1 Technical Specifications

Name:	Deep freezer 600ST
Art. No.:	700856
Material:	stainless steel
Inner material:	steel, painted
Volume, in l:	600
Usable volume, in l:	511
Temperature range, min.-max., in °C:	-15 - -22
Ambient temperature, max., in °C:	32
Coolant, amount in kg:	R290a / 0,106
Climate class:	4
Energy efficiency class:	-
Energy consumption, in kWh/year:	1.410
GWP index:	3
Number of doors:	1
Number of shelves:	6
Shelf dimensions (W x D), in mm:	650 x 490
Shelves material:	steel, plastic-coated
Power load:	0,199 kW 230 V 50 Hz
Dimensions (W x D x H), in mm:	780 x 742 x 1870
Weight, in kg:	92,0

We reserve the right to implement technical modifications.

Version / characteristics

- Colour: silver
- Cooling: static
- Temperature control:
 - electronic
 - in 0.1°C increments
- Thermostat
- Control: electronic
- Digital display
- Automatic defrost function: no
- Evaporation of condensed water: no
- Insulation: polyurethane, 60 mm
- Type of shelves: grill
- Height-adjustable shelves: no
- Door type: leaf door
- Right-hand side door, changeable door hinge side
- Height-adjustable feet: yes
- Adjustable height: 1870 – 1885 mm
- ON/OFF switch: yes
- Indicator lamp: compressor

EN

4.2 Functions of the Appliance

The freezer is designed for freezing and storage of suitable food products. The optimal cooling temperature can be set on the display, in an easy and intuitive way, with the accuracy of up to 0.1°C.

4.3 List of Components of the Appliance



EN

The delivery does not include decorations!

Fig. 1

- | | |
|-----------------------------------|-------------------------|
| 1. Lock | 2. ON/OFF switch |
| 3. Digital temperature controller | 4. Appliance door |
| 5. Recessed grip | 6. Ventilation openings |
| 7. Feet (4x) | 8. Shelf support |
| 9. Shelves (6x) | 10. Housing |

5 Installation and operation

5.1 Installation



CAUTION!

Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

NOTE!

The manufacturer disclaims all liability and provides no warranty for damages, which may be attributed to non-observance of regulations or incorrect installation.

EN

Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



CAUTION!

Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;

Installation and operation

- sufficiently large, and thus enabling usage of the appliance with no problems;
 - easily accessible;
 - well ventilated.
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and restrict functions of the appliance, too.
 - Place the appliance so that sufficient air circulation is ensured. Leave 10 cm clearance from walls and other objects.
 - In order to avoid damage to the compressor, do not tilt the appliance more than 45° when positioning or transporting it.
 - If the appliance is to be relocated, follow the instructions below:
 - switch the appliance off;
 - disconnect the plug from the socket;
 - take out contents of the appliance;
 - tape firmly all loose elements in the internal chamber and tape the door;
 - the appliance may only be transported in vertical position.

IMPORTANT!

The appliance is not suitable for built-in installation.

EN

Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
- Prior to first use, the appliance should be installed and left standing upright for at least 2 hours, before it is connected to power supply.
- After a power failure or when the plug is removed from the socket, do not reconnect the appliance to power supply for at least 5 minutes.

5.2 Operation

Freezing of food products in the deep freezer

- Deep-freeze only food products that are suitable to this end and withstand low temperatures well.
- Deep-freeze only fresh food products.
- A suitable packaging should be selected for each food product and the product should be packed well. The packaging must be air-tight and impervious to water, as this could cause the frozen product to dry. Plastic films and bags should be soft and smooth, so that they stick to the contents well.
- Never freeze again any thawed or partially thawed products. Such products should be processed and consumed within a maximum of 24 hours.
- Observe proper indications of the manufacturers as to the freezing of given food products.
- It is best to freeze products in small portions and thaw them one by one. This caters for fast and uniform freezing and thawing. Frozen product should be described with its name and the date of freezing.
- When freezing larger amounts of fresh food products, the temperature in the appliance may rise temporarily. This does not affect the already stored food products.
- Do not place bottles filled with liquids in the appliance. Freezing liquids increase their volumes and may cause bottles to crack.
- Avoid opening of doors during the freezing process.

Storage of deep-frozen food products in the deep freezer

- Observe instructions for storage of food products indicated on their packages. If there are no indications, a food product should not remain in a frozen state for more than 3 months from the purchase date.
- The packages of food products frozen in the process of their manufacturing feature storage deadlines and temperatures. It is recommended to follow manufacturer's indications for storage and usage.
- Select only properly packed food products, provided with full data and store them in deep freezers in the temperature of -18°C or below.
- When buying deep-frozen food products, transport them in suitable containers to avoid thawing and refreezing. As soon as possible, place such products in a deep freezer.
- Do not buy icy products, as icing denotes that they have already been partially thawed a couple of times.

Installation and operation

- Protect food products against thawing and refreezing, as temperature rise shortens their storage period and deteriorates their quality.
- Partially or fully thawed food products should be immediately used. Low temperature preserves food products, but it does not eradicate micro-organisms. They reactivate at an accelerated pace and food products turn rapidly. Partial thawing reduces the nutritional value of food products, especially the nutritional value of fruits and vegetables, as well as ready-made meals.
- If the package is damaged or unnaturally bulged, it is likely that the food product has been stored improperly and that it is spoiled.

Before the first use

1. Before the first use, clean the appliance and its accessories observing the instructions in section **6 'Cleaning'**.
2. To end with, dry the appliance and accessories thoroughly.
3. Place the shelves in the appliance.
4. Close the appliance door.

Appliance start-up

1. Plug the device into a suitable single socket.
2. Switch the appliance on by switching the ON/OFF switch to 'I' (ON) position.


The digital display will turn on. The digital display will be showing the current temperature inside the cooling compartment for about 3 minutes and the compressor symbol will be flashing for about 3 minutes until it lights up continuously.

3. Prior to the first use, and before suitable food products are placed in the freezer, the appliance should reach the set temperature.
4. To set the temperature, follow indications provided in subsequent sections.

NOTE!

The optimal temperature for freezing and storing food products is -18°C. If the temperature is not maintained, food products can spoil.


Messages

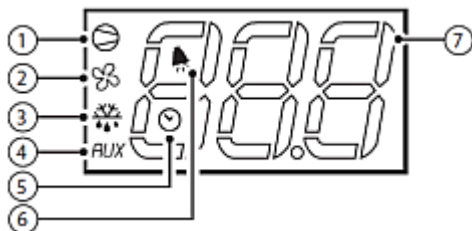

	Assigned Function	Normal Operation			Start-up
		ON	OFF	Flashes	
1	Compressor	ON	OFF	Required	ON
2	Fan	ON	OFF	Required	ON
3	Defrosting	ON	OFF	OFF	ON
4	Auxiliary output	Active output	Inactive output	-	ON
5	RTC clock	RTC available, activated (tEN=1) and at least 1 programmed time cycle	RTC unavailable / deactivated (tEN=0) and no programmed time cycle	-	ON
6	Alarm	Active alarm	No active alarm	-	ON
7	Digits display	Consists of 3 displayed positions with a point and -199...999 interval. See /4, /5, /6 parameters for the sensor measurement value display, values in °C/°F and a point			

Table 1

Functions of Buttons

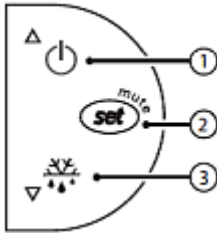

Button		Normal Operation		Start-up
		Single press of the button	Combo press of buttons	
1	UP ON/OFF	<ul style="list-style-type: none"> For more than 3 sec.: interchangeable display of the ON/OFF status 	Pressed concurrently: Activation/deactivation of continuous operation	-
3	DOWN Defrost	<ul style="list-style-type: none"> For more than 3 sec.: Activation/deactivation of defrosting 		Pressed concurrently: Activation of parameter RESET procedure
2	Set Mute	<ul style="list-style-type: none"> 1 sec.: Display/setting of the set value For more than 3 sec.: Access to parameter configuration (input password 22) Switching off the sound alarm (buzzer) 	-	Pressed for more than 1 sec.: EZY RESET


Table 2


EN

Alarms and prompts

In the case of the alarm, the proper prompt flashes on the digital display, interchangeably with the temperature value; also, the buzzer and the alarm replay (if available) may be activated.

All alarms go off automatically (i.e. alarm prompt is stopped, when the cause for the alarm is eliminated; only the 'CHt' alarm must be confirmed manually through

switching off and on again of the appliance with the use of  button or disconnection from the mains supply).

When pressed, the  button switches off the buzzer; but the displayed alarm code and the alarm relay are deactivated only when the cause of the alarm is eliminated. The available alarm codes are listed in Table 3 below.

Alarm Code	Buzzer and Alarm Relay	LED	Description	RESET
E0	Active	ON	Sensor 1 error = regulation	Automatically
E1	Inactive	ON	Sensor 2 error = defrosting	Automatically
E2	Inactive	ON	Sensor 3 error = condenser / product	Automatically
IA	Active	ON	External alarm	Automatically
dOr	Active	ON	Open door alarm	Automatically
LO	Active	ON	Low temperature alarm	Automatically
HI	Active	ON	High temperature alarm	Automatically
EE	Inactive	ON	Appliance parameters error	Impossible
EF	Inactive	ON	Operation parameters error	Manually
Ed	Inactive	ON	Defrosting due to exceeded time limit	With the first, correctly completed defrosting
dF	Inactive	ON	Defrosting in progress	Automatically
cht	Inactive	ON	Initial alarm of the soiled condenser	Automatically

CHt	Active	ON	Alarm of the soiled condenser	Manually
EtC	Inactive	ON	Alarm of timers	Through the setting of a timer

Table 3

Switching the appliance OFF

1. If the appliance is no longer used, switch it off by switching the ON/OFF switch to 'O' (OFF) position.
2. Disconnect the appliance from power supply (pull the plug out).

Defrost

ATTENTION!

Never damage the cooling circuit. Do not use pointed, sharp or any other mechanical aids to accelerate defrosting.

Never use electrical appliances such as a hair dryer, heat blower, etc., or an open flame to defrost the appliance.

EN

Appliance defrosting is not automatic, and must be carried out manually.

1. Defrost the ice coating in the appliance regularly (at least 2x per year).
1. In such a case, switch the appliance off with the ON/OFF switch.
2. Disconnect the appliance from power supply (pull the plug out).
3. During the defrosting process, wrap frozen products in several layers of paper (e.g. newsprint paper) and store them in a cool place or in the refrigerator.
4. As the temperature of frozen products rises, it is best to use them up as soon as possible, because the maximum freezing period is reduced by this procedure.

5. To completely defrost the appliance, leave the appliance door open until the ice has melted completely.
6. Place a suitable container to collect the defrosting water in the lower area of the appliance.
7. To end with, clean the appliance observing indications in section 'Cleaning'.

6 Cleaning and Maintenance

6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

6.2 Cleaning

1. Remove grates from the appliance and clean them with warm water and a soft cloth with neutral detergent. Rinse grates with fresh water.
2. Thoroughly wipe the external and internal surfaces of the device. Use warm water, soft cloth and neutral cleaning agent for cleaning. Wipe surfaces with a clean cloth.
3. Clean the door seal with a soft cloth soaked in warm water, without using detergent.
4. To end with, thoroughly dry the cleaned surfaces and grates.
5. Place grates back into the appliance.
6. Leave the appliance door open until the device is completely dry.
7. Close the appliance door.
8. Then, plug the appliance into a suitable single socket.
9. Switch the appliance on with the ON/OFF switch.
10. Before products to be frozen are placed in the freezer, the appliance should reach the required temperature.

11. Regularly remove dust and fibres from the rear wall of the appliance with a soft brush or vacuum cleaner.

6.3 Maintenance

Let the appliance to be inspected by professional technician at least once a year or as required.

The following operations should be regularly performed by a qualified specialist:

- cleaning the condenser with suitable tools (vacuum cleaner or soft brush);
- checking of electrical connections;
- checking of the thermostat and the sensor;
- checking of door and door seal.

7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. When malfunction cannot be removed, contact the technical service.

In such a case, provide article number, model name and serial number. These data may be found in the rating plate.

Malfunction	Possible cause	Solution
No functions available	The plug is incorrectly connected to the mains socket	Remove the plug and insert it properly into the socket
	Electric power supply safety fuse damaged	Check the fuse, connect the appliance to another socket and check it
	Damaged connection cable	Have the mains cable replaced by the manufacturer, service company or another qualified professional
	No power supply	Check the electric power supply
	The ON/OFF switch is not switched to 'I' (ON) position	Switch the ON/OFF switch to 'I' (ON) position.
The appliance does not reach the required temperature	Incorrectly set temperature controller	Set the temperature controller correctly, following the instructions in the operation manual
	The appliance is in defrosting or dripping phase	Allow the defrosting process to be completed and wait some more time The appliance needs some time to reach the set temperature again.
	The evaporator is covered with ice.	Defrost the appliance
	Direct sunlight or heat sources in immediate vicinity	Move the appliance away from heat sources

Possible Malfunctions

Malfunction	Possible cause	Solution
The appliance does not reach the required temperature	Stored food products or other objects make it difficult to close the appliance door properly	Rearrange the products inside the cooling/freezing compartment or remove some of them to close the appliance door
	Cooling/freezing compartment is overloaded with hot food products or filled in such a way that proper air circulation is not possible	Remove the hot food products and allow them to cool Rearrange the products inside the cooling/freezing compartment to allow proper air circulation
Appliance operates unusually loudly	Appliance is not placed on even surface	Place the appliance on even surface
	The appliance does not stand evenly	Align the device using its feet
	The appliance touches walls or other objects	Ensure sufficient clearance from walls or other objects
	Loose screws or bolts on the appliance frame	Tighten the screws and bolts
The appliance is losing water	Faulty water drainer or water evaporating device at the back of the appliance (if applicable)	Have the water drainer or water evaporating device repaired or exchanged by a specialist (if applicable)
	Blocked or clogged condensate drain on the back wall of the appliance (if applicable)	Remove the blockage of the condensate drain (if applicable)

Malfunction	Possible cause	Solution
The appliance displays alarm messages	Technical error	Diagnose the error (see table in section 'Alarms and Reports') Contact the service company

The following phenomena are not malfunctions:

- Various sounds that are generated by the cooler during operation are a normal phenomenon and do not indicate any malfunctions.
- Splashing, bubbling and hums are generated by the coolant that circulates the system.
- Short, louder whirring/hooting or clicking sounds may be heard when the compressor of the appliance starts.

8 Disposal

Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.

Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.