

**7GN210****300093**

## Technical data



---

Name:	<ul style="list-style-type: none"><li>• <b>Clearing trolley 7GN210</b> for GN containers, GN baking trays, and trays</li></ul>
Code-No.:	<ul style="list-style-type: none"><li>• <b>300093</b></li></ul>
Material:	<ul style="list-style-type: none"><li>• Nickel-chrome steel</li></ul>
Realization:	<ul style="list-style-type: none"><li>• Frame: pipes of square section 25.8 x 25.8 mm Capacity: 7 GN containers 2/1 GN, depth 65 mm; One front and one back container lock; 4 swivelling rubber castors, Ø 100 mm, 1 buffer, 2 swivelling castors with stoppers; 1 storage space: W 590 x D 670 mm, maximum carrying capacity: 18 kg; Easy assembling kit</li></ul>
Dimensions:	<ul style="list-style-type: none"><li>• W 655 x D 740 x H 1010 mm</li></ul>
Maximum carrying capacity:	<ul style="list-style-type: none"><li>• 90 kg, 12 kg per slot</li></ul>
Distance between slots:	<ul style="list-style-type: none"><li>• 80 mm</li></ul>
Weight:	<ul style="list-style-type: none"><li>• 15.8 kg</li></ul>


---

- Unpack the individual elements and remove the packaging material.
- Check completeness of delivery according to the list below.

## Delivery range / Part name

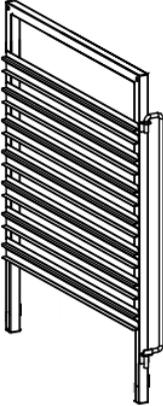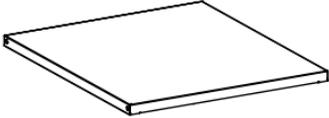
Element	Number	Name
	2	Side parts with 7 preinstalled guides and 1 container lock per each one
	2	Cross members
	1	Storage space
	2	Castors with stoppers
	2	Castors without stoppers
	4	Buffers for castors
	1	Allen wrench
	8	Square washers
	8	Bolts

## Assembly

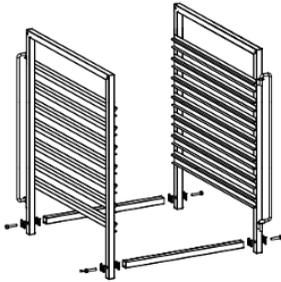


**Fig. 1**

1. First install 2 cross members to one of initially assembled side parts of the clearing trolley. Place square washer between the cross member and side part and between the side part and bolt, and tighten those elements with use of Allen wrench.
2. Connect cross members with another side part as above.

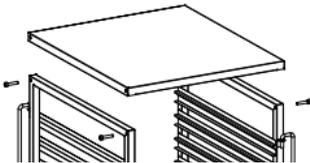

**Fig. 2**

3. Fix the storage space to the side parts with use of attached bolts.

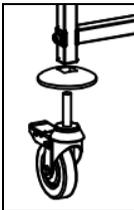

**Fig. 3**

4. Put the clearing trolley on its side or shelf and install the castors buffers to the side parts. Finally screw 4 castors into the side parts.

5. Place the clearing trolley on the castors and check its stability.
6. Clearing trolley may be levelled with use of castors by screwing or unscrewing them.
7. After placing the clearing trolley in required place lock 2 castors with stoppers to prevent the incidental relocation or falling down.

## Protection of containers

- Put the containers in the guides as required and protect them with use of front and back locks, lifting them a bit and placing before the containers (**fig. 4**).



**Fig. 4**

## Cleaning instructions

- The clearing trolley should be periodically cleaned with use of moistened and soft cloth.
- Never use any cleaning agents which may scratch the trolley elements surfaces.
- Dry the clearing trolley with soft cloth.

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120