



**135100**

**Bedienungsanleitung**

**Barmixer**

Seite 3 bis 14

**D/A/CH**

**\* Instruction manual**

**Bar mixer**

from page 15 to 26

**GB/UK**

**Mode d'emploi**

**Mixeur de bar**

de page 27 à page 38

**F/B/CH**

**Keep this instruction manual  
ready to hand at the product!**

<b>1. General Information</b>	<b>16</b>
1.1 Information about the instruction manual	16
1.2 Key to symbols	16
1.3 Liability and Warrantees	17
1.4 Copyright protection	17
1.5 Declaration of conformity	17
<b>2. Safety</b>	<b>18</b>
2.1 General information	18
2.2 Safety instructions for use of the device	18-19
2.3 Intended use	19
<b>3. Delivery, packaging and storage</b>	<b>20</b>
3.1 Delivery check	20
3.2 Packaging	20
3.3 Storage	20
<b>4. Technical data</b>	<b>21</b>
4.1 Technical specification	21
4.2 Overview of parts	21
<b>5. Installation and operation</b>	<b>22</b>
5.1 Safety instructions	22
5.2 Installation and connection	23
5.3 Operating	23-24
<b>6. Cleaning and maintenance</b>	<b>25</b>
6.1 Safety advice	25
6.2 Cleaning	25
6.3 Safety instructions for maintenance	26
<b>7. Waste disposal</b>	<b>26</b>

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120

## 1. General information

### 1.1 Information about the instruction manual

This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide.

Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device.

In addition to the information given here, you should comply with any local Health and safety Controls and generally applicable safety regulations.

The instruction manual forms part of the product and should be kept near the device and easily accessible for anyone carrying out the installation, servicing, maintenance or cleaning.

### 1.2 Key to symbols

In this manual, symbols are used to highlight important safety instructions and any advice relating to the device. The instructions should be followed very carefully to avoid any risk of accident, personal injury or material damage.



#### **WARNING!**

*This symbol highlights hazards, which could lead to injury.*

*Please follow the instructions very carefully and proceed with particular attention in these cases.*



#### **WARNING! Electrical hazard!**

*This symbol draws attention to potential electrical hazards. If you do not follow the safety instructions, you may risk injury or death.*



#### **CAUTION!**

*This symbol highlights instructions, which should be followed to avoid any risk of damage, malfunctioning and/or breakdown of the device.*



#### **NOTE!**

*This symbol highlights tips and information, which have to be followed for an efficient and trouble-free operation of the device.*

### 1.3 Liability and Warrantees

All the information and instructions in this manual take into account standard safety regulations, current levels of technical engineering as well as the expertise and experience we have developed over the years.

The instruction manual was translated with all due care and attention. However, we do not accept liability for any translation errors. The German version of this instruction manual is definitive.

If the delivery consists of a special model, the actual scope of delivery may differ from the descriptions and illustrations in this manual. This is also the case for special orders or when the device has been modified in line with new technology. If you have any questions, you should contact the manufacturer.



#### **NOTE!**

***Read the instruction manual carefully before using the device. The manufacturer does not accept liability for any damage or malfunction resulting from not following the instructions for use.***

The instruction manual should be kept near the device, easily accessible for anyone wishing to work with or using it. We reserve the right to make technical changes for purposes of developing and improving the useful properties.

### 1.4 Copyright protection

The instruction manual including any texts, drawings, images or other illustrations is copyright. No part of this publication may be reproduced, transmitted or used in any form or by any means without permission in writing from the manufacturer. Any person who commits any unauthorized act in relation to this publication shall be liable to claims for damages. All rights reserved.



#### **NOTE!**

***The contents, texts, drawings, pictures and any other illustrations are copyright and subject to other protection rights. Any person unlawfully using this publication is liable to criminal prosecution.***

### 1.5 Declaration of conformity

The device complies with the current standards and directives of the EU.

We certify this in the EC declaration of conformity.

If required we will be glad to send you the according declaration of conformity.

## **2. Safety**

This section provides an overview of all important safety aspects.

In addition every chapter provides precise safety advice for the prevention of dangers which are highlighted by the use of the above mentioned symbols.

Furthermore, attention should be paid to all pictograms, markers and labels on the device, which must be kept in a permanent state of legibility.

By following all the important safety advice you gain an optimal protection against all hazards as well as the assurance of a safe and trouble-free operation.

### **2.1 General Information**

This device is designed in accordance with the presently applicable technological standards. However, the device can pose a danger if handled improperly and inappropriately.

Knowing the contents of the instruction manual as well as avoiding mistakes and thus operating this device safely and in a fault-free manner is very essential to protect yourselves from the hazards.

To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.

This device may only be operated in technically proper and safe condition.

### **2.2 Safety instructions for use of the device**

The specifications regarding the industrial safety are based on the Regulations of the European Union applicable at the time of manufacturing the device.

If the device is used commercially, the user is obliged to ensure that the said industrial safety measures concur with the state of the rules and regulations applicable at the time in question for the entire period of use of the device and to comply with the new specifications.

Outside the European Union, the industrial safety laws applicable at the place of installation of the device and the regional territorial provisions must be complied with.

Besides the industrial safety instructions in the instruction manual, the general safety and accident prevention regulations as well as environment protection regulations applicable for area of application of the device must be followed and complied with.



### **CAUTION!**

- The device is not intended for use by individuals (including children) with physical or mental disabilities, insufficient experience, and/or insufficient knowledge unless such persons are under the care of a person responsible for their safety or have received instructions regarding appropriate use of the device.
- Children should be observed to ensure that they are not playing with the device.
- Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device.
- Every person using the device must act in accordance to the manuals and under consideration of the safety advice.
- The device is to be used indoors only.

## **2.3 Intended use**

Safe operation is only guaranteed when using the device for its intended purpose.

Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only.

The **bar mixer** is meant for the **preparation of milk shakes and cocktails only**.



### **CAUTION!**

***Any use going beyond the intended purpose and/or any different use of the device is forbidden and is not considered as conventional.***

***Any claims against the manufacturer or his authorized representative as a consequence of experiencing damages resulting from unconventional use are impossible.***

***The operator is liable for all damages resulting from inappropriate use.***

## 3. Transport, packaging and storage

### 3.1 Delivery check

Please check the delivery upon completeness and transport damage immediately after receipt.

In case of visible damage do not accept or accept the delivery with reservation only.

Note the extent of damage on the carrier's bill of delivery. Trigger off the complaint.

Hidden damages should be reclaimed immediately after notice, as claims for damages can only be asserted within the effective period for complaints.

### 3.2 Packaging

Please do not throw away the covering carton of your device as it might be useful for storage purposes, when moving or, in case of damages, when the device must be sent back to a repair center. The outer and inner packing material should be removed completely from the device before installation.



#### **NOTE!**

***If you liked to dispose the packing, consider the regulations applicable in your country. Supply re-usable packing materials to the recycling.***

Please inspect the device upon completeness. In case any part is missing please contact our customer service center immediately.

### 3.3 Storage

Keep the package closed until installation and under consideration of the outside indicated positioning- and storage markings.

Packages should be stored under consideration of the following:

- Do not store outdoors.
- Keep it dry and dust-free.
- Do not expose it to aggressive media.
- Do not expose it to direct sunlight.
- Avoid mechanical shocks and vibration.
- In case of longer storage (> 3 months) make sure you check the state of the packaging and the parts regularly. If required refresh or renew.

## 4. Technical data


### 4.1 Technical specifications

<b>Description:</b>	<b>Bar mixer</b>
Item no.:	<b>135.100</b>
Model:	Housing, chromed; Stirring staff, stainless steel; Blending disk, plastic
Connection:	230 V ~ 50 Hz 85 W
Dimensions:	W 135 x D 185 x H 365 mm
Shaker:	made of chromium nickel steel, capacity: 700ml
Weight:	1,3 kg

Subject to technical changes and alterations!

### 4.2 Overview of parts

1. **Swivel head**
2. **Cup/shaker clamp**
3. Detachable **stirring staff** for blending and frothing up of drinks.
4. **Cup support**
5. **Switch** with 2 speed levels  
0 - OFF  
1 - slow  
2 - fast
6. **Safety switch**
7. **Shaker with 700 ml capacity.**
8. Mark for **maximum filling quantity (approx. 350 ml)**
9. Mark for **minimum filling quantity (approx. 150 ml)**

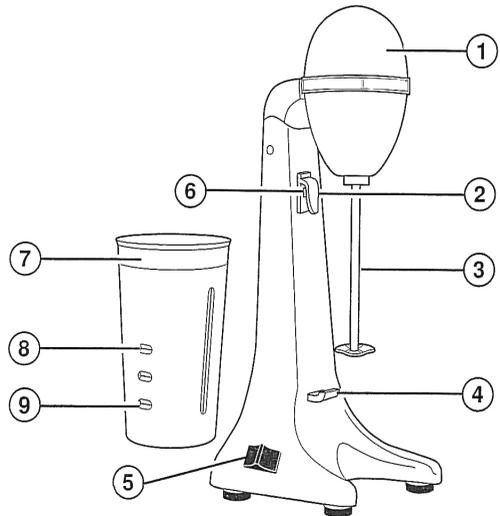

## 5. Installation and operation

### 5.1 Safety instructions



**WARNING! Electrical hazard!**

***The device must only be connected to a properly installed single socket with protective contact.***

***Never yank cord to disconnect from outlet.***

***Cable must not touch any hot parts.***

- See that the cable does not touch any heat sources or sharp edges. Do not let the cable dangle over the counter edge.
- Do not use the device in case it does not function properly, has been damaged or dropped.
- Do not use any accessory or spare parts that have not been recommended by the manufacturer. These can be dangerous for the user or lead to damages of the device or personal injury, and further, the warranty expires.
- Do not lay the cable over carpets or heat insulations. Do not cover the cable. Keep away the cable from operating range and do not dunk it into water.
- Do not leave the device unattended in the presence of children.
- Do not move or tilt the device when in operation.



**WARNING! Hazard via electrical current!**

***The device can cause injuries due to improper installation!***

***Before installation the local power grid specification should be compared with that of the device (see type label).***

***Connect the device only in case of compliance!***

***Take note of the security advice!***

## 5.2 Installation and connection

- Discard the complete packing material after unpacking the device.
- Place the device on an even, safe spot which is dry and supports the weight of the device.
- Do not set up the device near containers filled with water or other liquids.
- Not **at any time** should you place the device on an inflammable surface (such as: table cloth).
- You must not position the device near open fireplaces, electric ovens/arc furnaces, furnaces/electric heaters or other heat sources.
- The electrical circuit in the socket must be secured to at least 16A. Only connect the device directly to the wall socket; do not use any extension cords or power strips.
- Place the device so that the plug is easily accessible and can be quickly removed from its socket in case of necessity.

## 5.3 Operating

- Insert the stirring staff by tilting the swivel head upwards and pushing the stirring staff into the fixture until it snaps in.
- Clean the stirring staff and the shaker before use (see chapter 6.2 „Cleaning“).
- Wipe the device from the outside using a damp, soft cloth.
- Insert the power plug of the device into a grounded single socket.
- Make sure the switch is set to position „O“.
- Fill the desired ingredients into the shaker.




### **ATTENTION!**

***When filling the shaker, make sure the mark for maximum filling quantity is not exceeded (upper mark, approx. 350 ml).***

***Make sure the shaker is filled at least up to the minimum filling mark (lower mark, approx. 150 ml) as the stirring staff does not reach the ingredients otherwise!***

- Mount the shaker to the device. Make sure the upper part of the shaker is behind the cup/ shaker clamp.
- The bottom edge of the shaker must be mounted firmly on top of the cup support as only this way the stability and the contact of the shaker to the safety switch is ensured.

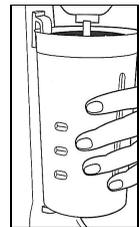

### **ATTENTION!**

***User the delivered shaker only!***

- After having ascertained yourself that the stirring staff is placed firmly in the fixture, you may activate the Bar Mixer using the switch. Make sure you always start with the switch set to speed level „1“ (**slow**) and change into speed level „2“ (**fast**) only afterwards.
- Mix the drink until it reaches the desired consistency (1-2 minutes).
- When the drink is mixed properly set the switch back to position „0“ (**OFF**), push the swivel head upwards and lift the shaker from the cup support.
- Fill the contents of the shaker into glasses or cups and serve.
- When using hard ice cream or preparing viscous shakes you may as well lift the shaker with your hand and manually move it around the stirring staff in order to achieve a more even mixing result.



## **WARNING! Risk of injury!**

**Do not touch any moving parts at any time!**

- Disconnect the device from the power socket (pull the power plug!) when it is not used.

## **Notes and Hints**

- Most drinks can be mixed in less than two minutes.
- For preparation of fruit drinks do not use whole fruits but chopped or pureed fruits.
- The shaker must always be filled up to the minimum filling mark so the fluid reaches the stirring staff.
- When preparing thin/non-viscous drinks make sure the maximum filling mark is not exceeded, in order to prevent the contents from spilling over during mixing.
- Best results may be achieved using preferably cold ingredients. Milk shakes e.g. taste best when prepared with ice cold milk. The colder the milk, the more viscous and foamy the drink becomes.
- Sirups and powders should only be added shortly before mixing so they do not sink to the bottom of the shaker immediately.
- Always add the liquid ingredients to shaker first and fill in the solid ingredients afterwards.
- Start mixing at speed level „1“ (**slow**) before increasing to speed level „2“ (**fast**).
- The bar mixer is **not** meant for ice crushing. Always use ready-crushed ice for drinks that require ice.

---

## 6. Cleaning and maintenance

### 6.1 Safety advice

- Before beginning with repair or cleaning works make sure the device has been disconnected from power socket (pull the power plug!!!) and has cooled down.
- Do not use any acid agents and make sure no water ingresses the device.
- To protect yourself from electric shock, **never** immerse the device, its cables and the plug in water or other liquids.



#### **CAUTION!**

*The device is not suited for direct washing via water jets. Therefore, you must not use any kind of pressure water jet for cleaning the device!*

### 6.2 Cleaning

- Clean the device on a regular basis.
- In order to clean the stirring shaft, simply fill the shaker with approx. 250 ml of a warm soap-water solution, insert it into the device and set the switch for about 30 seconds to speed level „1“ (**slow**). Afterwards, set the switch to position „O“ (**OFF**) and pour away the soap-water solution. Repeat the procedure with warm water only in order to rinse the stirring staff. Dry the stirring staff with a soft, dry cloth.
- Rinse the shaker with warm water and dry it thoroughly.
- For thorough cleaning you may as well put the shaker and the stirring staff into the dishwasher. For this purpose, detach the stirring staff (pull off downwards).



#### **NOTE!**

*Stirring staff and shaker are dishwasher-proof!*

- Wipe the housing of the device with a soft, damp cloth and dry off thoroughly afterwards.
- Only use a soft cloth and make sure you **never** use any kind of abrasive agents or pads which could scratch the surface.
- After the cleaning procedure, you should use a soft and dry cloth to wipe dry and polish the surface.
- Make sure the device has been cleaned properly before storing it in a dry place.

## 6.3 Safety instructions for maintenance

- Check the mains connection cable for damage from time to time. Never operate the device when the cable is damaged. A damaged cable must immediately be replaced by customer service or a qualified electrician to avoid dangers.
- In case of damage or malfunction, please contact your stockist or our customer service centre.
- Only a qualified technician and using original spare parts and accessories should carry out repairs and maintenance of the device. **Do not attempt to repair the device yourself.**

## 7. Waste disposal

### Discarding old devices

At the end of its service life the discarded device has to be disposed in accordance with the national regulations. It is advisable to contact a company which is specialized in waste disposal, or just contact the local disposal service in your community.



### **WARNING!**

***To exclude any abuse and the dangers involved make the waste device unfit for use before disposal. For that purpose disconnect device from mains supply and remove mains connection cable from the device.***



### **NOTE!**



***For the disposal of the device please consider and act according to the national and local rules and regulations.***

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

phone: +49 (0) 5258 971-0  
fax: +49 (0) 5258 971-120