

200



107301

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2020-12-03

Original instruction manual

Technical Data

Name:	Snackpoint 200
Art. No.:	107301
Material:	stainless steel
Dimensions of glass top (W x D x H), in mm:	790 x 200 x 300
Number of utility niches:	1
Utility surface in the utility niche (W x D), in mm:	760 x 590
Dimensions of shelf below utility niche (W x D), in mm:	755 x 580
Swivel castors:	4, 2 of which can be locked into place
Dimensions (W x D x H), in mm:	800 x 600 x 1.225
Weight, in kg:	42


We reserve the right to implement technical modifications.

EN

Version / Characteristics

- With glass top
- Properties of utility niches:
 - adjustable height of insert shelf, 3 heights
 - can be fitted with optional extra insert shelves
- Magnetic stainless steel front can be used as advertising space
- Equipped with:
 - shelf below utility niche, dimensions: W 755 x D 580 mm
- 2 cable ducts
- Glass panes (safety glass), rounded at server's side
- Diverse appliance combinations thanks to optional extra insert shelves
- Possibility of connecting 2 or more counters
- The set includes:
 - 2 connection elements
 - shelf reinforcements with adjustable fitting for optional extra insert shelves

List of Components of the Appliance

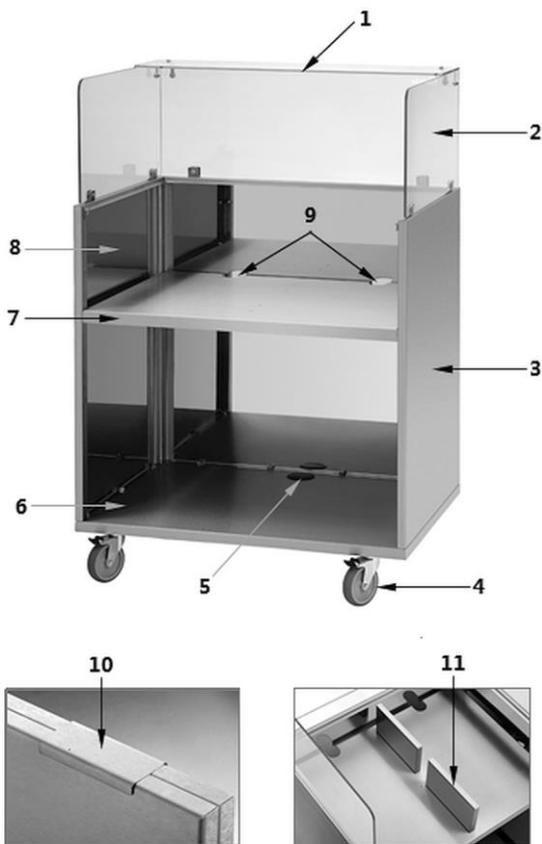

EN

Fig. 1

- | | |
|-----------------------------------|---------------------------------|
| 1. Glass top/sneeze guard | 2. Glass top |
| 3. Main appliance | 4. Swivel castors (4 pcs) |
| 5. Cable guide | 6. Shelf below utility niche |
| 7. Height-adjustable insert shelf | 8. Utility niche |
| 9. Cable ducts (2 pcs) | 10. Connection elements (2 pcs) |
| 11. Shelf reinforcements | |

Intended Use

Snackpoint 200 is intended to serve as a 'food preparation station' that can be fitted with various appliances. You can combine many different appliances, and owing to removable guard they are suitable for many different combinations.

Unpacking

1. Unpack the appliance and remove all external and internal packaging elements.



CAUTION!

Choking hazard!

Prevent children from accessing packaging materials, for instance: plastic bags and EPS elements.

2. Remove and dispose of packaging material according to environmental protection regulations.
3. Check completeness of delivery according to the list below:
 - main unit w 1 adjustable insert shelf
 - glass top, 3-piece + 6 pane holders
 - glass shelf/sneeze guard
 - 2 triple corner connection elements for panes
 - 4 swivel castors
 - 2 connection elements for, e.g., 2 appliances
 - 2 shelf reinforcements with adjustable fitting for optional extra insert shelves
 - set of bolts
4. Remove the protective film from the delivered elements and the appliance. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.

Assembly

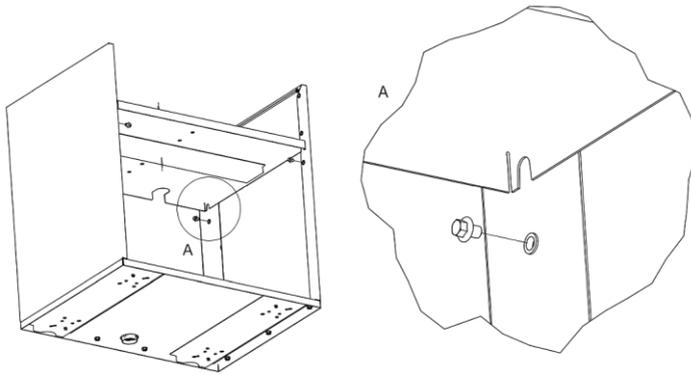


Fig. 2

1. Undo bolts in side walls of the main unit.
2. Move the insert shelf and hang it on bolts at a required height.
3. Tighten bolts properly.

EN A utility niche is created, in which required appliances may be placed.


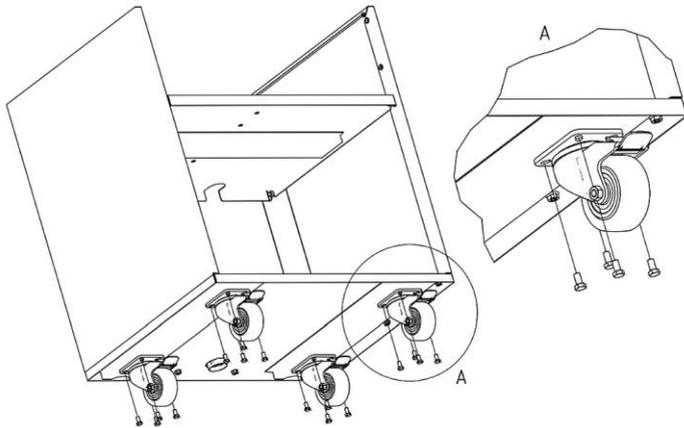


Fig. 3

4. Place the main unit on its side.
5. Fix the enclosed swivel castors at the bottom of the main unit; each time drive in 4 bolts (16 pcs of M5 bolts) into threaded sleeves.
6. Make sure that swivel castors with brakes are fixed at server's side.
7. Set the appliance on swivel castors.

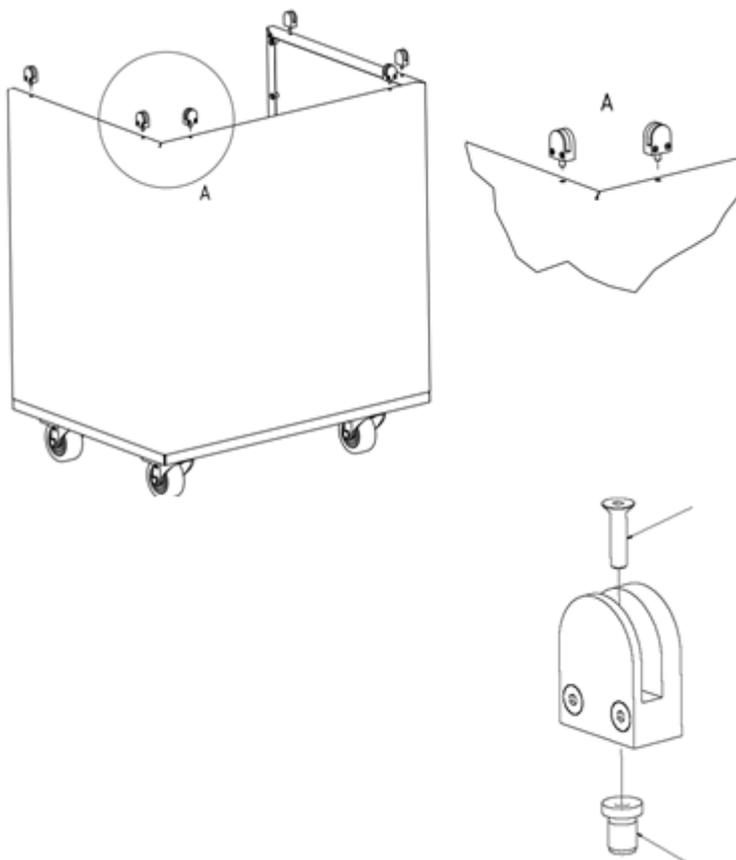

EN

Fig. 4

8. Place 6 pane holders in the designated openings in both side elements and at the front.

Beforehand, insert bolts into pane holders.

Insert 16 pcs of M4 bolts, with 1 into each opening, and 12 pcs of M4 blind rivet nuts.



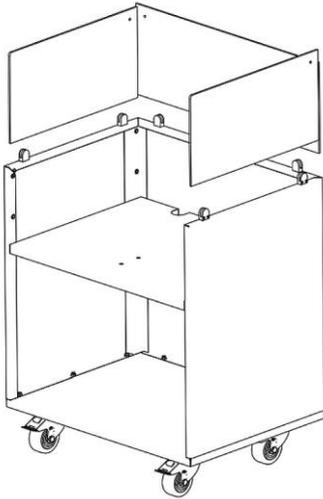


Fig. 5

9. Insert panes into pane holders.
10. Align glass panes.

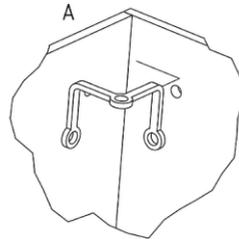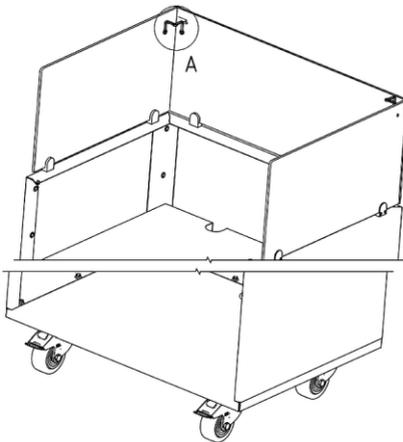

EN

Fig. 6

11. Insert both triple corner connection elements into openings in side panes and the front pane, and tighten them.

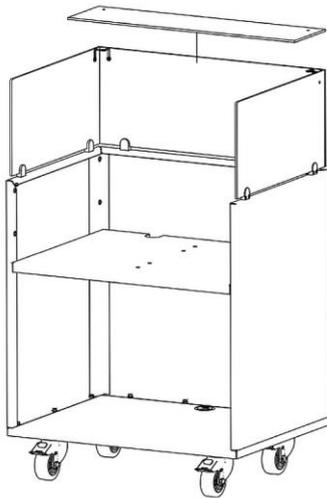


Fig. 7

12. Insert shelf/sneeze guard onto both side panes and the front pane.
13. Connect the shelf/sneeze guard with other panes with the pre-installed corner connection elements, seal and bolts.
14. Use hex key to tighten bolts in pane holders.

EN

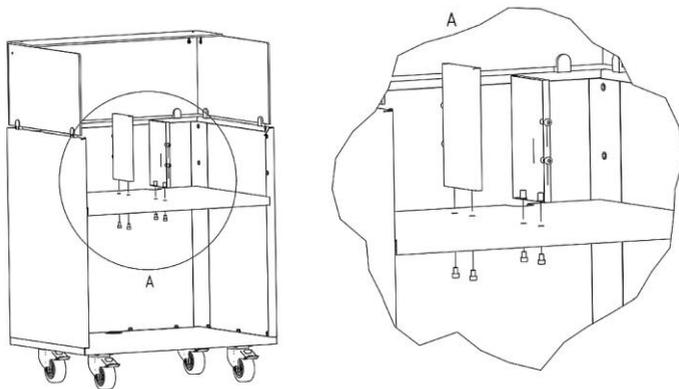


Fig. 8


15. To use another insert shelves (available optionally), both shelf reinforcements must be installed on the insert shelf.

NOTE:

Depending on the shelf height, reinforcements for additional shelves are installed differently, with suitable utility niches for the utilised appliances.

16. Point and hold the insert shelf in the required direction of installation, over the openings in the insert shelf designated to this end (Fig. 8).

17. Shelf reinforcements should be tightened firmly with the insert shelf from the bottom, with the use of the enclosed bolts (10 pcs of M5 bolts).

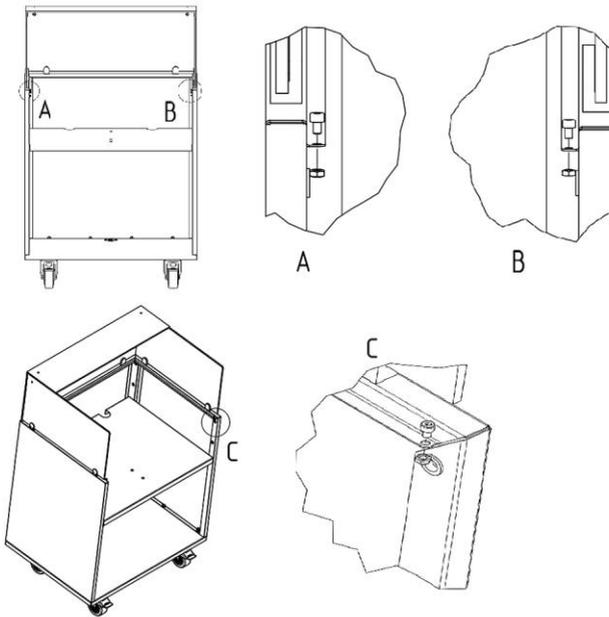

EN

Fig. 9

18. Tighten safety bolts (6 pcs of M5 bolts) in the utility trolley's metal plate. To this end, insert bolts into openings designated for this purpose and secure them from the bottom with M5 nuts.

Installation

- Snackpoint should be located in an area that is:
 - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
 - sufficiently large, and thus enabling usage of the installed appliances with no problems;
 - easily accessible;
 - well ventilated.
- During installation, make sure appliances' ventilation openings are not covered nor blocked.
- Never place the appliance directly next to walls, furniture, or other objects made of flammable materials.
- Maintain sufficient clearance from walls and other objects at sides and at the back. Observe indications contained in instruction manuals for the utilised appliances.
- When it is not possible to maintain the recommended clearances, use appropriate protection measures (e.g., film made of material resistant to high temperatures) that will ensure keeping the wall temperature within a safe range (up to 60°C).
- Observe fire-fighting regulations in force in the installation area.
- Lock swivel castors following installation of Snackpoint in the selected location.

EN

Before Use

1. Before use, clean the appliance, observing instructions in section 'Cleaning'.
2. For selected appliances, install suitable inset shelf.
3. Place appliances in utility niche on an insert shelf or in suitable utility niches of the insert shelf.
4. Power cords of electrical appliances should be fed through cable ducts to the bottom cable guide.
5. Plug appliances into suitable single sockets.

Equipment (Available Optionally)

Preparation and serving of foods with the highest flexibility retained. Snackpoint 200 offers practically limitless opportunities — from a hot-dog stand to a counter for grilled delicacies or a coffee bar. The mobile counter's function may be switched easily and rapidly, and thus perfectly adapted for its new job.

There are various combinations of appliances possible, owing to optionally available insert shelves with suitable utility niches and cable ducts.

Insert Shelves and Possible Appliance Combinations

Model-Name/ Insert shelf art. No.	Appliance name	Art. No.
Snackpoint 200 M1 / 107302 	Deep fryer	A162823E
	Curry sausage slicer	120578
Snackpoint 200 M2 / 107303 	Induction cooker fitting set	105836S
	Bain-marie	200240
Snackpoint 200 M3 / 107304 	Grill plate	A370031
	Bain-marie	200240
Snackpoint 200 M4 / 107305 	2 bain-maries	200240

<p>Snackpoint 200 M5 / 107306</p> 	<p>Induction wok fitting set</p>	<p>105997</p>
<p>Snackpoint 200 M6 / 107307</p> 	<p>Bain-marie</p>	<p>200240</p>
<p>Snackpoint 200 M7 / 107308</p> 	<p>Standard element, e.g. for:</p>	
	<p>Coffee machine</p>	<p>190052</p>
	<p>Cup heater</p>	<p>103076</p>
<p>Milk chiller</p>	<p>190076</p>	

With 2 Snackpoint 200 counters connected, the shorter side pane makes it possible to work with appliances smoothly.

Important Indication:

If the shorter side pane is required, 2 panes, art. No. 107309, are needed to establish connection.

- Connection plates needed for combination of 2 trolleys are delivered with appliances (item 10 in the overview of appliance components).



EN

Fig. 10



Fig. 11

VB Snackpoint 200 pane

Material: glass

Features:

- with pre-bored openings

Dimensions: 194 x D 6 x H 300 mm

Weight: 0.84 kg

Art. No. 107309

Cleaning

1. Clean the appliance regularly at the end of each working day, and, if necessary, also in the meantime or when the appliance is not to be used for a longer time.
2. Clean the housing and glass top with warm water, a mild cleaning agent and soft, damp cloth.
3. Clean the utilised equipment (insert shelves, connection elements, shelf reinforcements) with a soft, damp cloth.
4. If needed, use suitable cleaning agents for stainless steel surfaces. Observe instructions of such a cleaning agent's manufacturer.
5. Wipe all surfaces with a clean cloth.
6. Finally, dry washed surfaces with a soft cloth.
7. Clean the utilised table-top appliances according to indications provided in their instruction manuals.