


**600**

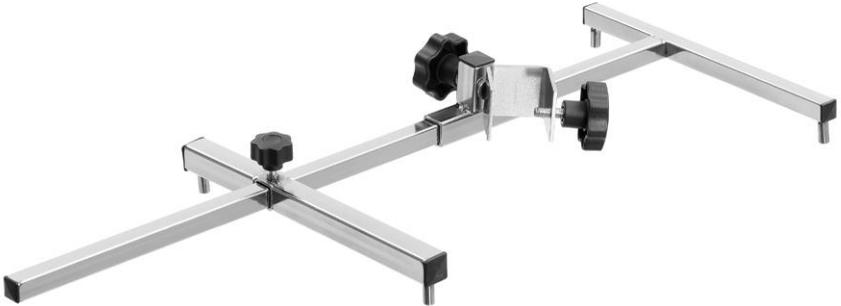

**130140**

**Technical data**

<b>Name</b>	<b>Hand blender holder 600</b>
Code no.:	<b>130140</b>
Material:	Stainless steel
Model:	<ul style="list-style-type: none"> <li>▪ blender diameter: 25 x 40 mm</li> <li>▪ max. pot size: 600 mm</li> <li>▪ properties: position and angle adjustable</li> </ul>
Dimensions:	W 255 x D 625 x H 70 mm
Weight:	1.18 kg


We reserve the right to implement technical modifications!

**Properties**

- The use of the blender holder provides significant savings on time and flexibility of work in the kitchen. The hand blender holder aids in the shredding of food, making puree and heating them during mixing.
- The installation and removal of the pot grip is simple. It may be attached to pots having a maximum diameter of 600 mm.
- The hand blender holder is designed to fit in with the following motor blocks and blenders:

- |        |        |
|--------|--------|
| 130130 | 130133 |
| 130131 | 130134 |
| 130132 | 130135 |
|        | 130136 |

## List of parts

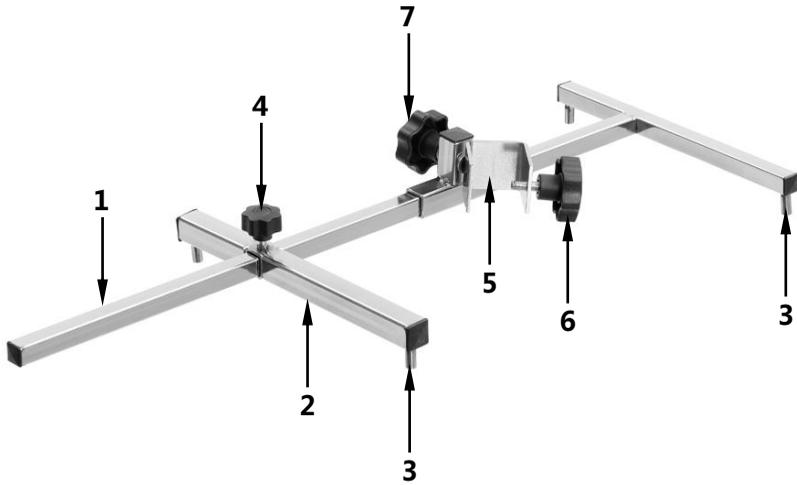

- 1 Pot grip
- 2 Pot size adjustment bar
- 3 Feet (4x)
- 4 Pot size set screw
- 5 Blender holder
- 6 Blender set screw
- 7 Angle adjustment set screw

## Mounting the blender holder on the pot / mounting the blender



Place the pot grip (1) on a suitable pot and shift the adjustment bar to suit the pot size (2), so that the pot grip is adjusted to the pot size. Tighten the pot size set screw (4).

Install a suitable blender in the holder (5) and tighten it with the set screw (6).

## Adjustment of blender position and angle



To set the blender position in the pot, move the movable part on the central pot grip bar to the required position.

If needed, change the blender angle by slightly unscrewing the set screw (7). Set the required angle and in the end retighten the set screw (7).

## **CAUTION!**

**Never change the blender angle during operation. First turn off the device!**

## Cleaning

- Disconnect the blender.
- Unscrew the set screw (6) of the blender holder, remove the blender from the holder.
- Clean the blender holder regularly at the end of your work day (more often, if needed) with a soft, moist cloth and gentle cleaning agent. Afterwards, thoroughly dry the blender holder.

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 5258 971-0  
fax: +49 5258 971-120  
**Service-Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)