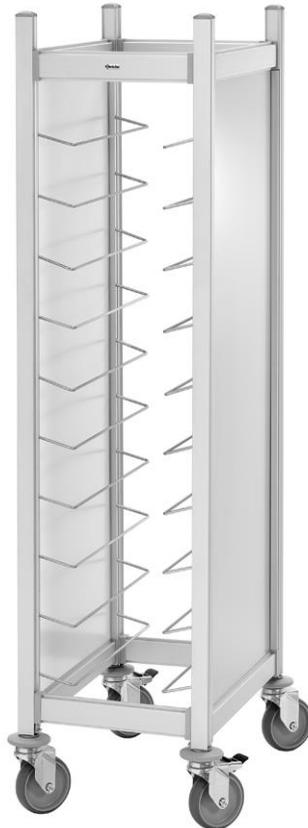


AT1000-GN**300149**

Technical data

Name	Tray trolley AT1000-GN
Code-no.:	300149
Material:	aluminium, stainless steel, plastic
Model:	<ul style="list-style-type: none"> ▪ Area of application: Clearing ▪ Tray holders ▪ Designed for: <ul style="list-style-type: none"> - Fast-food trays - Serving trays ▪ Slot format: 325 x 530 mm (1/1 GN) ▪ Number of slots: 10 ▪ Distance between the slots: 115 mm ▪ Load-bearing capacity per slot max.: 10 kg ▪ Total load-bearing capacity, max.: 60 kg ▪ Can be loaded from both sides ▪ Castors: 4 swivel castors, 2 with brakes ▪ Diameter of casters: 120 mm ▪ Wheel buffer: 4 pieces, plastic ▪ Delivery state: Building kit, plug system (easy assembly)
Dimensions:	W 460 x D 690 x H 1675 mm
Weight:	21.6 kg

We reserve the right to implement the technical modifications!

- Unpack the individual elements and remove the packaging material.
- Ensure that all parts are present:

Scope of delivery / Part name

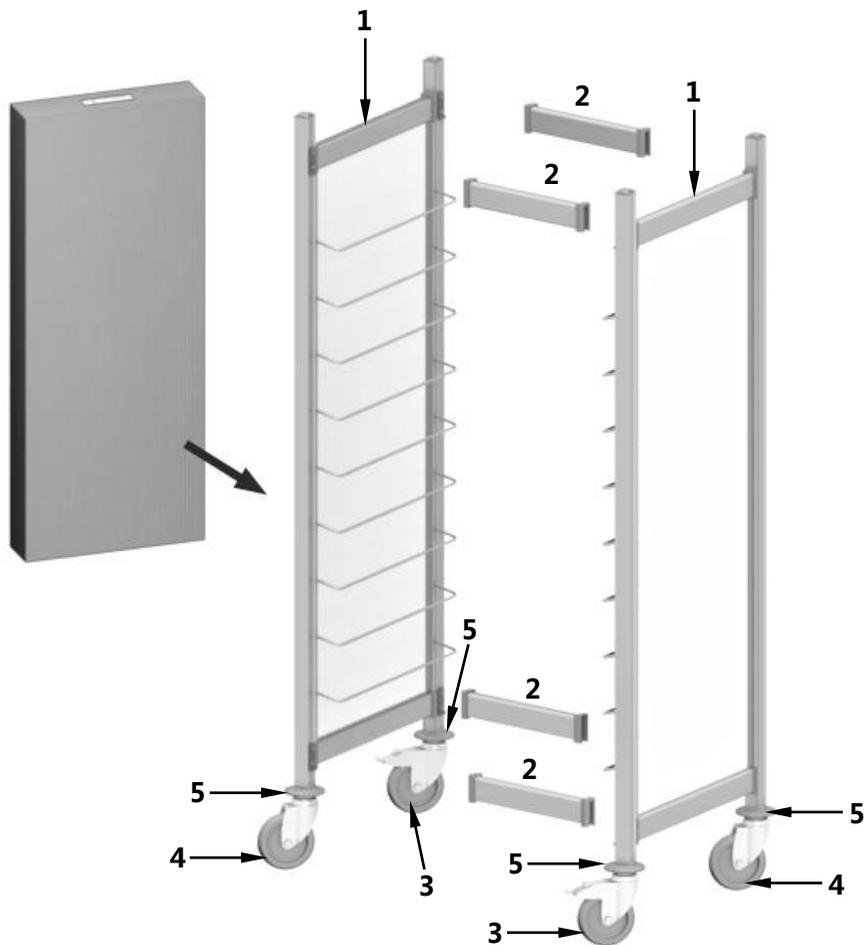


Fig. 1

- 1 Side element with 10 tray guides (2x)
- 2 Bar (4x)
- 3 Castors with brakes (2x)
- 4 Castors without brakes (2x)
- 5 Wheel buffers (4x)

Installation

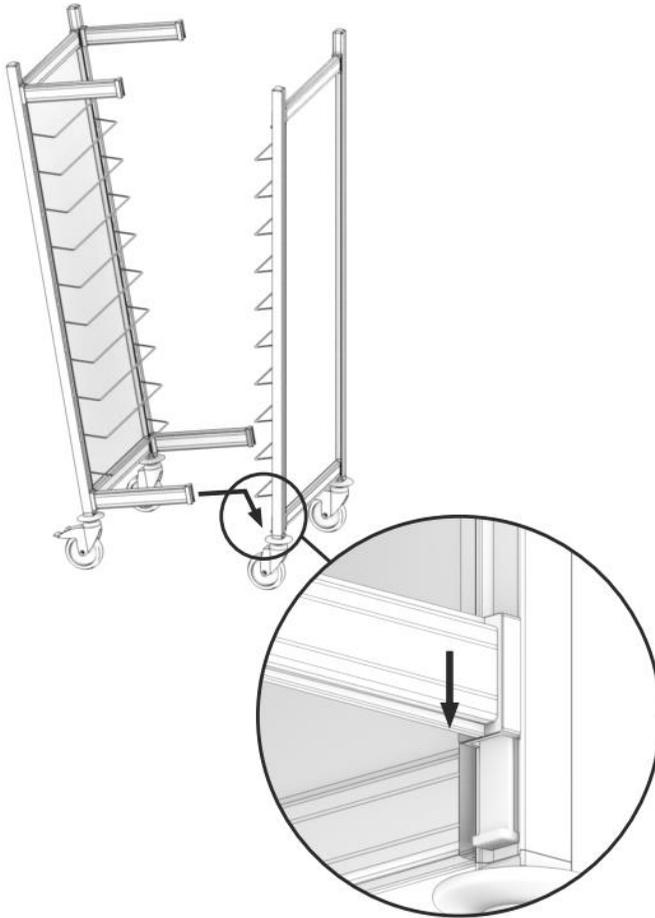


Fig. 2

1. Fix the wheel buffers (5) to the side element (1), and then screw the castors (3 + 4) into the side elements (1).
2. Mount the bar (2) on one of the side elements (1), placing it on the plastic joints of side elements (1). To facilitate the operation use a rubber hammer.
3. Finally, place the bars (2) on the plastic joints of the second side element (1) (**fig. 2**).
4. Check all plug-in connections of the tray trolley and its stability.

Loading of the tray trolley



- The tray trolley is equipped with 10 tray holders. The tray trolley can be loaded from both sides.
- Load tray holders, as needed, only with appropriate trays of fast-food or serving tray type (**fig. 3**): slot format: 325 x 530 mm (1/1 GN)



Fig. 3

Cleaning instructions

- Clean the clearing trolley with a soft, moistened cloth.
- Never use cleaning agents which may scratch the surface of the tray trolley.
- Wipe dry the tray trolley with a soft cloth.

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com