

PS 0,9L-W



850019

Technical data

Name	Disinfectant dispenser PS 0.9L-W
Code- No.:	850019
Material:	<ul style="list-style-type: none"> ▪ aluminium ▪ polipropylene ▪ plastic ABS
Colour:	<ul style="list-style-type: none"> ▪ silver ▪ white
Model:	<ul style="list-style-type: none"> ▪ Wall-mounted ▪ Operation: <ul style="list-style-type: none"> - One-hand operation, - Elbow operation - Manual ▪ Dosage: <ul style="list-style-type: none"> - Pump system - Spray system ▪ Basin: <ul style="list-style-type: none"> - Capacity: 0.9 litres - Refillable - Filling level control: Transparent plastic container ▪ Cartridge-free
Dimensions:	W 92 x D 225 x H 300 mm
Weight:	0.7 kg
Includes:	1 wall holder, attachment material

Subject to technical changes and alterations!


Properties

Quick and uncomplicated hand disinfection for maximum protection.

Be it in kitchens, hospitals, laboratories or public buildings – the cartridge-free pump system with the one-hand / elbow-operated dispenser ensures optimum hygienic conditions.

List of parts

- 1 Operating lever
- 2 Nozzle protection guard
- 3 Nozzle
- 4 Dispensing pump with tube
- 5 Disinfectant container
- 6 Housing
- 7 Front guard

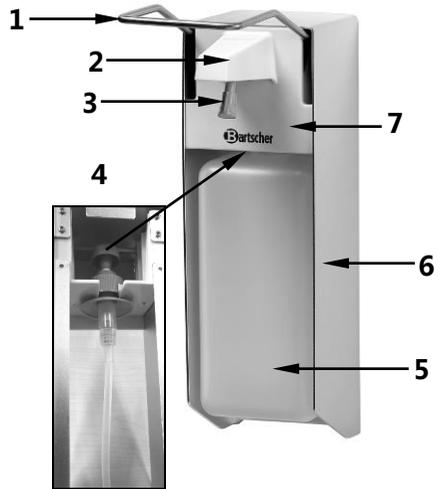


Prior to installation

- Unpack the disinfectant dispenser and attachment material and dispose of the packaging material according to the environment protection regulations.
- Place the disinfectant dispenser above the sink or close nearby.
- Observe the following information during installation:
 - Space required above the disinfectant dispenser. 40 mm
 - Recommended installation height: 130 – 135 cm, measured from the floor to the upper edge of the disinfectant dispenser.

Wall-mounting

- Slightly lift the container and remove it from the disinfectant dispenser.
- Press the locking button and pull the wall holder down from the housing.
- Using the openings in the wall holder mark 3 spots to drill the holes and drill the holes in the wall.
- Insert the included pins in the drilled holes. Mount the wall holder with the included bolts.

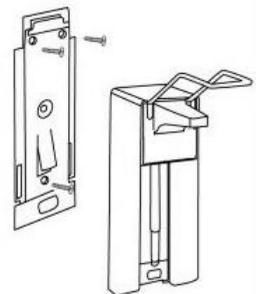

- Finally, slide the disinfectant dispenser housing onto the wall holder until the locking button clicks.
- Insert the tube into the filled up disinfectant container and move it upwards until it stands steadily on the lower shelf of the housing.

Re-filling / dispensing disinfectant

- To refill the disinfectant container remove it from the disinfectant dispenser housing as described above.
- Fill the disinfectant dispenser container with the appropriate disinfectant.
- Insert the tube to the disinfectant dispenser container and place it back into the housing, move it upwards until it stands on the lower shelf.
- Dispense the disinfectant from the container according to needs by pressing the elbow against the operating lever and hold the other hand under the outlet.


Note:

At the first time operation, press the operating lever several times to the stop until the disinfectant dispenser starts dispensing. Hold the hand under the outlet.



Cleaning and disinfecting of housing and dosing pump

- Do not use any scouring, aggressive or chlorine containing cleaning agents to clean the disinfectant dispenser.
- Regularly perform disinfecting cleaning by wiping external surfaces of the disinfectant dispenser.
- Before each refilling of the disinfectant dispenser prepare it manually. Follow the below described steps.

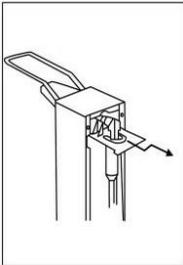

- Remove the disinfectant dispenser container from the housing, completely empty it before refilling with the disinfectant.
- Remove the dosing pump from the housing by holding the operating lever in the upper position and remove the dosing pump from the rear by slightly lifting it up.
- Thoroughly clean the dosing pump under hot running water. Dry the dosing pump and tube by wiping them with the disposable towel.


- Thoroughly clean the housing under hot running water, dry and disinfect it with the disposable towel.
- Place the dosing pump back in the housing by holding the operating lever in the upper position and sliding the dosing pump into the housing from the rear. If possible, do not touch the tube, otherwise wipe it with the disposable towel before placing it into the disinfectant dispenser container.
- Wipe the rear wall of the dosing pump. Finally, place the housing with the dosing pump onto the wall holder.
- Fill up the disinfectant container and place it in the housing.
- Dispense the disinfectant several times.
- After long breaks in the disinfectant dispenser use, thoroughly clean and disinfect it before using it again.

Auxiliary equipment (not included in the delivery)

Drip tray PS 0,9L-W

- Material:
 - Stainless steel, polypropylene
- Collection tray:
 - W 147 x D 240 x H 40 mm
 - Suitable for dishwasher
- Dimensions:
 - W 147 x D 285 x H 377 mm
- Weight: 0.5 kg

Code-No.: 850018

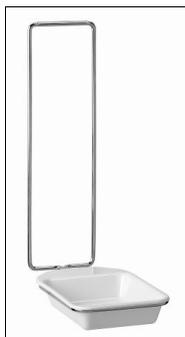

Hook the drip tray holder behind the disinfectant dispenser.

The drip tray is designed for drop collection during hand disinfection.

The collection tray may be removed for cleaning at any time, cleaned manually with a mild cleaning agent or in a dishwasher.

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 5258 971-0
fax: +49 5258 971-120
Service-Hotline: +49 5258 971-197
www.bartscher.com