

18EN60400



300182

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2019-05-21

Original operating manual

Technical Specifications

Name:	Euronorm trolley 18EN60400
Item No.:	300182
Material:	Stainless steel
Number of guide pairs:	18
Guide dimensions (W x D x H) in mm:	415 x 615
Distance between guide pairs in mm:	80
Load-bearing capacity per guide pair, max. in kg.:	10
Number of swivel casters:	4
Locking swivel casters:	2
Diameter of casters in mm:	100
Number of caster dampers:	4
Material of caster dampers:	plastic
Total load-bearing capacity, max. in kg:	80
Dimensions (W x D x H) in mm:	535 x 685 x 1895
Weight in kg:	22,8









We reserve the right to implement technical modifications!

Version / Characteristics

- Area of application: clearing
- Version: guides
- Designed for: euronorm 600 x 400 mm
- May be loaded from both sides
- Square tubing frame, 25 x 25 mm section
- One container lock per front and rear of the trolley
- Product designed for perpetual commercial use

Scope of Delivery / Part Name

- Unpack the Euronorm trolley and remove the packing material pursuant to environmental regulations.
- Check completeness of delivery according to the list below:

Element	Number	Name
	2	Lateral sections with 18 preinstalled guides and 1 container lock per each
	6	Crossbars
	2	Locking swivel casters
	2	Swivel casters without locking
	4	Swivel caster dampers
	1	Allen wrench
	20	Square washers
	12	Bolts

Intended Use

The Euronorm trolley is intended for storing suitable, standardized baking sheets, with dimensions of 600 x 400, in bakeries and commercial kitchens.

Assembly

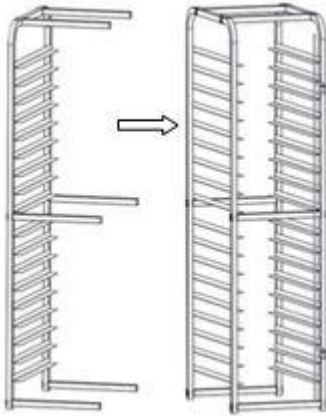


Fig. 1:

1. Place one lateral section on the ground.
2. Take 6 crossbars (top, middle and bottom) and mount them on the lateral section of the Euronorm trolley.
3. Each time, with top and bottom crossbar, use square washer between a crossbar and the lateral section and between lateral section and a bolt.
4. Then, use Allen wrench and tighten the bolt.
5. Each time, with middle crossbars, use only one square washer between the lateral section and a bolt.

6. Use Allen wrench and tighten the bolt.
7. Mount 6 crossbars on the second lateral section, using washers and bolts, as described above. (Fig. 1)

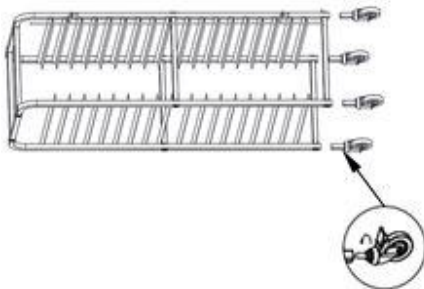


Fig. 2:

8. Place the Euronorm trolley on its side.
9. Mount 4 swivel caster dampers onto square tubing of lateral sections.
10. Finally, screw swivel casters into square tubing of lateral sections. (Fig. 2)

Positioning

1. Set the Euronorm trolley on swivel casters and check its stability.
2. The Euronorm trolley may be levelled through screwing in and out swivel casters.
3. After setting the Euronorm trolley in a designated place, lock 2 swivel casters with lockings to prevent accidental relocation or overturn of the trolley.

Container Safeguard

1. Place required number of suitable baking sheets in guides.
2. Secure baking sheets at front and rear with container lockings, lifting them slightly up and closing before baking sheets (see Fig. to the right).



EN

Cleaning

CAUTION!

For cleaning, do not use any scouring agents containing solvents nor corrosive cleaning agents. They may damage the surface.

1. Clean the Euronorm trolley regularly with warm water and soft, damp cloth. Use mild cleaning agent if required.
2. Wipe dry the Euronorm trolley with a soft cloth.