

18GN110



300181

Technical data

Name	Clearing trolley 18GN110 for GN containers, GN baking trays, and trays
Code-No.:	300181
Material:	Nickel-chrome steel
Realization:	<ul style="list-style-type: none"> ▪ Frame: pipes of square section 25.8 x 25.8 mm; ▪ Capacity: 18 GN containers 1/1 GN, depth 65 mm; ▪ One front and one back container lock; ▪ 4 swivelling rubber castors, Ø 100 mm, each with 1 buffer, 2 swivelling castors with stoppers; ▪ Easy assembling kit
Dimensions:	W 415 x D 610 x H 1890 mm
Maximum carrying capacity:	80 kg in total, 10 kg per slot
Distance between slots:	80 mm
Weight:	20.2 kg

- Unpack the individual elements and remove the packaging material.
- Check completeness of delivery according to the list below.

Delivery range / Part name

Element	Number	Name
	2	Side parts with 18 preinstalled guides and 1 container lock per each one
	6	Cross members
	2	Castors with stoppers
	2	Castors without stoppers
	4	Buffers for castors
	1	Allen wrench
	20	Square washers
	12	Bolts

Assembly

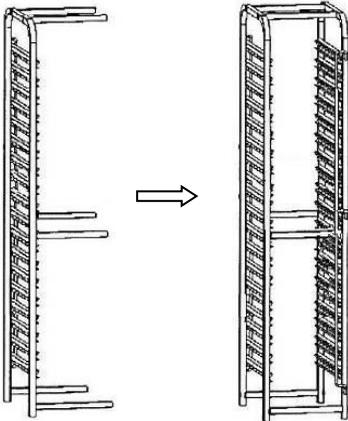


Fig. 1

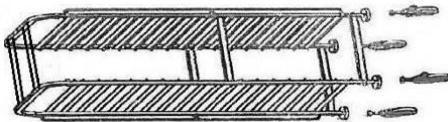


Fig. 2

1. First, install 6 cross members (upper, lower and middle) to one side part of the clearing trolley (**fig. 1**).
Place a square washer between the upper cross member and side part, lower cross member and side part, and between the side part and each bolt, and tighten those elements with use of an Allen wrench.
With the middle cross members, place a square washer only between the side part and bolt, and tighten those elements with use of an Allen wrench.
2. Connect 6 cross members with another side part with use of washers and bolts as above.
3. Place the clearing trolley on its side and attach the buffers for castors to the side parts. Finally, screw the castors into the side parts.

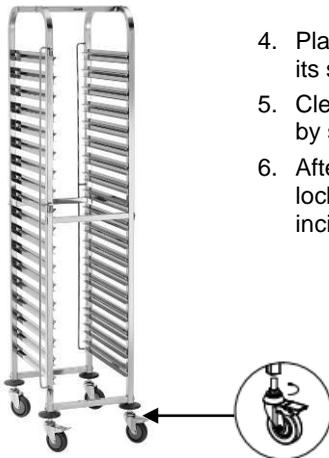


Fig. 3

4. Place the clearing trolley on the castors and check its stability.
5. Clearing trolley may be levelled with use of castors by screwing or unscrewing them (**fig. 3**).
6. After placing the clearing trolley in required place lock 2 castors with stoppers to prevent the incidental relocation or falling down.

Protection of containers

- Put the containers in the guides as required and protect them with use of front and back locks, lifting them a bit and placing before the containers (fig. 4).



Fig. 4

Cleaning instructions

- The clearing trolley should be periodically cleaned with use of moistened and soft cloth.
- Never use any cleaning agents which may scratch the trolley elements surfaces.
- Dry the clearing trolley with soft cloth.

Bartscher GmbH
Franz-Kleine-Str. 28
33154 Salzkotten
Germany

phone: +49 (0) 5258 971-0
fax: +49 (0) 5258 971-120