

**1830-W**



**601179**

## Technical data


<b>Name</b>	<b>Multi-table 1830-W</b>
Code-No.:	<b>601179</b>
Material:	Plastic HDPE; Material of feet: Steel, painted, powder-coated, rubber
Model:	<ul style="list-style-type: none"> <li>▪ Colour: White</li> <li>▪ Carrying handle</li> <li>▪ Folding</li> <li>▪ Safety locking system</li> <li>▪ UV protected</li> </ul>
Carrying capacity:	max. 150 kg
Dimensions:	W 1830 x D 760 x H 740 mm
Weight:	14.7 kg

We reserve the right to implement the technical modifications!

## Features:

- The stable fold-down table with a durable plastic surface can be used for many different purposes quickly thanks to its lightweight and compact design.
- **Safety locking system** enables stable and safe positioning of the multi-table.
- The ideal accessory for the multi-table is multi-bench 1820-W (Code-No. 601180).


## List of components

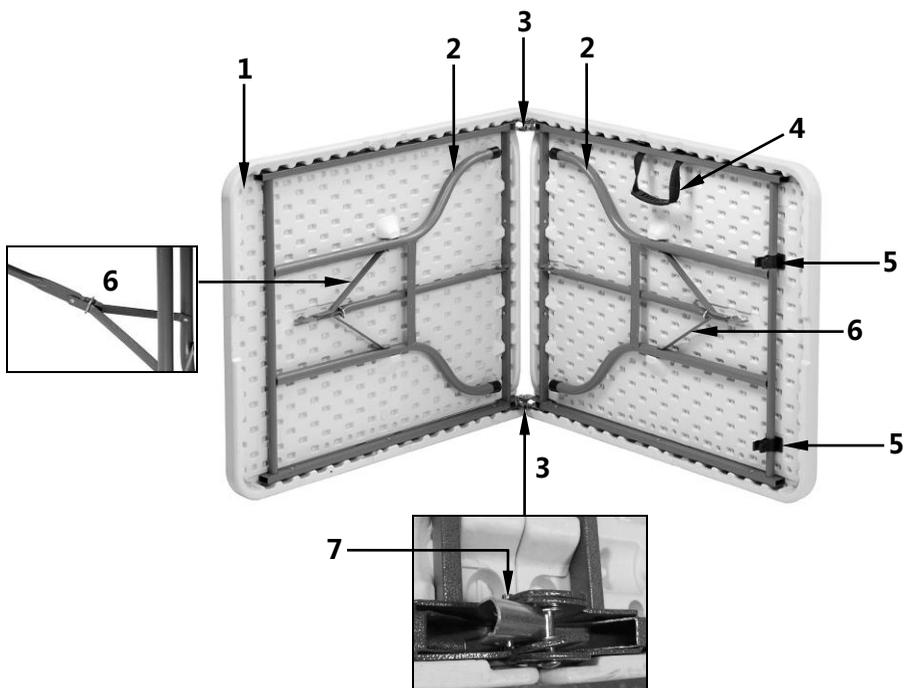

- 1 Table surface
- 2 Table feet (2x)
- 3 Protective devices (2x)
- 4 Handle
- 5 Rack frame clamps (2x)
- 6 Hinge arms with securing clamps (2x)
- 7 Lock pushbutton

## Installation instructions

- Unpack the multi-table, remove and dispose of all package material according to the environment protection regulations.
- Place the multi-table flat on the floor.
- Lift up the upper half of the table surface and unfold the whole multi-table.
- Unfold the table feet (2) by pulling them from underneath the surface.

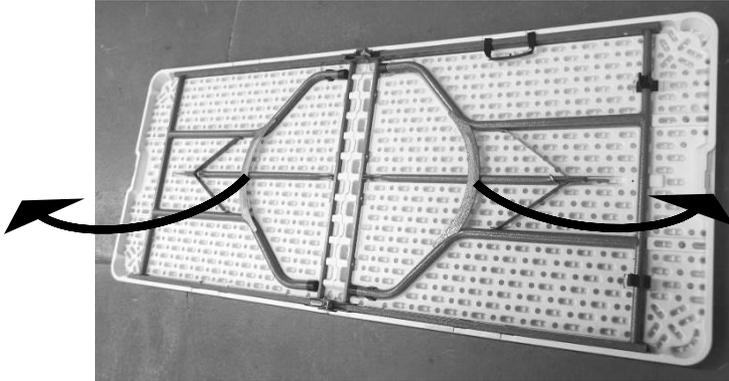

- Place the multi-table in its standing position on the feet (2)
- To lock the feet (2) slide the securing clamps onto the hinge arms (6). Make sure that the table has been assembled correctly and safely.



## Disassembly of multi-table

- Place the multi-table surface (1) flat on the floor.
- Remove the securing clamps from the hinge arms (6) and fold the table feet.
- Place the multi-table edgeways.
- Press on both protecting devices (3) to unlock the safety locking system and fold the multi-table slightly.

- Pull out the handle (4) and fold the multi-table in such a way that both halves of the table surface are interconnected by means of the two clamps on the rack frame (5).



## Cleaning

- Clean the surface and rack of the table with a soft, damp cloth. Use a mild cleaning agent when required.
- Never use **any** sharp or scouring cleaning agents which may scratch the surface.
- Dry the multi-table with a soft cloth.



### **CAUTION!**

**Failure to follow the instructions below may cause injury or damage.**

- **Do not stand on the multi-table.**
- **Do not place any hot objects directly on the surface.**
- **Store the multi-table in a vertical or horizontal position, on an even floor, without stresses or pressure caused by other objects.**

Bartscher GmbH  
Franz-Kleine-Str. 28  
33154 Salzkotten  
Germany

phone: +49 5258 971-0  
fax: +49 5258 971-120  
**Service-Hotline:** +49 5258 971-197  
[www.bartscher.com](http://www.bartscher.com)