

AGN1500-1/1



300107

Bartscher GmbH
Franz-Kleine-Str. 28
D-33154 Salzkotten
Germany

Phone: +49 5258 971-0
Fax: +49 5258 971-120
Service hotline: +49 5258 971-197
www.bartscher.com

Version: 1.0

Date of preparation: 2022-05-18

Original instruction manual

Technical Data

Name:	Gastronorm trolley AGN1500-1/1
Art. No.:	300107
Material:	stainless steel
Designed for:	1/1GN, 1/2GN, 1/3GN
Number of guide rail pairs:	15
Distance between guide rail pairs, in mm:	80
Max. GN container depth, in mm:	65
Load-bearing capacity per guide pair, max. in kg.:	10
Total load-bearing capacity, max. in kg:	150
Number of swivel casters:	4
Locking swivel casters:	2
Diameter of casters in mm:	100
Number of caster dampers:	4
Material of caster dampers:	plastic
Dimensions (W x D x H), in mm:	440 x 615 x 1710
Weight, in kg:	20,6

EN

We reserve the right to implement technical modifications.

Version / Characteristics

- Delivery form: self-assembly set, simple assembly
- Area of application: clearing
- Version: GN guides
- May be loaded from both sides
- The set does not include:
 - GN containers
 - sheets
 - grates
- Features:
 - one container lock per front and rear of the trolley

- special design makes it possible to slide 2 or more AGN1500-1/1 Gastronorm trolleys one into another, which provides for saving of space during storage
- square tubing frame, 25.4 x 25.4 mm section

Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.


The following is an intended use:

- cleaning and transportation of dishes in GN containers,
- storage of dishes in GN containers.

Scope of Delivery / Part Name

- Unpack the Gastronorm trolley and remove the packing material pursuant to environmental regulations.
- Check completeness of delivery according to the list below:

EN

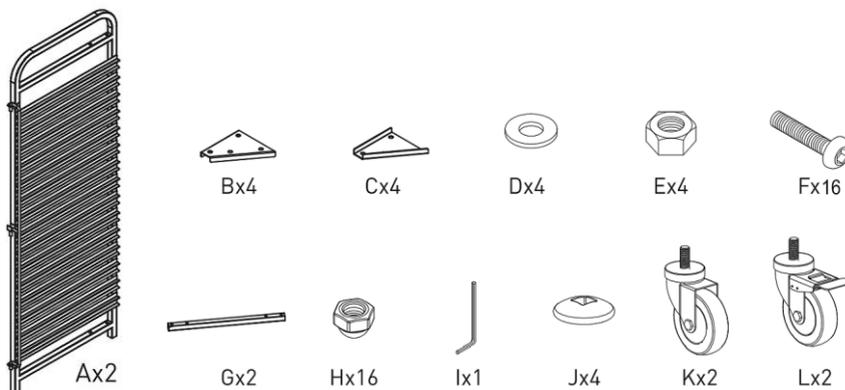

Component	Name	Component	Name
A	Lateral sections with 15 pre-installed guides and 1 container lock	G	Connecting strut
B	Top bracket	H	Dome nut
C	Bottom bracket	I	Allen wrench
D	Washer	J	Swivel caster dampers
E	Nut	K	Non-locking swivel caster
F	Screw	L	Locking swivel caster

Assembly

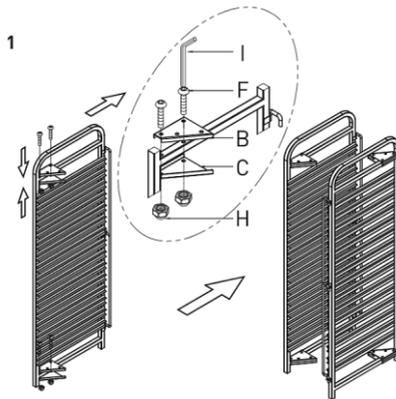


Fig. 1

1. First, fix 1 bracket each, (B) and (C), at the top and bottom of both lateral sections, using 2 screws each (F) and 2 dome nuts each (H). Use Allen wrench (I) and tighten screws.

NOTE!

Fix brackets to square tubing of lateral sections, without container locking.

2

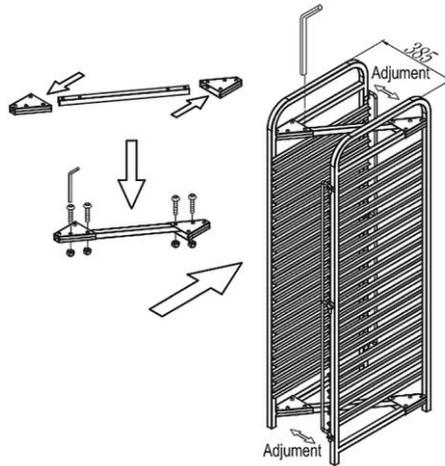


Fig. 2

EN

2. Slid the connecting strut (**G**) in between brackets, (**B**) and (**C**), in top part of both lateral sections (**A**). Fix the connecting strut (**G**) to the assembled brackets using 4 screws each (**F**) and 4 dome nuts (**H**), and Allen wrench (**I**).

Proceed the same way to fix the connecting strut (**G**) at the bottom of lateral sections (**A**).

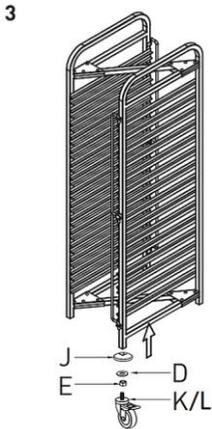


Fig. 3

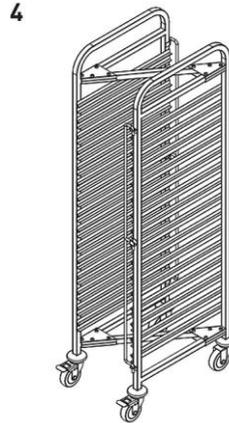


Fig. 4

3. Fix 4 swivel casters, (**K**) and (**L**), on lateral sections. Place 1 nut (**E**), 1 washer (**D**), and 1 damper (**J**) on swivel casters and screw them into the square tubing of lateral sections (Fig. 3).

Make sure that 2 identical swivel casters are assembled at the front and at the rear (with locking or without locking) (Fig. 4).

EN

Installation

1. Set the Gastronorm trolley on swivel casters and check its stability.
2. The Gastronorm trolley may be levelled through screwing in and out swivel casters.
3. After setting the Gastronorm trolley in a designated place, lock 2 swivel casters with lockings to prevent accidental relocation or overturn of the Gastronorm trolley.

Container Safeguard



Fig. 5

1. Place required number of suitable GN containers in guides.
2. Secure GN containers at front and rear with container lockings, lifting them slightly up and closing before GN containers (see Fig. to the left).

Cleaning

ATTENTION!

Scrubbing agents, washing agents with solvents or caustic substances may damage the surface.

For cleaning, use only agents suitable for stainless steel.

1. Clean the Gastronorm trolley regularly with warm water and a soft, damp cloth. Use a mild cleaning agent if required.
2. Dry the Gastronorm trolley with a soft cloth.