

**KV9L**



**190089**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 1.0

Date of preparation: 2024-04-12

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of Signal Words .....	2
1.2	Safety instructions.....	3
1.3	Intended Use .....	6
1.4	Unintended Use .....	6
2	General information .....	7
2.1	Liability and Warranty .....	7
2.2	Copyright Protection .....	7
2.3	Declaration of Conformity .....	7
3	Transport, Packaging and Storage .....	8
3.1	Delivery Check.....	8
3.2	Packaging .....	8
3.3	Storage .....	8
4	Technical Data.....	9
4.1	Technical Specifications .....	9
4.2	Functions of the Appliance.....	10
4.3	List of Components of the Appliance .....	11
5	Installation and operation .....	12
5.1	Installation.....	12
5.2	Operation .....	14
6	Cleaning and Maintenance .....	17
6.1	Safety Instructions for Cleaning .....	17
6.2	Cleaning.....	18
6.3	Maintenance .....	18
7	Possible Malfunctions.....	19
8	Disposal.....	20



**Read this instruction manual before using and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

## 1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



### **WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



### **CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

### **IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

### **NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

### **Fire hazard / flammable materials hazard / explosion hazard!**

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

## Safety

---

### Operating Personnel

- The device can be used by children of 8 years old and older, as well as by people with reduced physical, sensory or mental abilities and those with limited experience/knowledge as long as they are under supervision or have been instructed on safe use of the device and possible risks. Children should not play with the device.
- Cleaning and user maintenance may not be performed by children.

### Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.
- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.

## 1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Chilling of milk for preparing coffee in a coffee machine.

The appliance is intended for operation in maximum ambient temperature of 32 °C and relative humidity of 55%.

This appliance is intended for use in households and similar places, e.g.:

- in employee canteens in shops, offices, and similar areas;
- on farms;
- by customers in hotels, motels, and other typical accommodation establishments;
- in lodging-houses.

EN

## 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives.
- Storing explosive materials, like sprays filled with flammable propellants.
- Storing pharmaceutical products or preserved blood.
- Storing live pets.



## 2 General information

### 2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

The warranty period for this appliance is 24 months, counted from the purchase date.

EN

### 2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### 2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

### 3 Transport, Packaging and Storage

#### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint.

Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

#### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

#### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical Data

### 4.1 Technical Specifications

<b>Name:</b>	<b>Milk refrigerator KV9L</b>
Art. No.:	<b>190089</b>
Material:	sheet steel, powder-coated
Inner material:	ABS plastic
Internal dimensions (W x D x H), in mm:	160 x 190 x 280
Volume, in l:	9
Temperature range, min.-max., in °C:	0 - 8
Ambient temperature, max., in °C:	32
Coolant / amount in g:	R600a / 10,8
Climate class:	N, T
Number of doors:	1
Power load:	0,068 kW   220-240 V   50/60 Hz
Dimensions (W x D x H), in mm:	225 x 450 x 455
Weight, in kg:	13,8

We reserve the right to implement technical modifications.

#### Version / characteristics

- Cooling: circulating air
- Temperature control:
  - electronic, touch
  - in 1°C increments
- Opening for milk hose:
  - 2 openings, on the left and right side of the appliance
  - Ø 9.8 mm | height 12.3 mm
- Automatic defrosting function
- Thermostat
- Insulation: cyclopentane
- Control: touch
- Internal lighting

- Digital display
- Lockable
- Door type: leaf door
- Right-hand side door, with no possibility for door hinge to be changed
- Features:
  - Designed for, e.g., 3 Tetra Pak® cartons, 1 litre each
  - Direct milk supply through openings on side of the appliance
  - LED lighting
- The set includes
  - Four 9.8 mm hose feedthrough covers
  - Four 12.3 mm hose feedthrough covers
  - 1 hose feedthrough cover
  - 1 key
- **Important hint:** Hose feedthroughs are closed upon delivery

## 4.2 Functions of the Appliance

Cappuccino, café au lait or latte macchiato? The practical milk refrigerator with its side hose openings provides direct access to chilled milk. The milk is stored hygienically cool and, if required, may be dispensed directly for preparing coffee using the milk hose that a coffee machine is equipped with.

### 4.3 List of Components of the Appliance

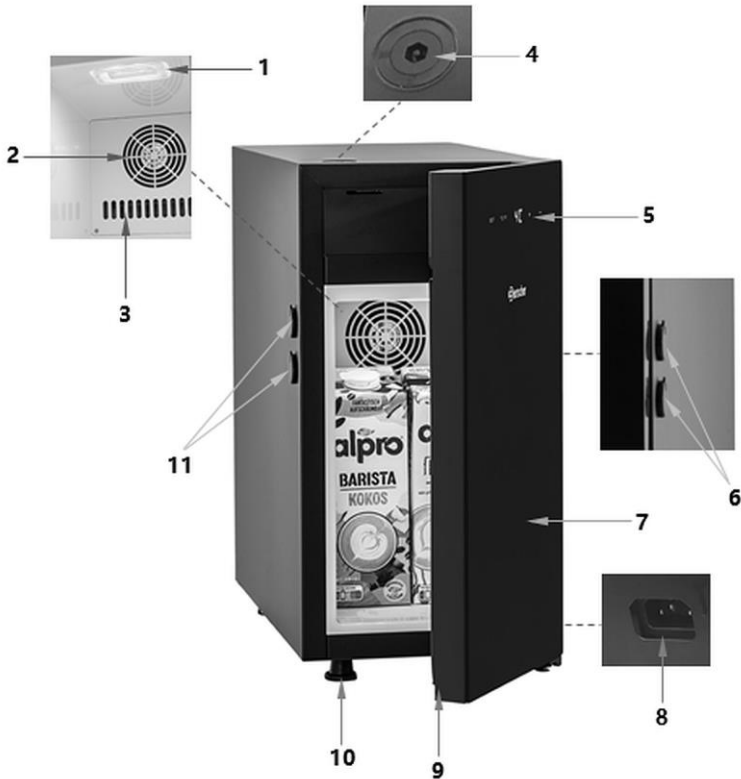


Fig. 1

- |                                     |                                     |
|-------------------------------------|-------------------------------------|
| 1. LED lighting                     | 2. Fan                              |
| 3. Ventilation openings             | 4. Lock                             |
| 5. Control panel                    | 6. Right milk hose feedthrough (2x) |
| 7. Appliance door                   | 8. IEC connector for the power cord |
| 9. Door handle recess               | 10. Foot (4x)                       |
| 11. Left milk hose feedthrough (2x) |                                     |

EN

## 5 Installation and operation

### 5.1 Installation



#### CAUTION!

**Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.**

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

#### NOTE!

**The manufacturer disclaims all liability and provides no warranty for damages, which may be attributed to non-observance of regulations or incorrect installation.**

EN

### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

#### Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.
- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
  - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;

## Installation and operation

---

- sufficiently large, and thus enabling usage of the appliance with no problems;
  - easily accessible;
  - well ventilated.
- Maintain sufficient clearance from table edges. The appliance might turn over and fall down.
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may pose negative effect in terms of power consumption and lead to restrictions in operation of the appliance.
- Place the appliance so that sufficient air circulation is ensured. Leave 10 cm clearance from walls and other objects.
- In order to avoid compressor's damage, do not tilt the appliance more than 45° when positioning or transporting it.
- If the appliance is to be relocated, follow the instructions below:
  - switch the appliance off;
  - remove the plug from the socket;
  - take out contents of the appliance;
  - use a tape to stick up all loose elements inside the appliance and the door;
  - the appliance may only be transported in upright position.
- Compensate for smaller unevennesses of flooring in the place of installation through screwing in and out of the height-adjustable feet.

### **IMPORTANT!**

**The appliance is not suitable for built-in installation.**

### Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
  
- Prior to first use, the appliance should be installed and left standing upright for at least 2 hours, before it is connected to power supply.
- After a power failure or when the plug is removed from the socket, do not reconnect the appliance to power supply for at least 5 minutes.

## 5.2 Operation

### Before use

1. Before first use, clean the appliance and its accessories observing the instructions in section 6 '**Cleaning**'.
2. Finally, dry the appliance and accessories thoroughly.
3. Close the device door.

### Digital temperature controller

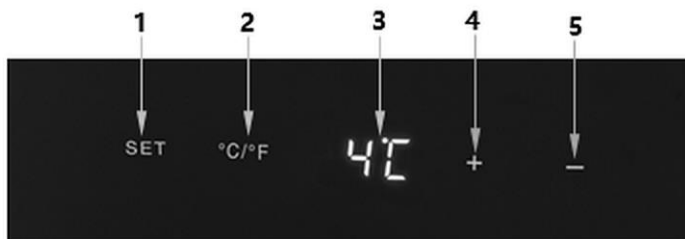


Fig. 2

1. SET key
2. Temperature unit switch
3. Digital temperature display
4. Temperature increase key
5. Temperature decrease key



### Switching-On

1. First connect the power cord to the IEC connector.
2. Then, insert the plug into a suitable single mains socket.

The control panel is locked.

3. To unlock the control panel, simultaneously press the keys '+' and '-' for six seconds.

You will hear an acoustic signal, indicating that the lock has been released.

4. If needed, press the key to change the temperature unit.

By default, the set temperature unit is °C.

5. Press the SET control key.

The appliance switches to the settings mode. The factory set temperature is 8°C.

6. Set the desired temperature with temperature control keys '+' and '-'.

The appliance will be chilled to the set temperature. The current temperature inside the appliance is shown on the temperature display.

### Filling the appliance / milk refrigeration

1. When the appliance reaches the set temperature, insert suitable milk cartons.

#### **ATTENTION!**

**Do not obstruct ventilation openings or fan to ensure air circulation and, consequently, a good chilling effect.**

The cooling compartment houses 3 standard size milk cartons.

You may also pour milk to a milk container. To this end, we recommend Bartscher milk container:

**KV9L, art. No. 190094**

2. Unscrew the cover(s) of the required milk hose feedthroughs on the left or right, and put them away.
3. Insert one milk hose ( $\varnothing$  9.8 mm or 12.3 mm) through the feedthrough.
4. Put one end of the milk hose inside an open milk carton (Fig. 4) or alternatively, in a milk container (Fig. 5).



Fig. 3



Fig. 4



Fig. 5

- EN
5. Attach the other end of the milk hose to the coffee machine milk supply.
  6. Prepare the beverage with milk, as required.
  7. At the end of a work day, take the milk hose out from the milk carton, or from the milk container.
  8. Clean the milk hose, as described in the coffee machine operation manual.
9. If the appliance shall no longer be used, disconnect the plug from the socket, and then disconnect the supply cord from the IEC connector.

### LED lighting

The appliance is equipped with LED lighting. The LED lamp is located at the ceiling of the inner chamber.



Fig. 6

The LED lighting turns on automatically with the contactor switch on the appliance door, after the door is closed.

The LED lighting does not switch on if the door is open.

## 6 Cleaning and Maintenance

### 6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.

### 6.2 Cleaning

1. At the end of a working day clean the appliance thoroughly.
2. Remove all objects from the appliance.
3. Clean the internal compartment with warm water and soft cloth or sponge. Use mild cleaning agent if required.
4. Wipe the washed surfaces with a cloth moistened in clean water.
5. Wipe the appliance housing and door with frame with a soft, moistened cloth.
6. Finally, dry thoroughly all washed surfaces.
7. Leave the door open for the appliance to dry completely.
8. The condenser should be cleaned at least once a month with a vacuum cleaner or a brush, to remove the built-up dust.
9. To clean the condenser, remove sheet metal cover at the rear wall of the appliance.

### 6.3 Maintenance

Let the appliance to be inspected by professional technician at least once a year or as required.

EN

#### LED lamp replacement

1. Disconnect the appliance from mains power supply.
2. Unscrew the lamp casing with a screwdriver.
3. Remove the damaged LED lamp.
4. Replace it with a new LED lamp with the same parameters.
5. Screw the lamp housing back on.

## 7 Possible Malfunctions


The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. When malfunction cannot be removed, contact the technical service.

In such a case, provide article number, model name and serial number. These data may be found in the rating plate.

<b>Error</b>	<b>Possible Cause</b>	<b>Solution</b>
Appliance does not start	No power	Check the plug, sockets and fuses
Appliance does not cool sufficiently	Damaged thermostat	Contact the service company
	Ventilation openings blocked or obstructed	Check ventilation openings
	Contaminated condenser	Clean the condenser
Appliance operates loudly	Appliance is not levelled	Set the appliance on an even surface
	Constant vibrations	Check if the appliance does not come in contact with any object, both inside and outside

## 8 Disposal

### Electrical Appliance

	<p>Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.</p>
-----------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Electrical appliances should be returned to designated collection points.

### Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.