

## **KGN1-112 - KGN2-212**



**700843 - 700853**

Bartscher GmbH  
Franz-Kleine-Str. 28  
D-33154 Salzkotten  
Germany

Phone: +49 5258 971-0

Fax: +49 5258 971-120

**Technical Support Hotline:** +49 5258 971-197

[www.bartscher.com](http://www.bartscher.com)



Version: 1.0

Date of preparation: 2024-04-22

---

## Original instruction manual

1	Safety .....	2
1.1	Explanation of Signal Words .....	2
1.2	Safety instructions.....	3
1.3	Intended Use .....	6
1.4	Unintended Use .....	6
2	General information .....	7
2.1	Liability and Warranty .....	7
2.2	Copyright Protection .....	7
2.3	Declaration of Conformity .....	7
3	Transport, Packaging and Storage .....	8
3.1	Delivery Check.....	8
3.2	Packaging .....	8
3.3	Storage .....	8
4	Technical Data.....	9
4.1	Technical Specifications .....	9
4.2	List of Components of the Appliance .....	12
4.3	Functions of the Appliance.....	14
5	Installation and operation .....	14
5.1	Installation.....	14
5.2	Operation .....	16
6	Cleaning and Maintenance .....	22
6.1	Safety Instructions for Cleaning .....	22
6.2	Cleaning.....	23
6.3	Maintenance .....	23
7	Possible Malfunctions.....	24
8	Disposal.....	26



**Read this instruction manual before using and keep it available at all times!**

This instruction manual contains information about installation, operation and maintenance of the appliance and constitutes an important source of information and reference guide. The knowledge of all operational and safety instructions included in this manual is a prerequisite for safe and proper handling of the appliance. Additionally, accident prevention, occupational health and safety, and legal regulations in force in the area the appliance is used apply.

Before you start using the appliance, especially before turning it on, read this instruction manual in order to avoid personal injuries and property damages. Improper use may cause damage.

This instruction manual forms an integral part of the product and must be stored in an immediate vicinity of the appliance and be available at all times. The instruction manual should be transferred together with the appliance.

## 1 Safety

This appliance has been manufactured in accordance with technical standards currently in force. However, the appliance may be a source of hazards if used improperly or contrary to its intended purpose. All persons using the appliance must consider information included in this instruction manual and observe safety instructions.

### 1.1 Explanation of Signal Words

Important safety instructions and warning information are indicated in this instruction manual with appropriate signal words. You must strictly follow the instructions, to prevent accidents, personal injuries and property damages.



**DANGER!**

The signal word **DANGER** warns against hazards that lead to severe injuries or death if the hazards are not avoided.



### **WARNING!**

The signal word **WARNING** warns against hazards that may lead to moderate or severe injuries or death if the hazards are not avoided.



### **CAUTION!**

The signal word **CAUTION** warns against hazards that may lead to light or moderate injuries if the hazards are not avoided.

### **IMPORTANT!**

The signal word **IMPORTANT** indicates possible property damages, which may occur if safety instructions are not observed.

### **NOTE!**

The symbol **NOTE** indicates subsequent information and guidelines for the user on usage of the appliance.

## 1.2 Safety instructions

### Electrical Current

- Too high a mains voltage or incorrect installation may cause electric shock.
- The appliance may be connected only if data on the rating plate correspond with the mains voltage.
- To avoid short-circuit, the appliance should be kept dry.
- If there are malfunctions during operation, disconnect the appliance from the power supply.
- Do not touch the appliance's plug with wet hands.
- Never take hold of the appliance if it has fallen into water. Immediately disconnect the appliance from the power supply.
- Any repairs or housing opening may be carried out by professionals and relevant workshops only.
- Do not transport the appliance, holding it by the power cord.
- Do not allow the power cord to come into contact with heat sources or sharp edges.
- Do not bend, pinch nor knot the power cord.

- Always completely unwind the power cord.
- Never place the appliance or other objects on the power cord.
- Always take hold of the plug to disconnect the appliance from the power supply.
- Check the power cord regularly for damage. Do not use the appliance if the power cord is damaged. If this cable is damaged, it must be replaced by customer service or a qualified electrician in order to avoid dangers.

### **Fire hazard / flammable materials hazard / explosion hazard!**

- Do not use any electric devices in the appliance.
- Do not store nor use petrol or other flammable liquids and gases in the vicinity of this or any other appliance. Those gases may cause fire or explosion hazard.
- Do not put into the appliance any explosive materials, like sprays filled with flammable propellants. Contents of containers filled with flammable gases and liquids may leak in low temperatures, and the contents may catch fire from sparks generated by an electric appliance. Explosion hazard!
- In the case of coolant leakage, pull the plug from the socket. Remove all sources of ignition in the vicinity, ventilate room and contact technical service. Avoid coolant getting in contact with eyes, as it may cause serious eye damage.
- Never use any flammable liquids for cleaning the appliance or its parts. Gases released may cause fire or explosion hazard.
- In the case of fire, disconnect the appliance from the power supply before attempting adequate fire-extinguishing actions.
- Never attempt to extinguish fire with water if the appliance is connected to the power supply. Following extinction of fire, ensure sufficient fresh air inflow.
- Defrosting process may not be sped up with mechanical means or heat energy sources (candles or heaters) nor with any other means. Vapour produced may cause short-circuit and too high temperatures may damage the appliance.
- All ventilation slots should not be obstructed during operation.
- Never attempt to damage cooling installation of the appliance.

## Safety

---

### Operating Personnel

- The appliance may only be operated by qualified personnel and trained specialist personnel.
- This appliance may not be operated by persons (including children) with limited physical, sensory or mental capabilities, nor by persons with limited experience and/or limited knowledge.
- Children should be supervised to ensure that they are not playing with or switching on the appliance.

### Improper Use

- Unintended or prohibited use may cause damage to the appliance.
- The appliance may only be used when its technical condition is flawless and allows for safe operation.
- The appliance may only be used when all connections are executed according to rules of law in force.
- The appliance may only be used when it is clean.
- Use only original spare parts. Never attempt to repair the appliance on your own.
- Do not introduce any changes in the appliance nor modify it.
- Do not drill hole in the appliance nor install any objects on it.
- Do not place any heavy objects on the appliance.
- Do not use any electric appliances inside the cooling compartment, unless they are of the type approved by the manufacturer.

## 1.3 Intended Use

As described below, every use of the appliance for a purpose differing and/or diverging from its intended standard use, is prohibited and considered to be an unintended use.

The following is an intended use:

- Cooling and preparation of suitable beverages and food products.

**The appliance is intended for operation in maximum ambient temperature of 40 °C and relative humidity of 40%.**

**The appliance is intended for commercial use only. It is designed for use in restaurants, bars, grocery shops etc.**

## 1.4 Unintended Use

An unintended use may lead to personal injuries or property damages caused by hazardous voltage, fire or high temperature. The appliance may only be used to perform tasks described in this instruction manual.

The following is an unintended use:

- To be used in such facilities as pharmacies, hospitals, analytic laboratories, etc., in all applications requiring double temperature control, power failure alarms and registration of temperature changes measured over time.
- Storing flammable or explosive objects and liquids, such as ether, petroleum or adhesives;
- Storing explosive materials, like sprays filled with flammable propellants;
- Storing pharmaceutical products or preserved blood;
- Storing live pets.



## 2 General information

### 2.1 Liability and Warranty

All information and instructions in this instruction manual account for legal regulations in force, current level of technical engineering knowledge as well as our expertise and experience, developed over the years. If special models or additional options are ordered, or state-of-the-art technical solutions were implemented, the actual scope of delivery of the appliance may, in some circumstances, differ from descriptions and numerous drawings in this instruction manual.

The manufacturer is not liable for any damages nor faults stemming from:

- failure to observe instructions,
- unintended use,
- technical alterations introduced by the user,
- usage of unapproved spare parts.

We reserve the right to introduce technical modifications to the product, intended for improvement of the appliance and its performance.

The warranty period for this appliance is 24 months, counted from the purchase date.

EN

### 2.2 Copyright Protection

This instruction manual, and texts, drawings and images included in it, as well as its other components are copyright protected. It is prohibited to reproduce this instruction manual (including its excerpts), in any form and by any means, and to use and/or transfer its content to third parties without manufacturer's written permission. Violation of the above results in obligation to pay compensation. We reserve the right to claim further damages.

### 2.3 Declaration of Conformity

The appliance meets the currently applicable standards and guidelines of the European Union. We confirm the above in the EC Declaration of Conformity. We may provide relevant Declaration of Conformity upon request.

### 3 Transport, Packaging and Storage

#### 3.1 Delivery Check

Immediately upon reception, check the delivery for completeness and possible shipping damage. In the case of visible transport damage refuse to accept the appliance or accept it conditionally. Mark and note the scope of damage in shipping documents/consignment list of the shipping company and lodge a complaint.

Concealed damage must be reported immediately upon its discovery, as compensation claims may only be filed within applicable time limits.

If you find that parts or accessories missing, please contact our Customer Service Department.

#### 3.2 Packaging

Do not dispose of the appliance cardboard box. It may be used to store the appliance when relocating or when shipping the appliance to our service point in the case of any damages.

The packaging and its elements are made of recyclable materials. Particularly, these are: plastic films and bags, cardboard box.

When disposing of the packaging, observe applicable domestic regulations. Recyclable packaging materials should be recycled.

#### 3.3 Storage

Leave the packaging closed until installation of the appliance; observe external indications concerning method of placing and storage. Store the packaging in the following conditions only:

- in closed rooms;
- in dry and dust-free surrounding;
- away from aggressive agents;
- in a location protected against sunlight;
- in a location protected against mechanical shocks.

In the case of extended storage (over three months), make sure you check the condition of the packaging and the parts regularly. If needed, replace the packaging with a new one.

## 4 Technical Data

### 4.1 Technical Specifications

#### Version / Features 700843 / 700853

- Cooling:
  - 700843: air circulation
  - 700853: circulating air with 2 fans
- Temperature control:
  - electronic
  - in 0.1°C increments
- Thermostat
- Insulation: cyclopentane, 70 mm
- Automatic defrost function
- Digital display
- Control: electronic
- ON/OFF switch
- Indicator lights:
  - defrosting
  - ON/OFF
  - compressor
  - fan
  - temperature
- Door type: leaf door
- Door hinge:
  - 700843: right-hand side, changeable
  - 700853: left-hand side / right-hand side, not changeable
- Type of shelves: grill
- Height-adjustable shelves
- LED Lighting
- 4 swivel castors, 2 with brakes
- Appliance locked with a key

<b>Name:</b>	<b>Refrigerator KGN1-112</b>
Art. No.:	<b>700843</b>
Material:	stainless steel
Inner material:	stainless steel
Volume, in l:	650
Usable volume, in l:	480
Temperature range, min.-max., in °C:	0 - 8
Ambient temperature, max., in °C:	40
Coolant, amount in kg:	R290 / 0,072
Climate class:	5
Energy efficiency class:	B (EU Nr. 2015/1094-IV)
Energy consumption, in kWh/year:	482
Number of doors:	1
Number of shelves:	3
Gastronorm:	2/1 GN
Shelf dimensions (W x D), in mm:	530 x 650
Connected load:	0,2 kW   230 V   50 Hz
Dimensions (W x D x H), in mm:	740 x 835 x 2050
Weight, in kg:	102,6

We reserve the right to implement technical modifications.

<b>Name:</b>	<b>Refrigerator KGN2-212</b>
Art. No.:	<b>700853</b>
Material:	stainless steel
Inner material:	stainless steel
Volume, in l:	1350
Usable volume, in l:	1045
Temperature range, min.-max., in °C:	0 - 8
Ambient temperature, max., in °C:	40
Coolant, amount in kg:	R290 / 0,075
Climate class:	5
Energy efficiency class:	B (EU Nr. 2015/1094-IV)
Energy consumption, in kWh/year:	803
Number of doors:	2
Number of shelves:	6
Gastronorm:	2/1 GN
Shelf dimensions (W x D), in mm:	530 x 650
Connected load:	0,43 kW   230 V   50 Hz
Dimensions (W x D x H), in mm:	1485 x 835 x 2050
Weight, in kg:	159,4

We reserve the right to implement technical modifications.

More information on the appliance is available in our website [www.bartscher.com](http://www.bartscher.com) or, pursuant to the Regulation (EU) 2015/1094-IV, in our product data base at <https://energy-label.ec.europa.eu/>. Enter article number for a given model.

## 4.2 List of Components of the Appliance

700843


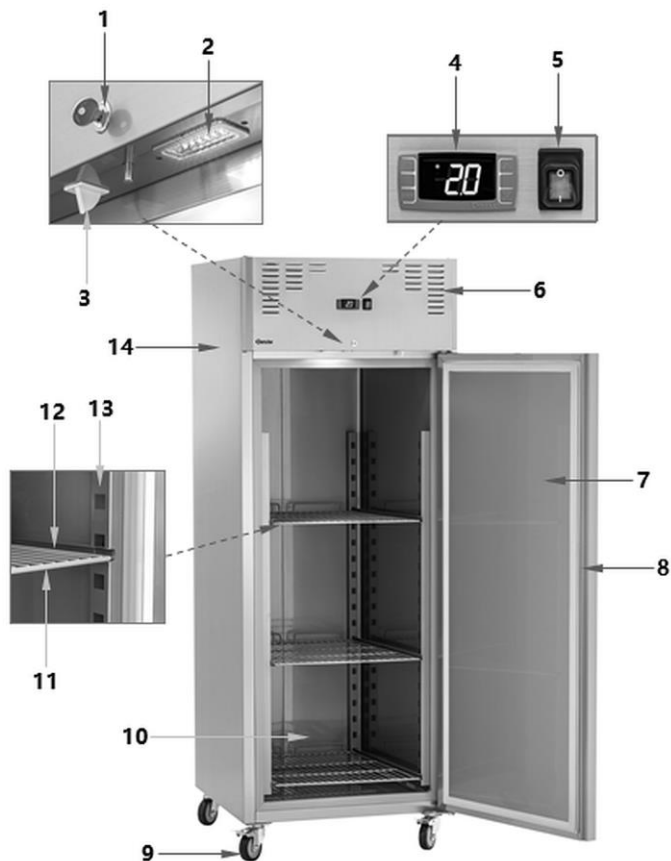


Fig. 1

- |  |                                   |
|--|-----------------------------------|
| 1. Lock + key (2x)   | 2. LED lighting                   |
| 3. Door contact switch   | 4. Digital temperature controller |
| 5. ON/OFF switch with integrated power indicator light (green) | 6. Ventilation openings           |
| 7. Appliance door  | 8. Appliance door seal            |
| 9. Swivel castors (4x, 2 with brakes)                          | 10. Cooling compartment           |
| 11. Shelf (3x)   | 12. Guide rails (3 pairs)         |
| 13. Guide rails (2 pairs)                                      | 14. Housing                       |

700853

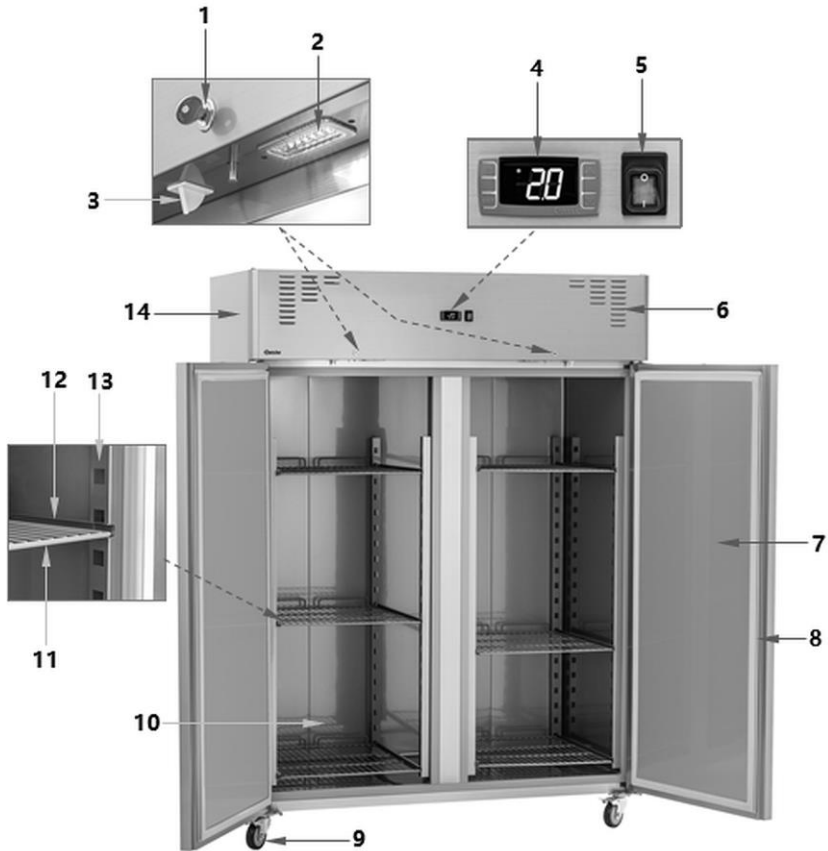

EN

Fig. 2

- |  |                                   |
|--|-----------------------------------|
| 1. Lock (2x) + 2 keys for each                                 | 2. LED lighting (2x)              |
| 3. Door contact switch (2x)                                    | 4. Digital temperature controller |
| 5. ON/OFF switch with integrated power indicator light (green) | 6. Ventilation openings           |
| 7. Appliance door (2x)   | 8. Appliance door seal (2x)       |
| 9. Swivel castors (4x, 2 with brakes)                          | 10. Cooling compartment (2x)      |
| 11. Shelf (6x)   | 12. Guide rails (6 pairs)         |
| 13. Guide rails (4 pairs)                                      | 14. Housing                       |

### 4.3 Functions of the Appliance

Refrigerator made of stainless steel, equipped with height adjustable shelves in GN 2/1 format, offers exceptionally spacious area for transparent storage of cooled products. Efficient circulatory cooling ensures even and stable temperature inside despite the size of the appliance.

## 5 Installation and operation

### 5.1 Installation



#### CAUTION!

**Incorrect installation, positioning, operation, maintenance or misuse of the appliance may lead to personal injury or property damage.**

Positioning and installation, as well as repairs may be performed by authorised technical service only and in compliance with the applicable national law.

#### NOTE!

**The manufacturer disclaims all liability and provides no warranty for damages, which may be attributed to non-observance of regulations or incorrect installation.**

### Unpacking / Positioning

- Unpack the appliance, remove all external and internal packaging elements and shipment safeguards.



#### CAUTION!

#### Choking hazard!

Prevent children from accessing package materials, for instance: plastic bags and EPS.

- If the appliance is covered with a protective film, remove it. Remove the film slowly, so no glue residues are left. Remove any glue residues with the use of a suitable solvent.



## Installation and operation

---

- Be careful not to damage the rating plate and warning labels fixed on the appliance.
- **Never** place the appliance in humid or wet environment.
- Place the appliance in a way making the connections easily accessible, so that they may be quickly disconnected if such a need arises.
- The appliance should be placed on surfaces that are:
  - even, with sufficient bearing capacity, resistant to water, dry and resistant to high temperatures;
  - sufficiently large, and thus enabling usage of the appliance with no problems;
  - easily accessible;
  - well ventilated.
- Do not place the appliance in direct sunlight or in the vicinity of heat sources (cooker, radiator, heating devices, etc.). Heat sources may negatively affect power consumption, and restrict functions of the appliance, too.
- Place the appliance so that sufficient air circulation is ensured.
- In order to avoid damage to the compressor, do not tilt the appliance more than 45° when positioning or transporting it.
- If the appliance is to be relocated, follow the instructions below:
  - switch the appliance off;
  - disconnect the plug from the socket;
  - take out contents of the appliance;
  - tape firmly all loose elements in the internal chamber and tape the door;
  - the appliance may only be transported in vertical position.
- To ensure good air circulation and easy access to all parts of the appliance and space required for appliance operation, keep at least 5 cm clearance on the sides and at the back, and 30 cm on top from walls, furniture and other objects.
- Lock the casters with the parking brake when the appliance is set in a suitable location.

### **IMPORTANT!**

**The appliance is not suitable for built-in installation.**

### Power supply connection

- Verify if technical data of the appliance (see rating plate) correspond with the local electric power grid specification.
- Connect the appliance to a single, properly grounded mains socket with protective contact. Do not connect the appliance to a multi-socket.
- The power cord should be laid in a way preventing anyone from threading on it or tripping against it.
  
- Before the first use, the appliance should be left standing for at least 4 hours before it is connected to power supply.
- After power supply failure or the plug being pulled out from the appliance socket wait at least 2-3 minutes before reconnecting the appliance to the mains supply.

## 5.2 Operation

### Tips for the user

EN

- Shelves may be positioned at various heights. Arrange them adequately to the size of beverage/containers with food product, so that the inner space of the appliance is used optimally.
- Beverages and food products in containers should be arranged on the shelves so that proper distances between them allow for sufficient air circulation inside the appliance. Insufficient distances hinder the cooling effect.
- To limit loss of cold air minimize the opening time of door during operation. Also, do not open the door too frequently.
- If possible, in the event of a sudden power failure, avoid opening doors in order to avoid loss of cool air.
- The power supply to the refrigerator should not be interrupted for more than 10 minutes.
- If the appliance is switched off for a longer period of time, the door of the refrigerator should remain open.

### Storing food in the refrigerator

For your appliance to operate the best way, follow the indications below:

- When inserting the food products, pay attention to free air circulation inside the appliance.
- Food products or beverages should first be cooled to the suitable storage temperature.
- If the food products are not cooled sufficiently prior to storing, the operating efficiency of the appliance deteriorates and it may negatively influence the cooled food products. Thus, avoid storing food products in rooms that are not cool, for the cold might be lost when they are inserted in the refrigerator.
- The food products stored in the refrigerator should be packaged or covered.
- The food products with specific aromas, e.g.: fresh fish, foie gras, cheese, should be stored in properly closed containers.
- Do not store bananas in the refrigerator because they are sensitive to low temperatures.




### Preparation of the appliance

1. Before the first use, clean the appliance and accessories thoroughly, following indications in section 6 '**Cleaning and maintenance**'.
2. To end with, dry the appliance and accessories thoroughly.
3. Introduce the shelves into the appliance at the selected height.
4. Close the appliance door.
5. Plug the device into a suitable single socket.
6. Set the ON/OFF switch to 'I' position to switch the appliance on.  
The green power indicator light in the ON/OFF switch lights up.

7. Only place the required food in the appliance when the set operating temperature has been reached and appears on the digital display.






### Control elements and displayed messages



Button	Functions
SET	Showing the set value, selection of parameters in the programming mode or confirmation of the process
	Manual starting of the defrosting
	Selection of the parameter code in the programming mode, increase of the displayed value
 AUX	Selection of the parameter code in the programming mode, decrease of the displayed value

### LED indicators

The LED indicators in the digital display show the status of the active function:



LED	Status of the active function	Meaning
	illuminates	activated compressor
	flashes	in delay
	illuminates	defrosting in progress
	flashes	defrosting delay
	illuminates	fan activated
	flashes	delay after defrosting
	illuminates	degrees Celsius temperature unit indicator
	flashes	in the programming mode
	illuminates	degrees Fahrenheit temperature unit indicator
	flashes	in the programming mode



### Displaying the set value

1. Press the **SET** button shortly, to display the set value.
2. Press the **SET** button again or wait 5 seconds, to return to the previous message.

### Changing the set value (i.e. the required temperature)


1. Press the **SET** button and hold it pressed for at least 3 seconds.


The set value is displayed and the  or  LED indicator flashes on the digital display.

2. The value may be increased or decreased with  or  button until the digital display shows the required value.
3. Confirm the new value with the **SET** button or wait 10 seconds — then, the value will be stored automatically.

### Automatic defrosting

The appliance defrosts automatically 4 times over 24-hour period. The timer initiates with the first activation.


1. If there is a need for the change of automatic defrosting phases, press the  button and hold it for more than 2 seconds.

The digital display shows the  symbol.


The defrosting cycle is immediately initiated; in such a case, the subsequent defrosting cycle is executed after 6 hours.

### Manual defrosting

Additionally, aside of the automatic defrosting, manual defrosting may be activated any time.

1. Press the  button and hold it pressed for more than 2 seconds.

The manual defrosting is initiated.

The digital display shows the  symbol.

EN

#### **NOTE!**


**Water generated during defrosting evaporates automatically.**

#### **NOTE!**

**Subsequent settings or parameter changes should be introduced by service personnel only.**


### Button combinations

Concurrent pressing of two buttons enable activation/deactivation of a number of functions.




#### Button locking or unlocking:

- to lock, press both buttons concurrently and hold them pressed for more than 3 seconds, until the digital display shows the "OFF" message
- to unlock, press these buttons and hold them pressed for more than 3 seconds, until the digital display shows the "ON" message



#### Moving to the programming mode:

- press both buttons concurrently and hold them pressed for more than 3 seconds; when the °C or °F LED indicators flash, subsequent settings may be introduced



#### Return to the previously displayed message:

- press these buttons, to leave the programming mode and return to the previously displayed message (value of temperature inside the appliance)

### Digital temperature control

#### ATTENTION!

During operation, the digital control unit (temperature controller) cools the cooling chamber until the currently set operating temperature is reached. When the set operating temperature is reached, the digital temperature controller disconnects the refrigerating unit until the temperature recorded by the sensor rises by approx. 4-5°C. The digital temperature controller then turns the refrigerating unit back on to lower the temperature again to the set operating temperature.

This 'on/off mechanism' is normal and corresponds to the operation of all refrigeration equipment such as refrigerated counters, refrigerators, refrigerated display cases, etc.

Please take into account that the value displayed on the digital display corresponds to the air temperature (which fluctuates significantly when the appliance door is opened) and not to the core temperature of the stored product, which is more stable in temperature over time.

The digital display may show the following error messages

Error code	Description	Effect	Solution
P1	Damaged thermostat sensor	Temperature is not correctly controlled	Contact the supplier
P2	Damaged evaporator sensor	The duration of each defrosting process is exactly 20 minutes	Contact the supplier

If one or several error codes are displayed, proceed as follows:

- note the error code,
- switch the appliance off,
- turn the appliance on again after 3-4 minutes
- if one or several error codes are displayed again, contact the supplier with error codes to request service.

EN

### Switching the appliance off

1. If the appliance is no longer in use, set the ON/OFF switch to the 'O' (OFF) position.
2. Disconnect the appliance from the mains socket (pull the plug out).

## 6 Cleaning and Maintenance

### 6.1 Safety Instructions for Cleaning

- Before cleaning, disconnect the appliance from the power supply.
- Leave the appliance to cool down completely.
- Make sure water does not enter the appliance. Do not immerse the appliance in water or other liquids during cleaning. Do not clean the appliance with a pressurized water jet.
- Do not use any sharp or pointed, nor metal implements (knife, fork, etc.). Sharp or pointed implements may damage the appliance, and when in contact with live parts, they may cause electric shock.
- For cleaning, do not use any scouring agents that contain solvents nor corrosive cleaning agents. They may damage the surface.



### 6.2 Cleaning

1. Wash the appliance regularly.
2. Remove all objects from the appliance and store them temporarily in a cool room.
3. Remove all shelves from the appliance.
4. Clean the shelves with mild washing agent and soft cloth or sponge in warm water.
5. Rinse the shelves with clean water and dry thoroughly with soft cloth.

**Note: Never use hot water to clean the appliance.**

6. Wipe the internal and external surfaces of the appliance with a soft, damp cloth. Use mild cleaning agent if required.
7. Wipe the washed surfaces with a cloth moistened in clean water.
8. Finally, dry thoroughly all washed surfaces.
9. The interior of the appliance should be wiped regularly (once a month) with a food-grade disinfectant.
10. Clean the door and the door seal/s of the appliance with a soft, damp cloth. Then dry them thoroughly.
11. After cleaning, leave the door open for the appliance to dry completely.
12. If the appliance is not to be used for a longer period of time, clean it according to the instructions above. Leave the appliance open to prevent generation of unpleasant odours inside.

### 6.3 Maintenance

Regular maintenance is essential to maintain the best performance and ensure the safe operation of the appliance.

The following maintenance tasks can be done by the user:

- inspection of the general condition of the appliance;
- regular inspection of the power cord;
- daily visual inspection of safety components (e.g. correct operation of safety microswitches, if any);
- checking the integrity of safety labels and symbols, at least once a week. If they are illegible or have become detached, obtain a copy of the labels and symbols from the sales agent or a qualified technical service representative.

The following operations should be regularly performed by a qualified specialist:

- cleaning the condenser with suitable tools (vacuum cleaner or soft brush);
- checking of electrical connections;
- checking of the thermostat and the sensor;
- checking of door and door seal.

## 7 Possible Malfunctions

The table below contains descriptions of possible causes and solutions to malfunctions or errors during operation of the appliance. When malfunction cannot be removed, contact the technical service.

In such a case, provide article number, model name and serial number. These data may be found in the rating plate.

Error	Possible cause	Solution
No cooling	Plug not connected properly	Remove the plug and insert it properly into a socket
	Electric power supply safety fuse damaged	Check the fuse, connect the appliance to another socket and check it
	Compressor does not start	Contact the service company
	No power supply	Check the electric power supply
	Damaged power supply plug	Contact the service company

## Possible Malfunctions

Error	Possible cause	Solution
Insufficient cooling efficiency	Direct sunlight or heat sources in immediate vicinity	Move the appliance away from heat sources
	Digital temperature controller in defrosting phase	Wait until the digital temperature controller completes defrosting process (max. 20 minutes)
	The appliance door is not properly closed or was kept open for too long	Properly close the door and do not leave it open for too long
	Damaged or deformed door seal	Contact the service company
	Icy evaporator	Check if the appliance door and seal close properly Make sure that no hot products are stored inside Contact the service company
	Condenser filter soiled	Clean the condenser filter (chapter 6 ' <b>Cleaning and Maintenance</b> ')
Strange or loud noises	Appliance is not placed on an even surface	Place the appliance on an even surface
	The feet are not properly adjusted	Adjust the feet to make sure that the appliance is standing stable on the floor
	The appliance touches walls or other objects	Ensure sufficient clearance from walls or other objects
Compressor does not stop automatically	Too many products inside the appliance	Remove redundant products
	The appliance door was open for too long or is not closed	Open the appliance door only for the required time and always check if it has been properly closed

The following phenomena are normal and do not indicate malfunction:

- the temperature displayed on the digital display, which rises by 4-5°C above the setpoint at regular intervals and then falls again: this is part of the normal cooling cycle of any type of refrigeration appliance (detailed explanation in the chapter 5 'Operation' / 'Digital temperature control');
- the sound of water flowing. This sound is present under regular operation. It is the coolant that expands in the cooling circuit:
- at high humidity, condensation on the inner door panels of the appliance is normal. Dry the condensate with a soft cloth.

## 8 Disposal

### Electrical Appliance



Electric appliances are marked with this symbol. Electrical appliances must be disposed of and recycled in a correct and environmentally friendly manner. You must not dispose of electric appliances with household waste. Disconnect the appliance from the power supply and remove power cord from the appliance.

Electrical appliances should be returned to designated collection points.

### Coolant

The propellant used in the appliance is flammable. It should be utilised pursuant to national regulations in force.